



DPF 1000 USER GUIDE

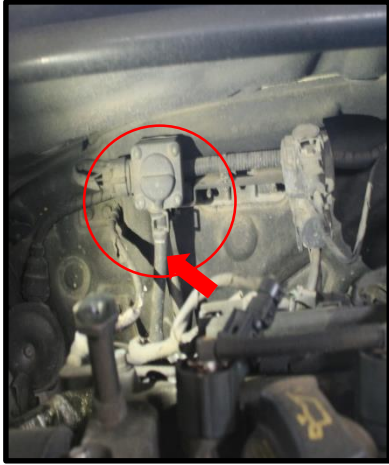

1. Separate a DPF front-end hose from a differential pressure sensor of vehicle. (Please pay attention to the differential sensor when separating the hose. Otherwise, plastic may be cracked.)

* Detach a hose from the bottom of DPF differential sensor if possible and connect a low pressure hose provided to ensure easy operation

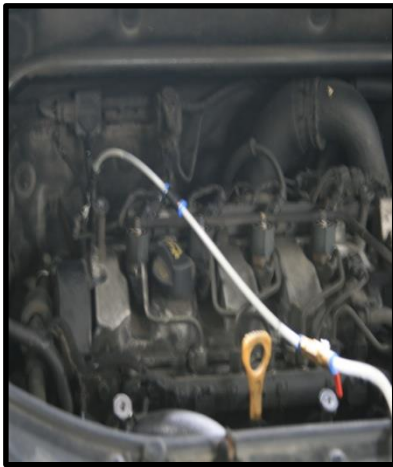

2. Connect a DPF injection hose of the equipment with the hose detached from the differential sensor.



3. Inject DPF Cleaner STEP I (The primary chemical) into the equipment and complete injection of the primary chemical three times by repeating the step of **injecting 1/3** → **vehicle ON/OFF** with the vehicle not ignited.

* **START/STOP** the vehicle so that the primary chemical of DPF can be injected into the back-end of DPF.



4. Inject DPF Cleaner STEP II (the secondary chemical) into the equipment.

Start the vehicle and accelerate to more than **2000RPM**.

Perform DPF cleaning with the secondary chemical while adjusting the valve.



※ Make sure to prepare a tool to get pollutants because bubble continues to generate to an exhaust port.