

# MaxiSysCV\_Chevrolet\_Truck\_V1.10 Function List (Note:For reference only)

**NOTES:**

● This function is supported. ※ This function may be supported which depends on the actual condition of the vehicle.

○ This function is not supported. ▲ This function is the new feature in this version.

As for special function please refer to the special function table.

Year	Vehicle Type	Make	Vehicle	System	Ecu Info.	Read Codes	Erase Codes	Live Data	Active Test	Special Function
(9) 2009	Medium Duty Truck	Chevrolet	Chevrolet	Engine control module	●	●	●	●	●	S001 S002 S004 S005 S008 S009 S010 S012 S013 S014 S015
(9) 2009	Medium Duty Truck	Chevrolet	Chevrolet	Transmission control module	●	●	●	●	●	S017
(9) 2009	Medium Duty Truck	Chevrolet	Chevrolet	Glow plug control module	●	●	●	●	●	S132
(9) 2009	Medium Duty Truck	Chevrolet	Chevrolet	Transfer case control module	○	●	●	●	●	
(9) 2009	Medium Duty Truck	Chevrolet	Chevrolet	Powertrain control module	●	●	●	●	●	S004 S005 S008 S009 S012 S250 S015 S145 S222
(9) 2009	Medium Duty Truck	Chevrolet	Chevrolet	Electronic brake control module	○	○	○	●	○	
(9) 2009	Medium Duty Truck	Chevrolet	Chevrolet	Radio	●	●	●	●	○	
(9) 2009	Medium Duty Truck	Chevrolet	Chevrolet	Supplemental inflatable restraint	●	●	●	●	○	S026 S290
(9) 2009	Medium Duty Truck	Chevrolet	Chevrolet	Chime	●	●	●	●	●	
(9) 2009	Medium Duty Truck	Chevrolet	Chevrolet	Instrument panel cluster	●	●	●	●	●	S291
(9) 2009	Medium Duty Truck	Chevrolet	Chevrolet	Serial data gateway (if equipped)	●	●	●	○	○	
(9) 2009	Medium Duty Truck	Chevrolet	Chevrolet	Powertrain interface module	●	●	●	●	○	
(8) 2008	Medium Duty Truck	Chevrolet Truck	Chevrolet Truck	Transmission control module	○	●	●	●	●	S305
(8) 2008	Medium Duty Truck	Chevrolet Truck	Chevrolet Truck	Engine control module	●	●	●	●	●	S087 S001 S004 S306
(8) 2008	Medium Duty Truck	Chevrolet Truck	Chevrolet Truck	Transfer case control module	○	●	●	●	●	
(8) 2008	Medium Duty Truck	Chevrolet Truck	Chevrolet Truck	Glow plug control module	●	●	●	●	●	S132
(8) 2008	Medium Duty Truck	Chevrolet Truck	Chevrolet Truck	Powertrain control module	●	●	●	●	●	S004 S005 S008 S009 S012 S250 S015 S145 S222
(8) 2008	Medium Duty Truck	Chevrolet Truck	Chevrolet Truck	Electronic brake control module	○	○	○	●	○	
(8) 2008	Medium Duty Truck	Chevrolet Truck	Chevrolet Truck	Supplemental inflatable restraint	●	●	●	●	○	S026 S290
(8) 2008	Medium Duty Truck	Chevrolet Truck	Chevrolet Truck	Chime	●	●	●	●	●	
(8) 2008	Medium Duty Truck	Chevrolet Truck	Chevrolet Truck	Radio	●	●	●	●	○	
(8) 2008	Medium Duty Truck	Chevrolet Truck	Chevrolet Truck	Instrument panel cluster	●	●	●	●	●	S291
(8) 2008	Medium Duty Truck	Chevrolet Truck	Chevrolet Truck	Serial data gateway (if equipped)	●	●	●	○	○	
(8) 2008	Medium Duty Truck	Chevrolet Truck	Chevrolet Truck	Powertrain interface module	●	●	●	●	○	
(7) 2007	Medium Duty Truck	(C) Chevrolet Truck	(C) Chevrolet Truck	Engine control module	●	●	●	●	●	S087 S001 S004 S306
(7) 2007	Medium Duty Truck	(C) Chevrolet Truck	(C) Chevrolet Truck	Transmission control module	○	●	●	●	●	S305
(7) 2007	Medium Duty Truck	(C) Chevrolet Truck	(C) Chevrolet Truck	Glow plug control module	●	●	●	●	●	S132
(7) 2007	Medium Duty Truck	(C) Chevrolet Truck	(C) Chevrolet Truck	Transfer case control module	○	●	●	●	●	
(7) 2007	Medium Duty Truck	(C) Chevrolet Truck	(C) Chevrolet Truck	Powertrain control module	●	●	●	●	●	S004 S005 S008 S009 S012 S250 S015 S145 S222
(7) 2007	Medium Duty Truck	(C) Chevrolet Truck	(C) Chevrolet Truck	Electronic brake control module	○	○	○	●	○	
(7) 2007	Medium Duty Truck	(C) Chevrolet Truck	(C) Chevrolet Truck	Supplemental inflatable restraint	●	●	●	●	○	S026 S290
(7) 2007	Medium Duty Truck	(C) Chevrolet Truck	(C) Chevrolet Truck	Chime	●	●	●	●	●	
(7) 2007	Medium Duty Truck	(C) Chevrolet Truck	(C) Chevrolet Truck	Radio	●	●	●	●	○	
(7) 2007	Medium Duty Truck	(C) Chevrolet Truck	(C) Chevrolet Truck	Instrument panel cluster	●	●	●	●	●	S291
(7) 2007	Medium Duty Truck	(C) Chevrolet Truck	(C) Chevrolet Truck	Serial data gateway (if equipped)	●	●	●	○	○	
(6) 2006	Medium Duty Truck	(C) Chevrolet Truck	(C) Chevrolet Truck	Powertrain	●	●	●	●	●	S004 S347 S121 S308 S145 S307 S349

Year	Vehicle Type	Make	Vehicle	System	Ecu Info.	Read Codes	Erase Codes	Live Data	Active Test	Special Function
(6) 2006	Medium Duty Truck	(C) Chevrolet Truck	(C) Chevrolet Truck	Chassis	○	○	○	●	○	
(6) 2006	Medium Duty Truck	(C) Chevrolet Truck	(C) Chevrolet Truck	Hydraulic 4WAL 4 sensor	●	●	●	●	●	S289
(6) 2006	Medium Duty Truck	(C) Chevrolet Truck	(C) Chevrolet Truck	Chime	●	●	●	●	●	
(6) 2006	Medium Duty Truck	(C) Chevrolet Truck	(C) Chevrolet Truck	Radio	●	●	●	●	○	
(6) 2006	Medium Duty Truck	(C) Chevrolet Truck	(C) Chevrolet Truck	Instrument panel cluster	●	●	●	●	●	S291
(6) 2006	Medium Duty Truck	(C) Chevrolet Truck	(C) Chevrolet Truck	Serial data gateway (if equipped)	●	●	●	○	○	
(6) 2006	Medium Duty Truck	(C) Chevrolet Truck	(C) Chevrolet Truck	Supplemental inflatable restraint	●	●	●	●	○	S026 S290
(5) 2005	Medium Duty Truck	(C) Chevrolet Truck	(C) Chevrolet Truck	Powertrain	●	●	●	●	●	S004 S121 S308 S145 S307 S348 S349
(5) 2005	Medium Duty Truck	(C) Chevrolet Truck	(C) Chevrolet Truck	Chassis	○	○	○	●	○	
(5) 2005	Medium Duty Truck	(C) Chevrolet Truck	(C) Chevrolet Truck	Hydraulic 4WAL 4 sensor	●	●	●	●	●	S289
(5) 2005	Medium Duty Truck	(C) Chevrolet Truck	(C) Chevrolet Truck	Chime	●	●	●	●	●	
(5) 2005	Medium Duty Truck	(C) Chevrolet Truck	(C) Chevrolet Truck	Radio	●	●	●	●	○	
(5) 2005	Medium Duty Truck	(C) Chevrolet Truck	(C) Chevrolet Truck	Instrument panel cluster	●	●	●	●	●	S291
(5) 2005	Medium Duty Truck	(C) Chevrolet Truck	(C) Chevrolet Truck	Serial data gateway (if equipped)	●	●	●	○	○	
(5) 2005	Medium Duty Truck	(C) Chevrolet Truck	(C) Chevrolet Truck	Supplemental inflatable restraint	●	●	●	●	○	S026 S290
(4) 2004	Medium Duty Truck	(C) Chevrolet Truck	(C) Chevrolet Truck	Powertrain	●	●	●	●	○	
(4) 2004	Medium Duty Truck	(C) Chevrolet Truck	(C) Chevrolet Truck	Chassis	○	○	○	●	○	
(4) 2004	Medium Duty Truck	(C) Chevrolet Truck	(C) Chevrolet Truck	Hydraulic 4WAL 4 sensor	●	●	●	●	●	S289
(4) 2004	Medium Duty Truck	(C) Chevrolet Truck	(C) Chevrolet Truck	Radio	●	●	●	●	○	
(4) 2004	Medium Duty Truck	(C) Chevrolet Truck	(C) Chevrolet Truck	Instrument panel cluster	●	●	●	●	●	S291
(4) 2004	Medium Duty Truck	(C) Chevrolet Truck	(C) Chevrolet Truck	Chime	●	●	●	●	●	
(4) 2004	Medium Duty Truck	(C) Chevrolet Truck	(C) Chevrolet Truck	Serial data gateway (if equipped)	●	●	●	○	○	
(4) 2004	Medium Duty Truck	(C) Chevrolet Truck	(C) Chevrolet Truck	Supplemental inflatable restraint	●	●	●	●	○	S026 S290

## Special Function

Index	Special Function Name	Index	Special Function Name
S001	Engine speed control	S002	Throttle position
S003	Throttle sweep	S004	Cylinder power balance
S005	Fuel injector balance	S006	Fuel pressure control
S007	Fuel pressure regulator	S008	Fuel trim enable
S009	Fuel trim reset	S010	EVAP service bay test
S011	Brake pedal position learn	S012	Crankshaft pos. variation learn
S013	H02S heater learn	S014	Idle learn reset
S015	Oil life reset	S016	Fuel pump trim reset
S017	Reset transmission adapts.	S018	Reset transmission oil life
S019	Reset clutch overtemp counter	S020	Fuel composition reset
S021	Clutch pedal position learn	S022	PRL update
S023	Set language	S024	Stolen vehicle slowdown clear
S025	Passenger presence sensor learn	S026	Setup new SDM
S027	Setup SDM primary key in BCM	S028	Inclination sensor enable
S029	Generator regulator setpoint	S030	BPP sensor calibration
S031	Recirculation door	S032	Afterblow option
S033	Data recorder	S034	Setup new PIDM
S035	TV region lockout	S036	TV region select
S037	Automated bleed	S038	Brake booster vacuum relay
S039	Steering angle sensor centering	S040	Yaw rate sensor recalibration
S041	Parking brake cable replacement	S042	Parking brake calibration
S043	Reset diagnostic counter	S044	Instant OAT update
S045	Actuator recalibration	S046	Power window motor programming
S047	Radio RPO selection	S048	Key fob button test
S049	Copy and paste TPM information	S050	Invalidate all fobs
S051	Next available slot	S052	Program key fob 1
S053	Program key fob 2	S054	Program key fob 3
S055	Program key fob 4	S056	Tire type/pressure selection
S057	TPM learn mode	S058	Brake press. sen. calibration
S059	Cylinder deactivation system	S060	Cylinder 1
S061	Cylinder 4	S062	Cylinder 6
S063	Cylinder 7	S064	Clear manufacturer enable counter
S065	Assist step learn procedure	S066	DMCM coolant pump relay
S067	Acceleration sensor reset	S068	BMC prim. piston pos. relearn
S069	EBCM relearn	S070	Steering pos./torque sensor cal.
S071	Range actuator learn	S072	ISC actuator
S073	CO adjust (leaded fuel only)	S074	Reset ECM
S075	Program key fobs	S076	IAC motor position
S077	IAC reset	S078	Fuel injector test 1
S079	Fuel injector test 2	S080	Fuel injector test 3
S081	Fuel injector test 4	S082	Reset TPS learn value
S083	Throttle blade control	S084	ISC system
S085	Learn sensor location	S086	Learn sen loc with tire press tool
S087	DPF service regeneration	S088	DPF reset replace ECM
S089	DPF reset replace press. sensor	S090	DPF reset replace DPF
S091	DPF reset replace injectors	S092	Reset injection value - cyl. 1
S093	Reset injection value - cyl. 2	S094	Reset injection value - cyl. 3
S095	Reset injection value - cyl. 4	S096	Reset injection value - all cyl.
S097	Reset injection value - ECM	S098	Idle speed control
S099	Hourmeter reset	S100	Re-zero passenger presence system
S101	Steering position sensor centering	S102	Service cleaning procedure
S103	Fast learn adapt. process	S104	Recalibrate all motors
S105	Preload passenger presence system	S106	Steering pos. sensor calibration
S107	Special functions	S108	Setup SDM part number in BCM
S109	BCM setup	S110	DRR setup
S111	Setup new RCDLR	S112	Column calibration

Index	Special Function Name	Index	Special Function Name
S113	Setup new HVAC	S114	Radio setup
S115	VIN relearn	S116	Setup new ROS
S117	Fuel pressure regulator 1	S118	Fuel pressure regulator 2
S119	Pilot injector balance procedure	S120	Ambient air temperature reset
S121	Capture & restore data	S122	Catalyst 1 reset
S123	CKP reluctor wheel learn	S124	DPF/ catalyst 2 reset
S125	DPF pressure sensor reset	S126	Engine serial number
S127	Fuel filter life reset	S128	Reset injection value - cyl. 5
S129	Reset injection value - cyl. 6	S130	Reset injection value - cyl. 7
S131	Reset injection value - cyl. 8	S132	Injector flow rate programming
S133	Nox catalyst reset	S134	Nox cat. reductant loading reset
S135	Nox sensor 1 reset	S136	Nox sensor 2 reset
S137	Reductant fluid tank level reset	S138	Reductant injector reset
S139	Reductant system data reset	S140	Reductant system reset
S141	TC learn	S142	AIR service bay test
S143	Recirc. LED	S144	Fuel transfer pump
S145	PTO options	S146	ECM PTO options
S147	Personalization option	S148	Clear 1-2 TAP
S149	Clear 2-1 TAP	S150	Clear 2-3 TAP
S151	Clear 3-2 TAP	S152	Clear 3-4 TAP
S153	Clear 4-3 TAP	S154	Clear 4-5 TAP
S155	Clear 5-4 TAP	S156	Clear 5-6 TAP
S157	Clear 6-5 TAP	S158	Clear all TAP cells
S159	Clear all garage shift TAP	S160	Preset all TAP cells
S161	ABS check	S162	Brake valve cycling
S163	Module setup	S164	Digital radio receiver
S165	Setup SDM serial number in BCM	S166	Reset idle learn
S167	Middle east speed bias (UC2)	S168	BCM copy and flash
S169	Brazil units (CV2)	S170	Steering tuning selection
S171	Torque sensor calibration	S172	Calibrate module
S173	Factory reset	S174	Depressurize system
S175	Pressurize system	S176	Suspension position calibration
S177	Center I/P speaker	S178	Left front speaker
S179	Left rear speaker	S180	Right front speaker
S181	Right rear speaker	S182	Subwoofer
S183	Left front door speaker	S184	Left front tweeter
S185	Left rear door speaker	S186	Right front door speaker
S187	Right front tweeter	S188	Right rear door speaker
S189	Program VIN	S190	Tuner calibration
S191	Navigation option	S192	Transmission type
S193	Active antenna	S194	Key fob battery test
S195	Disable/enable secure car	S196	Setup SDM part number in IPM
S197	Clear column softstops	S198	Disable dtc(s)
S199	Left front seat speakers	S200	Left front woofer
S201	Left rear surround speaker	S202	Rear center surround speaker
S203	Rear subwoofer	S204	Right front seat speakers
S205	Right front woofer	S206	Right rear surround speaker
S207	Rear console surround speaker	S208	Parental password
S209	Audio update initialize	S210	Bluetooth
S211	Nav. update initialize	S212	IPC setup
S213	Reset fuel trim	S214	Reset learned values
S215	System configuration	S216	Immobilizer key programming
S217	TAC motor command	S218	Fuel injector test 5
S219	Fuel injector test 6	S220	Reset EGR adapts.
S221	TAC system	S222	Speed cal. reprogramming
S223	Learn IMT valve adapts.	S224	FDIM setup
S225	Parking brake shoe service reset	S226	Parking brake actuator DTC reset
S227	PSCM calibration procedure	S228	Actuator removal procedure
S229	New actuator setup procedure	S230	VSCM power steering reset
S231	Program phone number	S232	Balance rate monitor

Index	Special Function Name	Index	Special Function Name
S233	Auto. start/stop command	S234	Aux. trans. pump
S235	Aux. trans. pump relay	S236	Batt. end of life est. reset
S237	Brake press. sensor 2 learn	S238	Charge/assist gauge
S239	Contactora control	S240	Engine clnt. pump relay
S241	Hybrid batt. charge hrs.	S242	Hybrid batt. discharge amp hrs.
S243	Hybrid batt. SOC low	S244	Hybrid batt. SOC high
S245	Hybrid disable	S246	SGCM coolant pump relay
S247	Starter enable	S248	APM set point control
S249	APM mode high to low	S250	Engine shutdown
S251	Fuel injector modification	S252	Injector 1
S253	Injector 2	S254	Injector 3
S255	Injector 4	S256	Check mode
S257	Learn tire pressure sensors	S258	Yaw/lateral sensor relearn
S259	Country code	S260	Link/unlink modules
S261	Reset	S262	EVAP test
S263	APP learn	S264	Chime level
S265	Loud chime volume	S266	Loud amp chime volume
S267	Normal chime volume	S268	Normal amp chime volume
S269	AM pass A stopping	S270	FM pass A stopping
S271	Auto. calibration	S272	DSCC setup (japan only)
S273	VCIM setup	S274	P/N position learn procedure
S275	Program all key fobs	S276	Program individual key fob
S277	TPM option enable	S278	Tire size calibration
S279	Optional modules	S280	Region code options
S281	U85	S282	UZ6
S283	Zero point calibration	S284	Security telltale
S285	Misfire graphic	S286	Hill hold indicator
S287	PSCM center procedure	S288	Exhaust brake control
S289	New tire/wheel base/booster info.	S290	Setup SDM part number in IPC
S291	Setup SDM serial number in IPC	S292	ABS relay
S293	Exhaust brake cut	S294	Unlock radio
S295	Acquisition setting	S296	Step 1
S297	Step 2	S298	Active vacuum booster
S299	Prog ISU with RKE only (w/o immo)	S300	Reduction of pressure drive
S301	Cylinder 3	S302	Cylinder 5
S303	North america	S304	Middle east
S305	Trans. oil overtemp lamp	S306	Supply pump learn
S307	Injector flow rates	S308	Vehicle speed limit
S309	Theftlock LED	S310	New VIN
S311	Option configuration	S312	Point of sale
S313	Intrusion sensor step 1	S314	Inclination sensor step 1
S315	Alarm siren module step 1	S316	Tap shift
S317	Miscellaneous options 2	S318	Variable effort steering
S319	Right hand drive	S320	Universal theft deterrent
S321	Headlamp type option	S322	Intrusion sensor step 2
S323	Inclination sensor step 2	S324	Alarm siren module step 2
S325	Twilight sentinel	S326	Front fog lamp type
S327	DRL option	S328	Perimeter lighting
S329	Tire rotation procedure	S330	Automated test
S331	Afterblow	S332	Program digital home SID - NID
S333	Pre-charge bleed	S334	Function test
S335	Elevated idle setting	S336	Recalibration
S337	Buckle up reminder	S338	Spare tire monitoring disable
S339	TPM learn sensor location	S340	Add/replace key fobs
S341	Clear memory and program all fobs	S342	Injector disable
S343	Economy mode indicator	S344	Hood ajar indicator
S345	Fuel injector flow test	S346	Calibrate trim height
S347	Pilot injector stop	S348	Cruise control options
S349	Exhaust brake options	S350	Gear down protection options
S351	Oil capacity options	S352	IPC brake indicator reset

Index	Special Function Name	Index	Special Function Name
S353	Setup new VTD module	S354	Setup HVAC cal. LX9 3.5L
S355	Setup HVAC cal. LY7 3.6L	S356	Vehicle type
S357	Sensor learn mode enable	S358	LONG WAVE
S359	Traffic seek	S360	Idle spark
S361	Navigation voice	S362	Nav. radio theft
S363	PC solenoid 5	S364	Column lock
S365	Column unlock	S366	DPM setup
S367	Reset battery total ahrs.	S368	AFO signal enable
S369	Fuel gauge	S370	High pressure lockoff
S371	Low pressure lockoff	S372	Mileage log reset
S373	Running on gasoline	S374	CNG level shown
S375	Gasoline level shown	S376	CNG to gasoline
S377	Gasoline to CNG	S378	RPM control
S379	CO adjust value	S380	Fuel pump
S381	Throttle actuator control	S382	Theft deterrent module
S383	Preferred system setting	S384	Trans. adaptives reset
S385	EVAP purge solenoid (PWM)	S386	EVAP vent solenoid
S387	EVAP purge/seal	S388	Trans. oil life reset
S389	TAC module power inhibit	S390	Oil life monitor
S391	Time set	S392	Engine shut off
S393	TDC learn	S394	Axle ratio
S395	Cylinder power balance <1400 RPM	S396	Cylinder power balance >1500 RPM
S397	Malfunction indicator lamp	S398	EGR valve relay
S399	Fuel cut solenoid	S400	2nd fuel cut solenoid
S401	LPG gas relay	S402	LPG liquid relay
S403	BCM reprogramming	S404	Miscellaneous options 1
S405	Automatic/manual HVAC options	S406	Magna steer option
S407	DIC option	S408	Setup SDM serial number in DIM
S409	English/metric status	S410	Setup SDM part number in DIM
S411	Language	S412	Export ID
S413	Temperature offset	S414	Tire pressure reset
S415	Load management option	S416	Disable belt tower dtc's
S417	Navigation radio present	S418	Japan key fob option
S419	DTC mask	S420	Military or standard time
S421	Learn lateral accelerometer	S422	Dimming delay
S423	AM distant	S424	AM local
S425	FM distant	S426	FM local
S427	Tire rotation/sensor replacement	S428	Setup RFA
S429	Setup IPC	S430	Folding top learn procedure
S431	Key fob personalization	S432	SCLM setup
S433	TIM reset	S434	Idle air control
S435	Synchronize IPC and SIR	S436	Relearn window position
S437	CD icon	S438	Cassette icon
S439	Accessory inflator	S440	New BCM setup
S441	Throttle position valve	S442	EVAP system seal
S443	Setup new onstar	S444	Disable adjustable pedals dtcs
S445	Electronic suspension control	S446	Adjustable pedal calibration
S447	Export option	S448	LH drvr. personalization
S449	RH drvr. personalization	S450	Tire pressure warning
S451	Tire pressure monitor	S452	Fuel mode indicator lamp
S453	IPC recalibration	S454	Tire pressure monitor DTC
S455	BCM RPO reprogram	S456	Twilight sentinel reprogram
S457	Seed and key relearn	S458	Air fuel ratio
S459	Key fob function test	S460	Secondary ckt. evacuation
S461	Update HVAC calcs. in DIM	S462	Valet lockout
S463	EVAP system perf.	S464	AIR pump
S465	Compact disc	S466	Cellular telephone
S467	A/C compressor calibration	S468	Option A
S469	Option B	S470	Option C
S471	Option D	S472	Option E

Index	Special Function Name	Index	Special Function Name
S473	A/C relay	S474	EGR solenoid
S475	Loop status	S476	AIR pump relay
S477	Counter reset	S478	EVAP purge solenoid
S479	Forced fuel switch over	S480	Bleed MPA
S481	Fuel gauge relay	S482	Wait to drive lamp
S483	Fan relay	S484	Cruise enable
S485	GEN 1-terminal	S486	Mixture control valve
S487	Spark modifier reset	S488	EVAP vent test
S489	AIR pump sol./relay test	S490	AIR pump service bay test
S491	Aux. cooling fan	S492	AIR test
S493	Option no. 0	S494	Setup new BCM
S495	HVAC recal. download	S496	Dolby N. R.
S497	VIN information	S498	NGO enable
S499	Fuel economy test	S500	Option no. 1
S501	Fob 1 option 1	S502	Fob 1 option 2
S503	Fob 1 option 3	S504	Fob 2 option 1
S505	Fob 2 option 2	S506	Fob 2 option 3
S507	Option no. 2	S508	Service spark retard reset
S509	Steady state	S510	Shift
S511	Odometer reset	S512	Gauge setup
S513	Synchronize TTM and MSM	S514	Remote keyless entry
S515	IAC circuit test	S516	Post crash unlock option
S517	Ecm/immobilizer relearn	S518	Clear cold start counter
S519	IAC calibration	S520	Program both key fobs
S521	Reset EGR ALM cells	S522	Learn TAP
T001	Clutch Pedal Position Learn	T002	Crankshaft Position Variation Learn
T003	H02S Learn	T004	Idle Learn
T005	Engine Oil Life Reset	T006	Fuel Trim Reset
T007	Transmission Adaptive Pressure Reset	T008	Steering Wheel Angle Sensor Learn
T009	Configure New Module	T010	Setup SDM Part Number in BCM
T011	Erase All Key Fobs	T012	Next Available Slot
T013	Key Fob 1	T014	Key Fob 2
T015	Key Fob 3	T016	Key Fob 4
T017	Tire Type/Pressure Selection	T018	Tire Pressure Sensors Learn
T019	Transmission Adaptive Values Learn	T020	Brake Pressure Sensor Calibration
T021	Yaw Rate Sensor Learn	T022	Yaw Rate Sensor Reset
T023	Power Steering Softstops Reset	T024	Power Steering Softstops Learn
T025	Steering Wheel Angle Sensor Centering	T026	Steering Wheel Angle Sensor Reset
T027	Brake Pedal Position Sensor Learn	T028	Clear Driver Window Learned Values
T029	Clear Passenger Window Learned Values	T030	Clear Left Rear Window Learned Values
T031	Clear Right Rear Window Learned Values	T032	Read LIN Bus Device ID Information
T033	Passenger Presence Sensor Learn	T034	CAN Bus Configuration Learn
T035	Remote Vehicle Speed Limiting Reset	T036	HVAC Actuators Learn
T037	HVAC Afterblow Configuration	T038	APP Learn
T039	Exhaust Gas Temperature Sensor Learn	T040	MAF Sensor Learn
T041	EGR Valve Learn	T042	Fuel Rail Pressure Sensor or Fuel Rail Learn
T043	Turbocharger Learn	T044	Glow Plug Control Module Reset
T045	Injector Flow Rate Programming	T046	Remote Vehicle Start Disable History Reset
T047	Headlamp Leveling Sensor Learn	T048	Clear Transmission Counters
T049	Clutch Position Learn	T050	Clutch Purge
T051	Depressurize System	T052	Transmission Learn
T053	Automatic Electric Door Locks (AU4) With Seat Belt Pretensioner (A70)	T054	Automatic Electric Door Locks (AU4) Without Seat Belt Pretensioner (-A70)
T055	Electric Door Locks (AU3) With Seat Belt Pretensioner (A70)	T056	Electric Door Locks (AU3) Without Seat Belt Pretensioner (-A70)
T057	Manual Door Locks (-AU3) (-AU4)	T058	Enable Deployment Loops
T059	Park Brake Calibration	T060	Battery Sensor Module Learn
T061	Adjustable Pedals Softstops Learn	T062	Clear Disable History
T063	Vehicle Direction Camera Learn	T064	H02S Heater Learn
T065	Clutch Control Module/Rear Drive System Matching Identification Setup	T066	Liftgate Maximum Open Position Learn

Index	Special Function Name	Index	Special Function Name
T067	Frontview Camera Learn	T068	Gear Selector -N- Position Learn
T069	Learned Values Reset	T070	Average Fuel Age Reset
T071	Electronic Brake Control Module Learn	T072	Hybrid/EV Battery Pack Coolant Control Solenoid Valve Learn
T073	Hybrid/EV Battery Pack Capacity Learn	T074	Passenger Compartment Heater Coolant Control Solenoid Valve Learn
T075	Fuel Economy Reset	T076	Hybrid/EV Battery Pack Data Reset
T077	Hybrid/EV Battery Pack Capacity Reset	T078	Fuel Composition Reset
T079	Code Index	T080	Module Setup
T081	Reset	T082	Copy Tire Pressure Monitoring Information
T083	Range Actuator Learn	T084	Idle Speed Adjustment
T085	Suspension Position Sensor Trim Height	T086	Crankshaft Position Reluctor Wheel Learn
T087	Flywheel Learn	T088	Intake Air Flow Valve Learn
T089	Rear Suspension Position Sensor Trim Height	T090	Front Suspension Position Sensor Trim Height
T091	Erase Valet Mode Code	T092	Control Module Reset
T093	Long Range Radar Sensor Module Learn	T094	Transfer Case Clutch Identifier
T095	Transfer Case Clutch Overtemperature Counter	T096	DPF Pressure Sensor Learn
T097	DPF Reset	T098	DPF Service Regeneration
T099	Catalyst Reset	T100	Idle Speed Control Reset
T101	ECM Reset	T102	CO Adjust
T103	AWD Disabled-by-Malfunction Counter Reset	T104	Rear Drive Clutch Service Calibration Setup
T105	Fuel Pressure Regulator Learn	T106	Fuel Pressure Regulator Fast Learn
T107	Intake Manifold Runner Control Valve Learn	T108	High Pressure Fuel Pump Learn
T109	Boost Pressure Sensor Learn	T110	DPF Pressure Sensor Reset
T111	Cylinder 1 Injector	T112	Cylinder 2 Injector
T113	Cylinder 3 Injector	T114	Cylinder 4 Injector
T115	Fuel Injector Learn	T116	Adaptive Pressure Control Learn
T117	Exhaust Flow Control Valve Learn	T118	Cylinder Deactivation Exhaust Flow Valve Learn
T119	Info Display/Infotainment Faceplate Reset	T120	Erase/Program All Key Fobs
T121	Key Fob 5	T122	Key Fob 6
T123	Key Fob 7	T124	Key Fob 8
T125	Distance Sensing Cruise Control Module	T126	Vehicle Model
T127	Reset History Buffer	T128	Rear Differential Clutch Service Calibration Setup
T129	Park Brake Reset	T130	Speedometer Calibration
T131	Gear Position Sensor Learn	T132	Exhaust Aftertreatment Data Reset
T133	Exhaust Gas Temperature Sensor Reset	T134	Fuel Filter Life Reset
T135	NOx Catalyst Reset	T136	NOx Catalyst Reductant Loading Reset
T137	NOx Sensor 1 Reset	T138	NOx Sensor 2 Reset
T139	Reductant Fluid Tank Level Reset	T140	Reductant Injector Reset
T141	Reductant System Data Reset	T142	Reductant System Reset
T143	Total Fuel Consumed Reset	T144	Cylinder 1 Injector Flow Identifier
T145	Cylinder 2 Injector Flow Identifier	T146	Cylinder 3 Injector Flow Identifier
T147	Cylinder 4 Injector Flow Identifier	T148	Cylinder 1 Fuel Injector Correction Value Reset
T149	Cylinder 2 Fuel Injector Correction Value	T150	Cylinder 3 Fuel Injector Correction Value Reset
T151	Cylinder 4 Fuel Injector Correction Value	T152	All Cylinders Fuel Injector Correction Value Reset
T153	Fuel Injector Correction Value Preset	T154	Cylinder 5 Injector Flow Identifier
T155	Cylinder 6 Injector Flow Identifier	T156	Cylinder 7 Injector Flow Identifier
T157	Cylinder 8 Injector Flow Identifier	T158	Transmission Solenoid Valves Calibration Preset
T159	DC Charging Disabled Reset	T160	EV Range Reset
T161	Hybrid/EV Battery Contactor Open Reasons Reset	T162	Add/Replace Key Fobs
T163	Content Theft - Exterior Lamp Flash	T164	Content Theft - Horn Chirp / Door Key Cylinder Disarming
T165	Panic Alarm	T166	Ambient Air Temperature Instant Update
T167	Digital Radio Receiver Control Module	T168	Personalization
T169	Ambient Air Temperature Calculation Reset	T170	Engine Serial Number
T171	Copy Injector Flow Identifiers from Glow Plug Control Module to ECM	T172	Copy Injector Flow Identifiers from ECM to Glow Plug Control Module
T173	Cylinder 5 Fuel Injector Correction Value	T174	Cylinder 6 Fuel Injector Correction Value Reset
T175	Cylinder 7 Fuel Injector Correction Value	T176	Cylinder 8 Fuel Injector Correction Value Reset
T177	Reset PTO Inhibit and Disengage History	T178	PTO Operation Mode
T179	Neutral Position Sensor Learn	T180	Idle Air Control Reset