

MaxiSysCV_Dodge_Truck_V1.00 Function List (Note:For reference only)

NOTES:

- This function is supported. ※ This function may be supported, which depends on the actual condition of the vehicle.
 - This function is not supported. ● This function is the new feature in this version.
- As for special function please refer to the special function table.

YEAR	VehicleType	Control unit	Ecu info.	Read codes	Erase codes	Live Data	Freeze Frame	Active Test	ECU Configure Info.	Special Function
1996~2003	All Model	PCM	●	●	●	●	●	●	○	C000 C001 C002 C003 C004 C005 C006 C007 C008 C009 C00A C00B C00C C00D C00E C00F C010 C011 C012 C013 C014 C015 C016 C017 C018 C019
1996~2003	All Model	TCM	○	●	●	●	●	●	○	C02D C02E C02F C030 C031 C032 C033 061F 0391 0625 0626
1996~2003	All Model	ABS	○	●	●	●	○	●	○	002F 0577 0578
1996~2003	All Model	ORC	○	●	●	●	○	○	○	0622 0623
1996~2003	All Model	SKM	○	●	●	●	○	●	○	C01A C01B C01C C01D C01E C01F C020 C021 C022 C023 C024 C025 C026 C027 C028 C029 C02A C02B C02C
1996~2003	All Model	APM	○	●	●	●	○	●	○	0579
1996~2003	All Model	ATC	○	●	●	●	○	●	○	057A 057B 057C
1996~2003	All Model	AUD	○	●	●	●	○	○	○	057D 057E 057F
1996~2003	All Model	BCM	○	●	●	●	○	●	○	0581 008F 003D 0582 0583 0584 0585 057A 0586 0587 0588 0589 058A 008E 058B 058C 058D 058E 058F 0590 0591 0592 049F 0593 0594 0595 0596 0597 0598 0599 059A 059C 059D 059E 059F 0600 0601
1996~2003	All Model	CMT	○	●	●	○	○	○	○	
1996~2003	All Model	DAA	○	●	●	○	○	○	○	0602 0603 0604 0605 0606 0607 01C8 0608 0609
1996~2003	All Model	DDM	○	●	●	●	○	●	○	060A 057A 060B 0592 060C
1996~2003	All Model	DSD	○	●	●	●	○	●	○	060D 057A
1996~2003	All Model	FCM	○	●	●	●	○	●	○	060E 060F 003F 003D 0610 0611 0612
1996~2003	All Model	FDC	○	●	●	●	○	○	○	0613
1996~2003	All Model	HFM	○	●	●	●	○	●	○	057A
1996~2003	All Model	HVA	○	●	●	●	○	●	○	0614 0615 0616 0617 0618
1996~2003	All Model	LSA	○	●	●	○	○	○	○	
1996~2003	All Model	MIC	○	●	●	●	○	●	○	
1996~2003	All Model	MSM	○	●	●	●	○	●	○	
1996~2003	All Model	NAV	○	●	●	○	○	○	○	0619
1996~2003	All Model	OCM	○	○	○	●	○	○	○	057A 0620 0621 0608
1996~2003	All Model	PAM	○	●	●	●	○	○	○	
1996~2003	All Model	PDM	○	●	●	●	○	●	○	0610 060B 057A 0592 060C
1996~2003	All Model	PLM	○	●	●	●	○	●	○	0624 061A 060D 061B 00B4 00B5 057A 061C 061D
1996~2003	All Model	PSD	○	●	●	●	○	●	○	0624 061A 060D 061B 00B4 00B5 057A
1996~2003	All Model	RSA	○	●	●	○	○	○	○	
1996~2003	All Model	RSM	○	●	●	○	○	○	○	
1996~2003	All Model	SAR	○	●	●	○	○	●	○	057F
1996~2003	All Model	SLA	○	○	○	●	○	●	○	
1996~2003	All Model	SRM	○	○	○	●	○	●	○	

YEAR	VehicleType	Control unit	Ecu info.	Read codes	Erase codes	Live Data	Freeze Frame	Active Test	ECU Configure Info.	Special Function
1996~2003	All Model	VIC	○	●	●	○	○	○	○	
1996~2003	All Model	VTS	○	○	○	●	○	●	○	0627 0628 008F 0582 0583 0587 0629 062A 062B 062C
1996~2003	All Model	XCM	○	○	○	●	○	●	○	062D
2006	Dodge Ram	HFM	○	●	●	●	●	●	○	00E3
2006	Dodge Ram	RADIO	○	●	●	●	●	○	●	
2006	Dodge Ram	EOM	○	●	●	●	●	○	●	00BC
2006	Dodge Ram	OCM	○	●	●	●	●	○	○	011E
2006	Dodge Ram	SDAR	○	●	●	●	●	○	○	
2006	Dodge Ram	AMP	○	●	●	●	●	○	●	028A 028D 006D 006C 027F 0068 006A
2006	Dodge Ram	VES	○	●	●	●	●	●	○	
2006	Dodge Ram	TCM	○	●	●	●	○	●	●	0167 0166 01EE 016A 0169 016C 016B 016E 016D 01F0 0172 0177 0170 0175
2006	Dodge Ram	SUNR	○	●	●	●	●	●	○	
2006	Dodge Ram	HVAC	○	●	●	●	●	●	●	00EB 00E8 00E9 00EA
2006	Dodge Ram	ORC	○	●	●	●	●	○	●	
2006	Dodge Ram	PCM	○	●	●	●	●	●	●	0127 0126 0044 0411 0129 026C 026D 040A 0128 03F4 012E 012F 013C 012C 012D 0386 0173 012A 0482 012B 013B 0486 0156 0157 0154 0155 0576 0141 0150 0151 0153 015A 0159 037D 0488 0158 0487 014F 0152
2006	Dodge Ram	FDCM	○	●	●	●	●	○	○	02B5 02B3 02B2 02B1 02AF 02B0
2006	Dodge Ram	ABS	○	●	●	●	●	●	●	0002 0485 0285 0062
2006	Dodge Ram	WCM	○	●	●	●	●	○	●	01D2 0228 023F 0226 0225 0232 0230 0231 022F 01DE 0233 022D 023D 023E 0271 0270
2006	Dodge Ram	TIPMCGW	○	●	●	●	●	●	●	02DC 030C 0483 003D 0214 0032 003F 0484 0036 0037 0389 0034 0038 002E 020E 0215 028F 0211 0387 0388
2006	Dodge Ram	CCN	○	●	●	●	●	●	○	008C 008F 008E 0090
2006	Dodge Ram	JTEC Engine	○	●	●	●	○	●	○	
2006	Dodge Ram	PCI to CAN Gateway	○	●	●	●	●	○	○	
2007	Dodge Ram	PCM	○	●	●	●	●	●	●	03C7 0154 0155 0398 0141 0399 0044 0411 03F4 0150 0151 033D 037D 012D 0491 017B 0292 0173 0049 0276 0277 033B 033C 017A 0178 0179 0278 039A 013B 014F 033A 0152 027B 048D 025F 025E 0260 027C 048E 0262 0261 027D 048F 0264 0263 02F8 0127 0140 0126 026C 026D 040A 0128 027E 0490 0266 0265 0145 035B 02FB 013C 012C 0410 0177 0386 012A 0281 0280 0176 024E 048C 0170 016F 012B 0175 0269 01FC 0486 0156 0157 0576 0153 015A 0159 0488 0158 0487
2007	Dodge Ram	FDCM	○	●	●	●	●	○	○	02B5 02B3 02B2 02B1 02AF 02B0
2007	Dodge Ram	HVAC	○	●	●	●	●	●	●	00EB 00E8 00E9 02EA 02EB 00EA
2007	Dodge Ram	ABS	○	●	●	●	●	●	●	0002 0485 0285 0062
2007	Dodge Ram	VES	○	●	●	●	●	●	○	
2007	Dodge Ram	TCM	○	●	●	●	●	●	○	01F6 0391 03AF 0499 049C 0392 027B 0167 0166 01EE 03B0 0498 049B 0393 027C 016A 0169 0394 03B1 0497 049A 0395 027D 0291 016C 016B 03B2 02F8 0496 0290 03B3 0495 049D 0396 027E 016E 016D 035B 01FC 0177 0176 024E 01FB 016F 0175

YEAR	VehicleType	Control unit	Ecu info.	Read codes	Erase codes	Live Data	Freeze Frame	Active Test	ECU Configure Info.	Special Function
2007	Dodge Ram	SUNR	○	●	●	●	●	●	○	
2007	Dodge Ram	SDAR	○	●	●	●	●	○	○	
2007	Dodge Ram	ORC	○	●	●	●	●	○	●	
2007	Dodge Ram	RADIO	○	●	●	●	●	○	●	
2007	Dodge Ram	HFM	○	●	●	●	●	●	○	00E3
2007	Dodge Ram	CCN	○	●	●	●	●	●	●	008C 00BC 008F 008E 0090
2007	Dodge Ram	EOM	○	●	●	●	●	●	●	00BA 00BC
2007	Dodge Ram	TIPMCGW	○	●	●	●	●	●	●	02F1 02F0 02F3 02EF 02DC 0483 003C 003D 0214 0032 003F 0484 0036 0037 0389 0034 0038 003A 002E 020E 0215 028F 0211 0387 038F 0388 0390
2007	Dodge Ram	WCM	○	●	●	●	●	○	●	01D2 0228 0226 0225 0493 0232 0230 0231 022F 0494 01DE 0233 022D 023D 023E 0271 0270
2007	Dodge Ram	AMP	○	●	●	●	●	○	●	028A 028D 006D 006C 027F 0068 006A
2007	Dodge Ram	SAS	○	●	●	●	○	○	○	
2008	Dodge Ram	TIPMCGW	○	●	●	●	●	●	●	02F1 02F0 02F3 02EF 02DC 030C 0483 003C 003D 0214 0032 003F 0484 0036 0037 0389 0034 0038 003A 002E 020E 0215 028F 0211 0387 038F 0388 0390
2008	Dodge Ram	RADIO	○	●	●	●	●	○	●	
2008	Dodge Ram	ABS	○	●	●	●	●	●	●	0002 0485 0285 0062 03AB
2008	Dodge Ram	CCN	○	●	●	●	●	●	●	008C 00BC 008F 008E 0090
2008	Dodge Ram	FDCM	○	●	●	●	●	○	○	02B5 02B3 02B2 02B1 02AF 02B0
2008	Dodge Ram	AMP	○	●	●	●	●	○	●	028A 028D 006D 006C 027F 0068 006A
2008	Dodge Ram	HFM	○	●	●	●	●	●	○	00E3
2008	Dodge Ram	EOM	○	●	●	●	●	●	●	00BA 00BC
2008	Dodge Ram	WCM	○	●	●	●	●	○	●	0233 01D2 0228 0226 0225 0493 0232 0230 0231 022F 0494 033F 0227 023D 023E 0271 0270
2008	Dodge Ram	ORC	○	●	●	●	●	○	●	
2008	Dodge Ram	SAS	○	●	●	●	○	○	○	
2008	Dodge Ram	HVAC	○	●	●	●	●	●	●	00EA 00E8 00E9 02EA 02EB 00EB
2008	Dodge Ram	TCM	○	●	●	●	●	●	○	03AF 0499 049C 0392 027B 0167 0166 01EE 03B0 0498 049B 0393 027C 016A 0169 0394 03B1 0497 049A 0395 027D 0291 016C 016B 03B2 02F8 0496 0290 03B3 0495 049D 0396 027E 016E 016D 035B 01FC 0177 0176 024E 01FB 016F 0175 01F6 0391
2008	Dodge Ram	SUNR	○	●	●	●	●	●	○	
2008	Dodge Ram	VES	○	●	●	●	●	●	○	
2008	Dodge Ram	PCM	○	●	●	●	●	●	●	027B 048D 025F 025E 0260 027C 048E 0262 0261 027D 048F 0264 0263 02F8 0127 0140 0126 0044 0411 026C 026D 040A 0128 027E 0490 0266 0265 03F4 0145 035B 02FB 013C 012C 012D 0410 0177 0386 0173 012A 0281 0280 0176 024E 048C 0170 016F 012B 0175 0269 01FC 013B 0486 0156 0157 0154 0155 0576 0141 0150 0151 0153 015A 0159 037D 0488 0158 0487 014F 0152 03C7 0398 0399 033D 0491 017B 0292 0049 0276 0277 033B 033C 017A 0178 0179 0278 033A 039A
2008	Dodge Ram	SDAR	○	●	●	●	●	○	○	

YEAR	VehicleType	Control unit	Ecu info.	Read codes	Erase codes	Live Data	Freeze Frame	Active Test	ECU Configure Info.	Special Function
2009	Ram 1500	TIPMCGW	○	●	●	●	●	●	●	02F1 02F2 02F0 02F3 02EF 02F5 02DC 008F 008E 003D 0214 0032 003F 0036 0037 0389 0038 002E 0387 038F 0388 0390 03A1 03A2
2009	Ram 1500	HFM	○	●	●	●	●	●	○	00E3
2009	Ram 1500	HSM	○	●	●	●	●	●	○	
2009	Ram 1500	CCN	○	●	●	●	●	●	●	00BC 0382 038D 0383
2009	Ram 1500	ABS	○	●	●	●	●	●	●	03AB 0002
2009	Ram 1500	AMP	○	●	●	●	●	○	●	006D 0068
2009	Ram 1500	WCM	○	●	●	●	●	●	●	02A7 0414 0233 01D2 03E4 0228 03E6 0232 0230 0231 022F 01DE 0300 0245 02FF
2009	Ram 1500	VES3	○	●	●	●	●	●	●	
2009	Ram 1500	SAS	○	●	●	●	○	○	○	
2010	Ram 3500 Pickup	AMP	○	●	●	●	●	○	●	006D 0068
2010	Ram 3500 Pickup	HSM	○	●	●	●	●	●	○	
2010	Ram 3500 Pickup	ORC	○	●	●	●	●	○	●	02A1
2010	Ram 3500 Pickup	PTS	○	●	●	●	●	●	●	02ED 03B7
2010	Ram 3500 Pickup	MSMD	○	●	●	●	●	○	○	02EE 00BC 0114 044F 0116 0117 0115 0119
2010	Ram 3500 Pickup	DMFL	○	●	●	●	●	●	●	
2010	Ram 3500 Pickup	WCM	○	●	●	●	●	●	●	02A7 0228 02FF 03E6 0245 0414 0233 01D2 03E4 0232 0230 0231 022F 01DE 0300
2010	Ram 3500 Pickup	ABS	○	●	●	●	●	●	●	03AB 0002
2010	Ram 3500 Pickup	HVAC	○	●	●	●	●	●	●	00EA 03B9 03A9 02EB 00E9
2010	Ram 3500 Pickup	DMFR	○	●	●	●	●	●	●	
2010	Ram 3500 Pickup	TIPMCGW	○	●	●	●	●	●	●	02F1 02F2 02F0 02F3 02EF 02F5 02DC 008F 003D 0214 0032 003F 0036 0037 0389 0038 002E 0387 038F 0388 0390 03A1 022D 03A2
2010	Ram 3500 Pickup	DTCM	○	●	●	●	●	●	○	
2010	Ram 3500 Pickup	RADIO	○	●	●	●	●	●	○	039E 039F 01BB 025D
2010	Ram 3500 Pickup	VES3	○	●	●	●	●	●	●	
2010	Ram 3500 Pickup	ITBM	○	●	●	●	○	○	○	
2010	Ram 3500 Pickup	PCM	○	●	●	●	●	●	●	027B 048D 025F 025E 0260 027C 048E 0262 0261 027D 048F 0264 0263 02F8 0127 0140 0126 02F9 0044 0411 026C 026D 040A 0128 027E 0490 0266 0265 03F4 0145 035B 02FB 03B8 013C 012C 012D 0410 0177 0386 0304 0173 012A 0281 0280 02FA 0176 024E 048C 0170 016F 012B 0175 0269 01FC 013B 03FC 03FD 03FE 0154 0155 0403 0401 0150 0407 0491 017B 04AF 03C7 03CB 0049 03C8 0379 04AE 0179 03C1 039A 03C6 03C3 03C4 03C9 03FF 03C2
2010	Ram 3500 Pickup	SAS	○	●	●	●	○	○	○	
2010	Ram 3500 Pickup	CCN	○	●	●	●	●	●	●	00BC 0382 038D 0383
2010	Ram 3500 Pickup	HFM	○	●	●	●	●	●	○	00E3
2010	Ram 3500 Pickup	SDARV	○	●	●	●	●	○	○	
2010	Ram 2500	DMFL	○	●	●	●	●	●	●	
2010	Ram 2500	HVAC	○	●	●	●	●	●	●	00EA 00E9 03A9 02EB 03B9

YEAR	VehicleType	Control unit	Ecu info.	Read codes	Erase codes	Live Data	Freeze Frame	Active Test	ECU Configure Info.	Special Function
2010	Ram 2500	TIPMCGW	○	●	●	●	●	●	●	02F1 02F2 02F0 02F3 02EF 02F5 02DC 008F 008E 003D 0214 0032 003F 0036 0037 0389 0038 002E 0387 038F 0388 0390 03A1 022D 03A2
2010	Ram 2500	PTS	○	●	●	●	●	●	●	02ED 03B7
2010	Ram 2500	HFM	○	●	●	●	●	●	○	00E3
2010	Ram 2500	ABS	○	●	●	●	●	●	●	03AB 0002
2010	Ram 2500	DMFR	○	●	●	●	●	●	●	
2010	Ram 2500	ORC	○	●	●	●	●	○	●	02A1
2010	Ram 2500	SDARV	○	●	●	●	●	○	○	
2010	Ram 2500	VES3	○	●	●	●	●	●	●	
2010	Ram 2500	FDCM	○	●	●	●	●	○	○	02B5 02B3 02B2 02B1 02AF 02B0
2010	Ram 2500	CCN	○	●	●	●	●	●	●	00BC 0382 038D 0383
2010	Ram 2500	RADIO	○	●	●	●	●	●	○	039E 01BB 025D 039F
2010	Ram 2500	SAS	○	●	●	●	○	○	○	
2010	Ram 2500	HSM	○	●	●	●	●	●	○	
2010	Ram 2500	ITBM	○	●	●	●	○	○	○	
2010	Ram 2500	MSMD	○	●	●	●	●	○	○	02EE 00BC 0114 044F 0116 0117 0115 0119
2010	Ram 2500	TPM	○	●	●	●	●	○	●	0414 0232 0230 0231 022F
2010	Ram 2500	AMP	○	●	●	●	●	○	●	006D 0068
2010	Ram 2500	DTCM	○	●	●	●	●	●	○	
2010	Ram 2500	WCM	○	●	●	●	●	●	●	02A7 0414 0233 01D2 03E4 0228 03E6 0232 0230 0231 022F 01DE 0300 0245 02FF
2010	Ram 2500	PCM	○	●	●	●	●	●	●	03FC 03FD 03FE 03C7 0154 0155 0044 0411 0403 0401 03FF 03F4 0150 0407 012D 0491 017B 04AF 03CB 0049 03C8 0379 04AE 0179 03C1 035B 039A 03C2 03C3 03C4 03C9 027B 048D 025F 025E 0260 027C 048E 0262 0261 027D 048F 0264 0263 02F8 0127 0140 0126 02F9 026C 026D 040A 0128 027E 0490 0266 0265 0145 02FB 03B8 013C 012C 0410 0177 0386 0304 0173 012A 0281 0280 02FA 0176 024E 048C 0170 016F 012B 0175 0269 01FC 013B 03C6
2010	Dodge Ram	RADIO	○	●	●	●	●	○	●	
2010	Dodge Ram	WCM	○	●	●	●	●	○	●	0233 01D2 0228 0226 0225 0493 0232 0230 0231 022F 0494 033F 0227 023D 023E 0271 0270
2010	Dodge Ram	PCM	○	●	●	●	●	●	●	027B 048D 025F 025E 0260 027C 048E 0262 0261 027D 048F 0264 0263 02F8 0127 0140 0126 02F9 0044 0411 026C 026D 040A 0128 027E 0490 0266 0265 03F4 0145 035B 02FB 03B8 013C 012C 012D 0410 0177 0386 0304 0173 012A 0281 0280 02FA 0176 024E 048C 0170 016F 012B 0175 0269 01FC 013B 03C7 0154 0155 0398 0141 0399 0150 0151 033D 037D 0491 017B 0292 037A 0049 0276 0277 033B 033C 0379 017A 0178 0179 0278 014F 033A 0152 039A 039B 0486 0156 0157 0576 0153 015A 0159 0488 0158 0487
2010	Dodge Ram	SAS	○	●	●	●	○	○	○	
2010	Dodge Ram	FDCM	○	●	●	●	●	○	○	02B5 02B3 02B2 02B1 02AF 02B0
2010	Dodge Ram	ORC	○	●	●	●	●	○	●	
2010	Dodge Ram	HVAC	○	●	●	●	●	●	●	00EB 00E8 00E9 02EA 02EB 00EA

YEAR	VehicleType	Control unit	Ecu info.	Read codes	Erase codes	Live Data	Freeze Frame	Active Test	ECU Configure Info.	Special Function
2010	Dodge Ram	HFM	○	●	●	●	●	●	○	00E3
2010	Dodge Ram	SUNR	○	●	●	●	●	●	○	
2010	Dodge Ram	CCN	○	●	●	●	●	●	●	008C 00BC 008F 008E 0090
2010	Dodge Ram	TCM	○	●	●	●	●	●	○	01F6 0391 03AF 0499 049C 0392 027B 0167 0166 01EE 03B0 0498 049B 0393 027C 016A 0169 0394 03B1 0497 049A 0395 027D 0291 016C 016B 03B2 02F8 0496 0290 03B3 0495 049D 0396 027E 016E 016D 035B 01FC 0177 0176 024E 01FB 016F 0175
2010	Dodge Ram	SDAR	○	●	●	●	●	○	○	
2010	Dodge Ram	ABS	○	●	●	●	●	●	●	03AB 0002 0285 0062
2010	Dodge Ram	TIPMCGW	○	●	●	●	●	●	●	02F1 02F0 02F3 02EF 02DC 030C 0483 003C 003D 0214 0032 003F 0484 0036 0037 0389 0034 0038 003A 002E 020E 0215 028F 0211 0387 038F 0388 0390
2010	Dodge Ram	AMP	○	●	●	●	●	○	●	028A 028D 006D 006C 027F 0068 006A
2010	Dodge Ram	VES	○	●	●	●	●	●	○	
2010	Dodge Ram	EOM	○	●	●	●	●	●	●	00BA 00BC
2010	Ram 1500	HVAC	○	●	●	●	●	●	●	00EA 00E9 03A9 02EB 03B9
2010	Ram 1500	WCM	○	●	●	●	●	●	●	02A7 0414 0233 01D2 03E4 0228 03E6 0232 0230 0231 022F 01DE 0300 0245 02FF 01DA
2010	Ram 1500	RADIO	○	●	●	●	●	●	○	039E 039F 01BB 025D
2010	Ram 1500	TIPMCGW	○	●	●	●	●	●	●	02F1 02F2 02F0 02F3 02EF 02F5 02DC 008F 008E 003D 0214 0032 003F 0036 0037 0389 0038 002E 0387 038F 0388 0390 03A1 03A2
2010	Ram 1500	ABS	○	●	●	●	●	●	●	03AB 0002
2010	Ram 1500	AMP	○	●	●	●	●	○	●	006D 0068
2010	Ram 1500	HFM	○	●	●	●	●	●	○	00E3
2010	Ram 1500	SDARV	○	●	●	●	●	○	○	
2010	Ram 1500	HSM	○	●	●	●	●	●	○	
2010	Ram 1500	CCN	○	●	●	●	●	●	●	00BC 0382 038D 0383
2010	Ram 1500	ORC	○	●	●	●	●	○	●	02A1
2010	Ram 1500	ITBM	○	●	●	●	○	○	○	
2010	Ram 1500	DMFR	○	●	●	●	●	●	●	
2010	Ram 1500	DMFL	○	●	●	●	●	●	●	
2010	Ram 1500	VES3	○	●	●	●	●	●	●	
2010	Ram 1500	TPM	○	●	●	●	●	○	●	0414 0232 0230 0231 022F
2010	Ram 1500	SAS	○	●	●	●	○	○	○	
2010	Ram 1500	DTCM	○	●	●	●	●	●	○	
2010	Ram 1500	PCM	○	●	●	●	●	●	●	027B 048D 025F 025E 0260 027C 048E 0262 0261 027D 048F 0264 0263 02F8 0127 0140 0126 02F9 0044 0411 026C 026D 040A 0128 027E 0490 0266 0265 03F4 0145 035B 02FB 03B8 013C 012C 012D 0410 0177 0386 0304 0173 012A 0281 0280 02FA 0176 024E 048C 0170 016F 012B 0175 0269 01FC 013B
2010	Ram 1500	PTS	○	●	●	●	●	●	●	02ED 03B7
2010	Ram 1500	MSMD	○	●	●	●	●	○	○	02EE 00BC 0114 044F 0116 0117 0115 0119
2010	Ram (Mexico)	TPM	○	●	●	●	●	○	●	0414 0232 0230 0231 022F
2010	Ram (Mexico)	SAS	○	●	●	●	○	○	○	

YEAR	VehicleType	Control unit	Ecu info.	Read codes	Erase codes	Live Data	Freeze Frame	Active Test	ECU Configure Info.	Special Function
2010	Ram (Mexico)	ITBM	○	●	●	●	○	○	○	
2010	Ram (Mexico)	DMFR	○	●	●	●	●	●	●	
2010	Ram (Mexico)	HFM	○	●	●	●	●	●	○	00E3
2010	Ram (Mexico)	RADIO	○	●	●	●	●	●	○	039E 01BB 025D 039F
2010	Ram (Mexico)	DTCM	○	●	●	●	●	●	○	
2010	Ram (Mexico)	DMFL	○	●	●	●	●	●	●	
2010	Ram (Mexico)	ORC	○	●	●	●	●	○	●	02A1
2010	Ram (Mexico)	HSM	○	●	●	●	●	●	○	
2010	Ram (Mexico)	TIPMCGW	○	●	●	●	●	●	●	02F1 02F2 02F0 02F3 02EF 02F5 02DC 008F 008E 003D 0214 0032 003F 0036 0037 0389 0038 002E 0387 038F 0388 0390 03A1 03A2
2010	Ram (Mexico)	AMP	○	●	●	●	●	○	●	006D 0068
2010	Ram (Mexico)	HVAC	○	●	●	●	●	●	●	00EA 00E9 03A9 02EB 03B9
2010	Ram (Mexico)	VES3	○	●	●	●	●	●	●	
2010	Ram (Mexico)	CCN	○	●	●	●	●	●	●	00BC 0382 038D 0383
2010	Ram (Mexico)	SDARV	○	●	●	●	●	○	○	
2010	Ram (Mexico)	PCM	○	●	●	●	●	●	●	03FC 03FD 03FE 0154 0155 0044 0411 0403 0401 03F4 0150 035B 0407 012D 0491 017B 04AF 03C7 03CB 0049 03C8 0379 04AE 0179 03C1 039A 03C6 03C3 03C4 03C9 03FF 03C2 027B 048D 025F 025E 0260 027C 048E 0262 0261 027D 048F 0264 0263 02F8 0127 0140 0126 02F9 026C 026D 040A 0128 027E 0490 0266 0265 0145 02FB 03B8 013C 012C 0410 0177 0386 0173 012A 0281 0280 02FA 0176 024E 048C 0170 016F 012B 0175 0269 01FC 013B 0304
2010	Ram (Mexico)	PTS	○	●	●	●	●	●	●	02ED 03B7
2010	Ram (Mexico)	WCM	○	●	●	●	●	●	●	02A7 0414 0233 01D2 03E4 0228 03E6 0232 0230 0231 022F 01DE 0300 0245 02FF 01DA
2010	Ram (Mexico)	ABS	○	●	●	●	●	●	●	03AB 0002
2010	Ram (Mexico)	MSMD	○	●	●	●	●	○	○	02EE 00BC 0114 044F 0116 0117 0115 0119
2011	Ram 3500 Pickup	DMFR	○	●	●	●	●	●	●	
2011	Ram 3500 Pickup	PCM	○	●	●	●	●	●	●	03FC 03FD 03FE 03C7 0154 0155 0044 0411 0403 0401 03FF 03F4 0150 012D 0491 04AF 03CB 0049 03C8 0379 04AE 0179 03C1 035B 039A 03C2 03C4 03C9
2011	Ram 3500 Pickup	RADIO	○	●	●	●	●	●	●	039E 01BB 025D 039F
2011	Ram 3500 Pickup	DTCM	○	●	●	●	●	●	○	
2011	Ram 3500 Pickup	VES3	○	●	●	●	●	●	●	
2011	Ram 3500 Pickup	ABS	○	●	●	●	●	●	●	03AB 0002
2011	Ram 3500 Pickup	CCN	○	●	●	●	●	●	●	00BC 0382 038D 0383
2011	Ram 3500 Pickup	DMFL	○	●	●	●	●	●	●	
2011	Ram 3500 Pickup	MSMD	○	●	●	●	●	○	○	02EE 00BC 0114 044F 0116 0117 0115 0119
2011	Ram 3500 Pickup	AMP	○	●	●	●	●	○	●	006D 0068
2011	Ram 3500 Pickup	HVAC	○	●	●	●	●	●	●	00EA 00E9 03A9 02EB 03B9
2011	Ram 3500 Pickup	ORC	○	●	●	●	●	○	●	02A1
2011	Ram 3500 Pickup	HSM	○	●	●	●	●	●	●	0412
2011	Ram 3500 Pickup	PTS	○	●	●	●	●	●	●	02ED 03B7
2011	Ram 3500 Pickup	SDARV	○	●	●	●	●	○	○	

YEAR	VehicleType	Control unit	Ecu info.	Read codes	Erase codes	Live Data	Freeze Frame	Active Test	ECU Configure Info.	Special Function
2011	Ram 3500 Pickup	SAS	○	●	●	●	○	○	○	
2011	Ram 3500 Pickup	HFM	○	●	●	●	●	●	○	00E3
2011	Ram 3500 Pickup	ITBM	○	●	●	●	○	○	○	
2011	Ram 3500 Pickup	TIPMCGW	○	●	●	●	●	●	●	02F1 02F2 02F0 02F3 02EF 02F5 02DC 030E 030C 008F 008E 003D 0214 0032 03E7 0036 0037 0389 0038 002E 0476 0387 038F 0388 0390 03A1 022D 03A2
2011	Ram 3500 Pickup	WCM	○	●	●	●	●	●	●	02A7 01D2 0228 03E6 0300 0245 0414 03E4 0232 0230 0231 022F
2011	Ram 3500 Cab Chassis	MSMD	○	●	●	●	●	○	○	02EE 00BC 0114 044F 0116 0117 0115 0119
2011	Ram 3500 Cab Chassis	DTCM	○	●	●	●	●	●	○	
2011	Ram 3500 Cab Chassis	DMFL	○	●	●	●	●	●	●	
2011	Ram 3500 Cab Chassis	SAS	○	●	●	●	○	○	○	
2011	Ram 3500 Cab Chassis	PCM	○	●	●	●	●	●	●	042A 03F8 03FC 03F6 03F9 03FD 03F7 03FA 03FE 042B 0127 03F3 0140 0126 0411 0404 0402 0403 040A 0400 0401 0128 042C 03FB 03FF 03F4 0406 0407 040C 040E 040F 03B8 013C 012C 012D 0410 0386 02F9 03F1 03F0 03F2 012A 02FA 040D 03F5 040B 012B 0408 0409 03ED 03E8 03E9 03EA 03EB 03EC 03C7 0154 0155 0044 0150 0491 017B 04AF 03CB 0049 03C8 0179 03C1 03EF 039A 03EE 03C4
2011	Ram 3500 Cab Chassis	ORC	○	●	●	●	●	○	●	02A1
2011	Ram 3500 Cab Chassis	ABS	○	●	●	●	●	●	●	03AB 0002
2011	Ram 3500 Cab Chassis	DMFR	○	●	●	●	●	●	●	
2011	Ram 3500 Cab Chassis	RADIO	○	●	●	●	●	●	●	039E 039F 01BB 025D
2011	Ram 3500 Cab Chassis	ITBM	○	●	●	●	○	○	○	
2011	Ram 3500 Cab Chassis	CCN	○	●	●	●	●	●	●	00BC 0382 038D 0383
2011	Ram 3500 Cab Chassis	HFM	○	●	●	●	●	●	○	00E3
2011	Ram 3500 Cab Chassis	TIPMCGW	○	●	●	●	●	●	●	02F1 02F2 02F0 02F3 02EF 02F5 02DC 008F 008E 003D 0214 0032 003F 0036 0037 0389 0038 002E 0387 038F 0388 0390 03A1 03A2
2011	Ram 3500 Cab Chassis	WCM	○	●	●	●	●	●	●	02A7 0414 01D2 03E4 0228 03E6 0232 0230 0231 022F 0300 0245
2011	Ram 3500 Cab Chassis	HSM	○	●	●	●	●	●	●	0412
2011	Ram 3500 Cab Chassis	TCM	○	●	●	●	○	●	○	01F6 0391
2011	Ram 3500 Cab Chassis	AMP	○	●	●	●	●	○	●	006D 0068
2011	Ram 3500 Cab Chassis	DCU	○	○	○	○	○	○	○	
2011	Ram 3500 Cab Chassis	HVAC	○	●	●	●	●	●	●	00EA 03B9 03A9 02EB 00E9
2011	Ram 2500	CCN	○	●	●	●	●	●	●	00BC 0382 038D 0383
2011	Ram 2500	SAS	○	●	●	●	○	○	○	
2011	Ram 2500	MSMD	○	●	●	●	●	○	○	02EE 00BC 0114 044F 0116 0117 0115 0119
2011	Ram 2500	TPM	○	●	●	●	●	○	●	0414 0232 0230 0231 022F
2011	Ram 2500	DTCM	○	●	●	●	●	●	○	
2011	Ram 2500	RADIO	○	●	●	●	●	●	●	039E 039F 01BB 025D
2011	Ram 2500	HVAC	○	●	●	●	●	●	●	00EA 03B9 03A9 02EB 00E9
2011	Ram 2500	HSM	○	●	●	●	●	●	●	0412
2011	Ram 2500	WCM	○	●	●	●	●	●	●	02A7 0414 01D2 03E4 0228 03E6 0232 0230 0231 022F 0300 0245

YEAR	VehicleType	Control unit	Ecu info.	Read codes	Erase codes	Live Data	Freeze Frame	Active Test	ECU Configure Info.	Special Function
2011	Ram 2500	FDCM	○	●	●	●	●	○	○	02B5 02B3 02B2 02B1 02AF 02B0
2011	Ram 2500	TIPMCGW	○	●	●	●	●	●	●	02F1 02F2 02F0 02F3 02EF 02F5 02DC 030E 030C 008F 008E 003D 0032 03E7 0036 0037 0389 0038 002E 0476 0387 038F 0388 0390 03A1 022D 03A2
2011	Ram 2500	ABS	○	●	●	●	●	●	●	03AB 0002
2011	Ram 2500	ORC	○	●	●	●	●	○	●	02A1
2011	Ram 2500	PCM	○	●	●	●	●	●	●	042A 03F8 03FC 03F6 03F9 03FD 03F7 03FA 03FE 042B 0127 03F3 0140 0126 0411 0404 0402 0403 040A 0400 0401 0128 042C 03FB 03FF 03F4 0406 0407 040C 040E 040F 03B8 013C 012C 012D 0410 0386 02F9 03F1 03F0 03F2 012A 02FA 040D 03F5 040B 012B 0408 0409 03C7 0154 0155 0044 0150 0491 04AF 03CB 0049 03C8 0379 04AE 0179 03C1 035B 039A 03C2 03C4 03C9
2011	Ram 2500	AMP	○	●	●	●	●	○	●	006D 0068
2011	Ram 2500	DMFR	○	●	●	●	●	●	●	
2011	Ram 2500	HFM	○	●	●	●	●	●	○	00E3
2011	Ram 2500	PTS	○	●	●	●	●	●	●	02ED 03B7
2011	Ram 2500	ITBM	○	●	●	●	○	○	○	
2011	Ram 2500	SDARV	○	●	●	●	●	○	○	
2011	Ram 2500	DMFL	○	●	●	●	●	●	●	
2011	Ram 2500	VES3	○	●	●	●	●	●	●	
2011	Ram 4500/5500	ORC	○	●	●	●	●	○	●	02A1
2011	Ram 4500/5500	HFM	○	●	●	●	●	●	○	00E3
2011	Ram 4500/5500	HSM	○	●	●	●	●	●	●	0412
2011	Ram 4500/5500	MSMD	○	●	●	●	●	○	○	02EE 00BC 0114 044F 0116 0117 0115 0119
2011	Ram 4500/5500	DMFR	○	●	●	●	●	●	●	
2011	Ram 4500/5500	AMP	○	●	●	●	●	○	●	006D 0068
2011	Ram 4500/5500	DTCM	○	●	●	●	●	●	○	
2011	Ram 4500/5500	ABS	○	●	●	●	●	●	●	03AB 0002
2011	Ram 4500/5500	DCU	○	○	○	○	○	○	○	
2011	Ram 4500/5500	WCM	○	●	●	●	●	●	●	02A7 0414 01D2 03E4 0228 03E6 0232 0230 0231 022F 0300 0245
2011	Ram 4500/5500	HVAC	○	●	●	●	●	●	●	00EA 00E9 03A9 02EB 03B9
2011	Ram 4500/5500	CCN	○	●	●	●	●	●	●	00BC 0382 038D 0383
2011	Ram 4500/5500	DMFL	○	●	●	●	●	●	●	
2011	Ram 4500/5500	PCM	○	●	●	●	●	●	●	03ED 03E8 03E9 03EA 03EB 03EC 03C7 0154 0155 0044 0411 03F4 0150 012D 0491 017B 04AF 03CB 0049 03C8 0179 03C1 03EF 039A 03EE 03C4
2011	Ram 4500/5500	TCM	○	●	●	●	○	●	○	01F6 0391
2011	Ram 4500/5500	SAS	○	●	●	●	○	○	○	
2011	Ram 4500/5500	ITBM	○	●	●	●	○	○	○	
2011	Ram 4500/5500	TIPMCGW	○	●	●	●	●	●	●	02F1 02F2 02F0 02F3 02EF 02F5 02DC 008F 008E 003D 0214 0032 003F 0036 0037 0389 0038 002E 0387 038F 0388 0390 03A1 03A2
2011	Ram 4500/5500	RADIO	○	●	●	●	●	●	●	039E 01BB 025D 039F
2011	Ram 1500	DTCM	○	●	●	●	●	●	●	

YEAR	VehicleType	Control unit	Ecu info.	Read codes	Erase codes	Live Data	Freeze Frame	Active Test	ECU Configure Info.	Special Function
2011	Ram 1500	EAC	○	●	●	●	●	○	○	
2011	Ram 1500	DMFL	○	●	●	●	●	●	●	
2011	Ram 1500	HVAC	○	●	●	●	●	●	●	00EC 02EA 02EB 00EA 00E9 03A9 03B9
2011	Ram 1500	EPS	○	●	●	●	●	○	○	
2011	Ram 1500	HFM	○	●	●	●	●	●	○	00E3
2011	Ram 1500	PTS	○	●	●	●	●	●	●	02ED 03B7
2011	Ram 1500	VES3	○	●	●	●	●	●	●	
2011	Ram 1500	HCP	○	●	●	●	●	○	○	041E 0420 035B 041F 036A 0368
2011	Ram 1500	HGM	○	●	●	●	●	●	●	
2011	Ram 1500	RADIO	○	●	●	●	●	●	●	039E 039F 01BB 025D
2011	Ram 1500	MSMD	○	●	●	●	●	○	○	02EE 00BC 0114 044F 0116 0117 0115 0119
2011	Ram 1500	TCM	○	●	●	●	●	○	○	035B 0416 0415 0417
2011	Ram 1500	AMP	○	●	●	●	●	○	●	006D 0068
2011	Ram 1500	APM	○	○	○	○	○	○	○	0422
2011	Ram 1500	DMFR	○	●	●	●	●	●	●	
2011	Ram 1500	MCPB	○	○	○	●	○	○	○	034C
2011	Ram 1500	BPCM	○	●	●	●	●	●	○	041C 034E
2011	Ram 1500	PHGM	○	●	●	●	○	●	○	
2011	Ram 1500	ORC	○	●	●	●	●	○	●	02A1
2011	Ram 1500	TIPMCGW	○	●	●	●	●	●	●	02F1 02F2 02F0 02F3 02EF 02F5 02DC 030E 030C 008F 008E 003D 0032 0036 0037 0389 0038 002E 038F 0388 0390 03A1 03A2 03E7 0476 0387
2011	Ram 1500	SAS	○	●	●	●	○	○	○	
2011	Ram 1500	OBCM	○	●	●	●	●	●	○	
2011	Ram 1500	CCN	○	●	●	●	●	●	●	00BC 0382 038D 0383
2011	Ram 1500	ABS	○	●	●	●	●	●	●	04AD 0002 03BB 03AB
2011	Ram 1500	DRM	○	●	●	●	●	○	○	
2011	Ram 1500	ITBM	○	●	●	●	○	○	○	
2011	Ram 1500	HSM	○	●	●	●	●	●	●	0412
2011	Ram 1500	TPM	○	●	●	●	●	○	●	0414 0232 0230 0231 022F
2011	Ram 1500	SDARV	○	●	●	●	●	○	○	
2011	Ram 1500	MCPA	○	○	○	●	○	○	○	034C
2011	Ram 1500	BTM	○	●	●	●	●	●	○	
2011	Ram 1500	PCM	○	●	●	●	●	●	●	042A 03F8 03FC 03F6 03F9 03FD 03F7 03FA 03FE 042B 0127 03F3 0140 0126 0411 0404 0402 0403 040A 0400 0401 0128 042C 03FB 03FF 03F4 0406 0407 040C 040E 040F 03B8 013C 012C 012D 0410 0386 02F9 03F1 03F0 03F2 012A 02FA 040D 03F5 040B 012B 0408 0409 027B 048D 025F 025E 0260 027C 048E 0262 0261 027D 048F 0264 0263 02F8 0044 026C 026D 027E 0490 0266 0265 0421 0145 035B 02FB 0177 0304 0173 0281 0280 0176 024E 048C 0170 016F 0175 0269 01FC 013B
2011	Ram 1500	WCM	○	●	●	●	●	●	●	02A7 0414 01D2 0228 03E6 0232 0230 0231 022F 0300 0245 03E4
2011	Ram (Mexico)	ITBM	○	●	●	●	○	○	○	
2011	Ram (Mexico)	HSM	○	●	●	●	●	●	●	0412
2011	Ram (Mexico)	RADIO	○	●	●	●	●	●	●	039E 01BB 025D 039F

YEAR	VehicleType	Control unit	Ecu info.	Read codes	Erase codes	Live Data	Freeze Frame	Active Test	ECU Configure Info.	Special Function
2011	Ram (Mexico)	HVAC	○	●	●	●	●	●	●	00EA 03B9 03A9 02EB 00E9
2011	Ram (Mexico)	DMFR	○	●	●	●	●	●	●	
2011	Ram (Mexico)	VES3	○	●	●	●	●	●	●	
2011	Ram (Mexico)	SAS	○	●	●	●	○	○	○	
2011	Ram (Mexico)	ABS	○	●	●	●	●	●	●	03AB 0002
2011	Ram (Mexico)	ORC	○	●	●	●	●	○	●	02A1
2011	Ram (Mexico)	PTS	○	●	●	●	●	●	●	02ED 03B7
2011	Ram (Mexico)	MSMD	○	●	●	●	●	○	○	02EE 00BC 0114 044F 0116 0117 0115 0119
2011	Ram (Mexico)	DTCM	○	●	●	●	●	●	○	
2011	Ram (Mexico)	TPM	○	●	●	●	●	○	●	0414 0232 0230 0231 022F
2011	Ram (Mexico)	WCM	○	●	●	●	●	●	●	02A7 0414 01D2 03E4 0228 03E6 0232 0230 0231 022F 0300 0245
2011	Ram (Mexico)	SDARV	○	●	●	●	●	○	○	
2011	Ram (Mexico)	CCN	○	●	●	●	●	●	●	00BC 0382 038D 0383
2011	Ram (Mexico)	PCM	○	●	●	●	●	●	●	03FC 03FD 03FE 03ED 03E8 03E9 03EA 03EB 03EC 03C7 0154 0155 0044 0411 0403 0401 03FF 03F4 0150 012D 0491 017B 04AF 03CB 0049 03C8 04AE 0179 03C1 03EF 035B 039A 03EE 03C2 03C3 03C4 03C9 042A 03F8 03F6 03F9 03F7 03FA 042B 0127 03F3 0140 0126 0404 0402 040A 0400 0128 042C 03FB 0406 0407 040C 040E 040F 03B8 013C 012C 0410 0386 02F9 03F1 03F0 03F2 012A 02FA 040D 03F5 040B 012B 0408 0409
2011	Ram (Mexico)	AMP	○	●	●	●	●	○	●	006D 0068
2011	Ram (Mexico)	HFM	○	●	●	●	●	●	○	00E3
2011	Ram (Mexico)	TIPMCGW	○	●	●	●	●	●	●	02F1 02F2 02F0 02F3 02EF 02F5 02DC 030E 030C 008F 008E 003D 0032 03E7 0036 0037 0389 0038 002E 0476 0387 038F 0388 0390 03A1 03A2
2011	Ram (Mexico)	DMFL	○	●	●	●	●	●	●	
2012	Ram 3500 Pickup	HSM	○	●	●	●	●	●	●	0412
2012	Ram 3500 Pickup	SAS	○	●	●	●	○	○	○	
2012	Ram 3500 Pickup	DMFR	○	●	●	●	●	●	●	
2012	Ram 3500 Pickup	AMP	○	●	●	●	●	○	●	006D 0068
2012	Ram 3500 Pickup	PCM	○	●	●	●	●	●	●	03FC 03FD 03FE 03C7 0154 0155 0044 0411 0403 0401 03FF 03F4 0150 012D 0491 04AF 03CB 0049 03C8 0379 04AE 0179 03C1 035B 039A 03C2 03C4 03C9 0407
2012	Ram 3500 Pickup	RADIO	○	●	●	●	●	●	●	039E 01BB 025D 039F 04A1
2012	Ram 3500 Pickup	ITBM	○	●	●	●	○	○	○	
2012	Ram 3500 Pickup	ABS	○	●	●	●	●	●	●	03AB 0002
2012	Ram 3500 Pickup	ORC	○	●	●	●	●	○	●	02A1
2012	Ram 3500 Pickup	TIPMCGW	○	●	●	●	●	●	●	02F1 02F2 02F0 02F3 02EF 02F5 02DC 030E 030C 008F 008E 003D 0032 03E7 0036 0037 0389 0038 002E 0476 0387 038F 0388 0390 03A1 022D 03A2
2012	Ram 3500 Pickup	DMFL	○	●	●	●	●	●	●	
2012	Ram 3500 Pickup	HVAC	○	●	●	●	●	●	●	00EA 03B9 03A9 02EB 00E9
2012	Ram 3500 Pickup	PTS	○	●	●	●	●	●	●	02ED 03B7
2012	Ram 3500 Pickup	HFM	○	●	●	●	●	●	○	00E3
2012	Ram 3500 Pickup	VES3	○	●	●	●	●	●	●	

YEAR	VehicleType	Control unit	Ecu info.	Read codes	Erase codes	Live Data	Freeze Frame	Active Test	ECU Configure Info.	Special Function
2012	Ram 2500	PCM	○	●	●	●	●	●	●	03FC 03FD 03FE 03C7 0154 0155 0044 0411 0403 0401 03FF 03F4 0150 012D 0491 04AF 03CB 0049 03C8 0379 04AE 0179 03C1 035B 039A 03C2 03C4 03C9 042A 03F8 03F6 03F9 03F7 03FA 042B 0127 03F3 0140 0126 0404 0402 040A 0400 0128 042C 03FB 0406 0407 040C 040E 040F 03B8 013C 012C 0410 0386 02F9 03F1 03F0 03F2 012A 02FA 040D 03F5 040B 012B 0408 0409 04EE 04F0 04EF 04ED 04F1 04EC 04F2
2012	Ram 2500	TIPMCGW	○	●	●	●	●	●	●	02F1 02F2 02F0 02F3 02EF 02F5 02DC 030E 030C 008F 008E 003D 0032 03E7 0036 0037 0389 0038 002E 0476 0387 038F 0388 0390 03A1 022D 03A2
2012	Ram 2500	ABS	○	●	●	●	●	●	●	03AB 0002
2012	Ram 2500	RADIO	○	●	●	●	●	●	●	04A1 039F 01BB 039E 025D
2012	Ram 2500	DTCM	○	●	●	●	●	●	○	
2012	Ram 2500	VES3	○	●	●	●	●	●	●	
2012	Ram 2500	WCM	○	●	●	●	●	●	●	02A7 0414 01D2 0228 03E6 0232 0230 0231 022F 0300 0245 03E4
2012	Ram 2500	AMP	○	●	●	●	●	○	●	006D 0068
2012	Ram 2500	TPM	○	●	●	●	●	○	●	0414 0232 0230 0231 022F
2012	Ram 2500	HSM	○	●	●	●	●	●	●	0412
2012	Ram 2500	CCN	○	●	●	●	●	●	●	00BC 0382 038D 0383
2012	Ram 2500	SAS	○	●	●	●	○	○	○	
2012	Ram 2500	HVAC	○	●	●	●	●	●	●	00EA 00E9 03A9 02EB 03B9
2012	Ram 2500	FDCM	○	●	●	●	●	○	○	02B5 02B3 02B2 02B1 02AF 02B0
2012	Ram 4500/5500	RADIO	○	●	●	●	●	●	●	039E 01BB 025D 039F 04A1
2012	Ram 4500/5500	ITBM	○	●	●	●	○	○	○	
2012	Ram 4500/5500	WCM	○	●	●	●	●	●	●	02A7 0414 01D2 03E4 0228 03E6 0232 0230 0231 022F 0300 0245
2012	Ram 4500/5500	DTCM	○	●	●	●	●	●	○	
2012	Ram 4500/5500	SAS	○	●	●	●	○	○	○	
2012	Ram 4500/5500	HFM	○	●	●	●	●	●	○	00E3
2012	Ram 4500/5500	DCU	○	○	○	○	○	○	○	
2012	Ram 4500/5500	ABS	○	●	●	●	●	●	●	03AB 0002
2012	Ram 4500/5500	TCM	○	●	●	●	○	●	○	01F6 0391
2012	Ram 4500/5500	CCN	○	●	●	●	●	●	●	00BC 0382 038D 0383
2012	Ram 4500/5500	TIPMCGW	○	●	●	●	●	●	●	02F1 02F2 02F0 02F3 02EF 02F5 02DC 030E 030C 008F 008E 003D 0214 0032 03E7 0036 0037 0389 0038 002E 0476 0387 038F 0388 0390 03A1 03A2
2012	Ram 4500/5500	PCM	○	●	●	●	●	●	●	03ED 03E8 03E9 03EA 03EB 03EC 03C7 0154 0155 0044 0411 03F4 0150 012D 0491 017B 04AF 03CB 0049 03C8 0179 03C1 03EF 039A 03EE 03C4 0478 0477
2012	Ram 4500/5500	ORC	○	●	●	●	●	○	●	02A1
2012	Ram 4500/5500	DMFR	○	●	●	●	●	●	●	
2012	Ram 4500/5500	HSM	○	●	●	●	●	●	●	0412
2012	Ram 4500/5500	HVAC	○	●	●	●	●	●	●	00EA 03B9 03A9 02EB 00E9
2012	Ram 4500/5500	MSMD	○	●	●	●	●	○	○	02EE 00BC 0114 044F 0116 0117 0115 0119
2012	Ram 4500/5500	DMFL	○	●	●	●	●	●	●	

YEAR	VehicleType	Control unit	Ecu info.	Read codes	Erase codes	Live Data	Freeze Frame	Active Test	ECU Configure Info.	Special Function
2012	Ram 4500/5500	AMP	○	●	●	●	●	○	●	006D 0068
2012	Ram 1500	ABS	○	●	●	●	●	●	●	03AB 0002
2012	Ram 1500	AMP	○	●	●	●	●	○	●	006D 0068
2012	Ram 1500	PTS	○	●	●	●	●	●	●	02ED 03B7
2012	Ram 1500	TPM	○	●	●	●	●	○	●	0414 0232 0230 0231 022F
2012	Ram 1500	VES3	○	●	●	●	●	●	●	
2012	Ram 1500	PCM	○	●	●	●	●	●	●	042A 03F8 03FC 03F6 03F9 03FD 03F7 03FA 03FE 042B 0127 03F3 0140 0126 0411 0404 0402 0403 040A 0400 0401 0128 042C 03FB 03FF 03F4 0406 0407 040C 040E 040F 03B8 013C 012C 012D 0410 0386 02F9 03F1 03F0 03F2 012A 02FA 040D 03F5 040B 012B 0408 0409
2012	Ram 1500	DMFL	○	●	●	●	●	●	●	
2012	Ram 1500	MSMD	○	●	●	●	●	○	○	02EE 00BC 0114 044F 0116 0117 0115 0119
2012	Ram 1500	SAS	○	●	●	●	○	○	○	
2012	Ram 1500	HFM	○	●	●	●	●	●	○	00E3
2012	Ram 1500	WCM	○	●	●	●	●	●	●	02A7 0414 01D2 03E4 0228 03E6 0232 0230 0231 022F 0300 0245
2012	Ram 1500	HSM	○	●	●	●	●	●	●	0412
2012	Ram 1500	ORC	○	●	●	●	●	○	●	02A1
2012	Ram 1500	DMFR	○	●	●	●	●	●	●	
2012	Ram 1500	TIPMCGW	○	●	●	●	●	●	●	02F1 02F2 02F0 02F3 02EF 02F5 02DC 030E 030C 008F 008E 003D 0032 03E7 0036 0037 0389 0038 002E 0476 0387 038F 0388 0390 03A1 03A2
2012	Ram 1500	ITBM	○	●	●	●	○	○	○	
2012	Ram 1500	DTCM	○	●	●	●	●	●	●	
2012	Ram 1500	RADIO	○	●	●	●	●	●	●	039E 01BB 025D 039F 04A1
2012	Ram 1500	CCN	○	●	●	●	●	●	●	00BC 0382 038D 0383
2012	Ram 1500	HVAC	○	●	●	●	●	●	●	00EA 00E9 03A9 02EB 00EC 02EA 03B9
2012	Ram (Mexico)	PCM	○	●	●	●	●	●	●	042A 03F8 03FC 03F6 03F9 03FD 03F7 03FA 03FE 042B 0127 03F3 0140 0126 0411 0404 0402 0403 040A 0400 0401 0128 042C 03FB 03FF 03F4 0406 0407 040C 040E 040F 03B8 013C 012C 012D 0410 0386 02F9 03F1 03F0 03F2 012A 02FA 040D 03F5 040B 012B 0408 0409 03ED 03E8 03E9 03EA 03EB 03EC 03C7 0154 0155 0044 0150 0491 017B 04AF 03CB 0049 03C8 04AE 0179 03C1 0478 0477 03EF 035B 039A 03EE 03C2 03C3 03C4 03C9
2012	Ram (Mexico)	WCM	○	●	●	●	●	●	●	02A7 0414 01D2 0228 03E6 0232 0230 0231 022F 0300 0245 03E4
2012	Ram (Mexico)	SAS	○	●	●	●	○	○	○	
2012	Ram (Mexico)	HFM	○	●	●	●	●	●	○	00E3
2012	Ram (Mexico)	HSM	○	●	●	●	●	●	●	0412
2012	Ram (Mexico)	RADIO	○	●	●	●	●	●	●	039E 01BB 025D 039F 04A1
2012	Ram (Mexico)	HVAC	○	●	●	●	●	●	●	00EA 03B9 03A9 02EB 00E9
2012	Ram (Mexico)	MSMD	○	●	●	●	●	○	○	02EE 00BC 0114 044F 0116 0117 0115 0119
2012	Ram (Mexico)	TPM	○	●	●	●	●	○	●	0414 0232 0230 0231 022F
2012	Ram (Mexico)	DMFL	○	●	●	●	●	●	●	

YEAR	VehicleType	Control unit	Ecu info.	Read codes	Erase codes	Live Data	Freeze Frame	Active Test	ECU Configure Info.	Special Function
2013	Ram 2500	TPM	○	●	●	●	●	○	●	0435 0232 0230 0231 022F
2013	Ram 2500	VSIM	○	●	●	●	●	●	○	
2013	Ram 2500	ASCM	○	●	●	●	●	○	●	052D 0466 0469 0468 046D 0470
2013	Ram 2500	FDCM	○	●	●	●	●	○	○	
2013	Ram 2500	VGT	○	●	●	○	○	○	○	
2013	Ram 2500	AMP	○	●	●	●	●	○	○	006D 0068
2013	Ram 2500	DTCM	○	●	●	●	●	●	●	
2013	Ram 2500	SCCM	○	●	●	●	●	○	○	
2013	Ram 2500	ITBM	○	●	●	●	●	○	○	
2013	Ram 4500/5500	MSM	○	●	●	●	●	●	●	0455 0451 0454 044F 0452 0450 0453
2013	Ram 4500/5500	HVAC	○	●	●	●	●	●	●	00EA 03B9 02EA 02EB
2013	Ram 4500/5500	AMP	○	●	●	●	●	○	○	006D 0068
2013	Ram 4500/5500	BCM	○	●	●	●	●	●	●	02F1 0438 02F0 02F3 02EF 02F5 008F 03C0 003D 043B 043A 002E 038F 022D
2013	Ram 4500/5500	PCM	○	●	●	●	●	●	●	03FC 03FD 03FE 04EE 04EF 0127 03F3 0140 0126 0411 0403 040A 0401 0128 03FF 03F4 0407 040F 03B8 04ED 013C 012C 012D 0410 04F1 04EC 0429 02F9 03F1 03F0 03F2 012A 02FA 040B 012B 04F2 0525 0521 0526 03EC 0523 0524 03C7 0313 0528 052F 0491 04AF 03CB 03C8 052E 0478 0477 03EF 039A 0527 03C4
2013	Ram 4500/5500	PTS	○	●	●	●	●	●	●	02ED 03B7
2013	Ram 4500/5500	VGT	○	●	●	○	○	○	○	
2013	Ram 4500/5500	TCM	○	●	●	●	●	●	●	01EF
2013	Ram 4500/5500	ABS	○	●	●	●	●	●	●	0433 03AB 0434
2013	Ram 4500/5500	IPC	○	●	●	●	●	●	●	04B3 0456 0530
2013	Ram 4500/5500	ORC	○	●	●	●	●	●	●	02A1
2013	Ram 4500/5500	RADIO	○	●	●	●	●	●	●	
2013	Ram 4500/5500	HSM	○	●	●	●	●	●	●	
2013	Ram 4500/5500	VSIM	○	●	●	●	●	●	○	
2013	Ram 4500/5500	SCCM	○	●	●	●	●	○	○	
2013	Ram 4500/5500	DDM	○	●	●	●	●	●	●	
2013	Ram 4500/5500	ICS	○	●	●	●	●	●	●	
2013	Ram 4500/5500	RFH	○	●	●	●	●	●	●	0443 0463 0442 052A 051E 0444 043F 051B 0445 052B
2013	Ram 4500/5500	DTCM	○	●	●	●	●	●	●	
2013	Ram 4500/5500	DCU	○	●	●	○	○	○	○	
2013	Ram 4500/5500	PDM	○	●	●	●	●	●	●	
2013	Ram 4500/5500	EDM	○	●	●	●	●	●	○	
2013	Ram 4500/5500	ITBM	○	●	●	●	●	○	○	
2013	Ram 1500	EDM	○	●	●	●	●	●	○	
2013	Ram 1500	RFH	○	●	●	●	●	●	●	0443 0463 0442 052A 051E 0444 058C 043F 051B 0445 052B
2013	Ram 1500	DTCM	○	●	●	●	●	●	●	
2013	Ram 1500	ASCM	○	●	●	●	●	○	●	046E 052D 046A 0466 0469 0468 046D 046C 0470
2013	Ram 1500	DDM	○	●	●	●	●	●	●	

YEAR	VehicleType	Control unit	Ecu info.	Read codes	Erase codes	Live Data	Freeze Frame	Active Test	ECU Configure Info.	Special Function
2013	Ram 1500	PCM	○	●	●	●	●	●	●	03FC 03FD 03FE 04EE 04EF 0127 03F3 0140 0126 0411 0403 040A 0401 0128 03FF 03F4 0407 040F 03B8 04ED 013C 012C 012D 0410 04F1 04EC 0429 02F9 03F1 03F0 03F2 012A 02FA 040B 012B 04F2
2013	Ram 1500	IPC	○	●	●	●	●	●	●	04B3 0456
2013	Ram 1500	AMP	○	●	●	●	●	○	○	006D 0068
2013	Ram 1500	RADIO	○	●	●	●	●	●	●	
2013	Ram 1500	ICS	○	●	●	●	●	●	●	
2013	Ram 1500	EPS	○	●	●	●	●	○	○	050B
2013	Ram 1500	MSM	○	●	●	●	●	●	●	0455 0451 0454 044F 0452 0450 0453
2013	Ram 1500	PDM	○	●	●	●	●	●	●	
2013	Ram 1500	TPM	○	●	●	●	●	○	●	0435 0232 0230 0231 022F
2013	Ram 1500	ITBM	○	●	●	●	●	○	○	
2013	Ram 1500	PTS	○	●	●	●	●	●	●	02ED 03B7
2013	Ram 1500	BCM	○	●	●	●	●	●	●	02F1 0438 02F0 02F3 02EF 02F5 008F 003D 043B 043A 002E 038F 022D 03C0
2013	Ram 1500	TCM	○	●	●	●	●	○	●	047F
2013	Ram 1500	ORC	○	●	●	●	●	●	●	02A1
2013	Ram 1500	ABS	○	●	●	●	●	●	●	0433 03AB 0434
2013	Ram 1500	HSM	○	●	●	●	●	●	●	
2013	Ram 1500	HVAC	○	●	●	●	●	●	●	00EA 03B9 02EA 02EB
2013	Ram 1500	ESM	○	●	●	●	●	○	○	
2013	Ram 1500	SCCM	○	●	●	●	●	○	○	
2013	Ram (Mexico)	VGT	○	●	●	○	○	○	○	
2013	Ram (Mexico)	ORC	○	●	●	●	●	●	●	02A1
2013	Ram (Mexico)	DCU	○	●	●	○	○	○	○	
2013	Ram (Mexico)	PCM	○	●	●	●	●	●	●	03FC 03FD 03FE 0525 0521 0526 03EC 0523 0524 03C7 0411 0403 03FF 03F4 0407 040F 012D 052F 0491 03CB 03C8 052E 0522 0478 0477 03EF 039A 0527 03C4 0313 0528 04AF 04EE 04EF 0127 03F3 0140 0126 040A 0401 0128 03B8 04ED 013C 012C 0410 04F1 04EC 0429 02F9 03F1 03F0 03F2 012A 02FA 040B 012B 04F2
2013	Ram (Mexico)	IPC	○	●	●	●	●	●	●	04B3 0456
2013	Ram (Mexico)	AMP	○	●	●	●	●	○	○	006D 0068
2013	Ram (Mexico)	HVAC	○	●	●	●	●	●	●	00EA 03B9 02EA 02EB
2013	Ram (Mexico)	TCM	○	●	●	●	●	●	●	047F 01EF
2013	Ram (Mexico)	RFH	○	●	●	●	●	●	●	0443 0463 0442 052A 051E 0444 043F 051B 0445 052B
2013	Ram (Mexico)	SCCM	○	●	●	●	●	○	○	
2013	Ram (Mexico)	EDM	○	●	●	●	●	●	○	
2013	Ram (Mexico)	DDM	○	●	●	●	●	●	●	
2013	Ram (Mexico)	EPS	○	●	●	●	●	○	○	050B
2013	Ram (Mexico)	ABS	○	●	●	●	●	●	●	0433 03AB 0434
2013	Ram (Mexico)	DTCM	○	●	●	●	●	●	●	
2013	Ram (Mexico)	PDM	○	●	●	●	●	●	●	
2013	Ram (Mexico)	ITBM	○	●	●	●	●	○	○	

YEAR	VehicleType	Control unit	Ecu info.	Read codes	Erase codes	Live Data	Freeze Frame	Active Test	ECU Configure Info.	Special Function
2013	Ram (Mexico)	BCM	○	●	●	●	●	●	●	02F1 0438 02F0 02F3 02EF 02F5 008F 003D 043B 043A 002E 038F 03C0 022D
2013	Ram (Mexico)	HSM	○	●	●	●	●	●	●	
2013	Ram (Mexico)	ICS	○	●	●	●	●	●	●	
2013	Ram (Mexico)	RADIO	○	●	●	●	●	●	●	
2013	Ram (Mexico)	ESM	○	●	●	●	●	○	○	
2013	Ram (Mexico)	MSM	○	●	●	●	●	●	●	0455 0451 0454 044F 0452 0450 0453
2013	Ram (Mexico)	VSIM	○	●	●	●	●	●	○	
2013	Ram (Mexico)	TPM	○	●	●	●	●	○	●	0435 0232 0230 0231 022F
2013	Ram (Mexico)	ASCM	○	●	●	●	●	○	●	046E 052D 046A 0466 0469 0468 046D 046C 0470
2013	Ram (Mexico)	PTS	○	●	●	●	●	●	●	02ED 03B7
2014	Ram 3500 Pickup	BCM	○	●	●	●	●	●	●	02F1 0438 02F0 02F3 02EF 02F5 008F 003D 043B 043A 002E 0553 038F 022D 03C0
2014	Ram 3500 Pickup	PTS	○	●	●	●	●	●	●	02ED 03B7
2014	Ram 3500 Pickup	SCCM	○	●	●	●	●	○	○	
2014	Ram 3500 Pickup	MSM	○	●	●	●	●	●	●	0455 0451 0454 044F 0452 0450 0453
2014	Ram 3500 Pickup	RADIO	○	●	●	●	●	●	●	
2014	Ram 3500 Pickup	AMP	○	●	●	●	●	○	○	006D 0068
2014	Ram 3500 Pickup	HSM	○	●	●	●	●	●	●	
2014	Ram 3500 Pickup	DCU	○	●	●	○	○	○	○	
2014	Ram 3500 Pickup	PDM	○	●	●	●	●	●	●	
2014	Ram 3500 Pickup	ASCM	○	●	●	●	●	○	●	052D 0466 0469 0468 046D 0470
2014	Ram 3500 Pickup	ITBM	○	●	●	●	●	○	○	
2014	Ram 3500 Pickup	HVAC	○	●	●	●	●	●	●	00EA 03B9 02EA 02EB
2014	Ram 3500 Pickup	EDM	○	●	●	●	●	●	○	
2014	Ram 3500 Pickup	PCM	○	●	●	●	●	●	●	03FC 03FD 03FE 04EE 054F 04EF 0127 03F3 0140 0126 0411 0403 040A 0401 0128 03FF 03F4 0407 040F 03B8 04ED 013C 012C 012D 0550 04EC 0551 0429 054B 054C 02F9 03F1 03F0 03F2 012A 02FA 040B 054E 012B 0525 0521 0526 03EC 0523 0524 03C7 0313 0528 0491 04AF 03CB 0522 0478 0477 039A 0527 04F0 0552 054A
2014	Ram 3500 Pickup	VSIM	○	●	●	●	●	●	○	
2014	Ram 3500 Pickup	ABS	○	●	●	●	●	●	●	0433 03AB 0434
2014	Ram 3500 Pickup	RFH	○	●	●	●	●	●	●	0443 0463 0442 052A 0414 051E 0444 043F 051B 051D 0445 052B
2014	Ram 3500 Pickup	ORC	○	●	●	●	●	●	●	02A1
2014	Ram 3500 Pickup	TCM	○	●	●	●	●	●	●	01EF
2014	Ram 3500 Pickup	IPC	○	●	●	●	●	●	●	04B3 0456 0530
2014	Ram 3500 Pickup	ICS	○	●	●	●	●	●	●	
2014	Ram 3500 Pickup	VGT	○	●	●	○	○	○	○	
2014	Ram 3500 Pickup	DDM	○	●	●	●	●	●	●	
2014	Ram 3500 Pickup	DTCM	○	●	●	●	●	●	●	
2014	Ram 3500 Cab Chassis	AMP	○	●	●	●	●	○	○	006D 0068
2014	Ram 3500 Cab Chassis	DDM	○	●	●	●	●	●	●	

YEAR	VehicleType	Control unit	Ecu info.	Read codes	Erase codes	Live Data	Freeze Frame	Active Test	ECU Configure Info.	Special Function
2014	Ram 3500 Cab Chassis	PCM	○	●	●	●	●	●	●	0525 0521 0526 03EC 0523 0524 03C7 0411 03F4 012D 0313 0528 0552 052F 0491 04AF 03CB 03C8 052E 0478 0477 03EF 039A 0527 03FC 03FD 03FE 04EE 054F 04F0 04EF 0127 03F3 0140 0126 0403 040A 0401 0128 03FF 0407 040F 03B8 04ED 013C 012C 0550 04EC 0551 0429 054B 054C 02F9 03F1 03F0 03F2 012A 02FA 040B 054E 012B 054A
2014	Ram 3500 Cab Chassis	TCM	○	●	●	●	●	●	●	01EF
2014	Ram 3500 Cab Chassis	RFH	○	●	●	●	●	●	●	0443 0463 0442 052A 0414 051E 0444 043F 051B 051D 0445 052B
2014	Ram 3500 Cab Chassis	SCCM	○	●	●	●	●	○	○	
2014	Ram 3500 Cab Chassis	ICS	○	●	●	●	●	●	●	
2014	Ram 3500 Cab Chassis	PDM	○	●	●	●	●	●	●	
2014	Ram 3500 Cab Chassis	DTCM	○	●	●	●	●	●	●	
2014	Ram 3500 Cab Chassis	HSM	○	●	●	●	●	●	●	
2014	Ram 3500 Cab Chassis	DCU	○	●	●	○	○	○	○	
2014	Ram 3500 Cab Chassis	ORC	○	●	●	●	●	●	●	02A1
2014	Ram 3500 Cab Chassis	BCM	○	●	●	●	●	●	●	02F1 0438 02F0 02F3 02EF 02F5 008F 03C0 003D 043B 043A 002E 038F 022D 0553
2014	Ram 3500 Cab Chassis	PTS	○	●	●	●	●	●	●	02ED 03B7
2014	Ram 3500 Cab Chassis	EDM	○	●	●	●	●	●	○	
2014	Ram 3500 Cab Chassis	IPC	○	●	●	●	●	●	●	04B3 0456 0530
2014	Ram 3500 Cab Chassis	ABS	○	●	●	●	●	●	●	0433 03AB 0434
2014	Ram 3500 Cab Chassis	RADIO	○	●	●	●	●	●	●	
2014	Ram 3500 Cab Chassis	MSM	○	●	●	●	●	●	●	0455 0451 0454 044F 0452 0450 0453
2014	Ram 3500 Cab Chassis	VSIM	○	●	●	●	●	●	○	
2014	Ram 3500 Cab Chassis	VGT	○	●	●	○	○	○	○	
2014	Ram 3500 Cab Chassis	ITBM	○	●	●	●	●	○	○	
2014	Ram 3500 Cab Chassis	HVAC	○	●	●	●	●	●	●	00EA 03B9 02EA 02EB
2014	Ram 2500	BCM	○	●	●	●	●	●	●	02F1 0438 02F0 02F3 02EF 02F5 008F 003D 043B 043A 002E 0553 038F 022D 03C0
2014	Ram 2500	PTS	○	●	●	●	●	●	●	02ED 03B7
2014	Ram 2500	DDM	○	●	●	●	●	●	●	
2014	Ram 2500	AMP	○	●	●	●	●	○	○	006D 0068
2014	Ram 2500	RFH	○	●	●	●	●	●	●	0443 0463 0442 052A 0414 051E 0444 043F 051B 051D 0445 052B
2014	Ram 2500	ICS	○	●	●	●	●	●	●	
2014	Ram 2500	RADIO	○	●	●	●	●	●	●	
2014	Ram 2500	TCM	○	●	●	●	●	●	●	01EF
2014	Ram 2500	FDCM	○	●	●	●	●	○	○	
2014	Ram 2500	SCCM	○	●	●	●	●	○	○	
2014	Ram 2500	IPC	○	●	●	●	●	●	●	04B3 0456 0530
2014	Ram 2500	HVAC	○	●	●	●	●	●	●	00EA 03B9 02EA 02EB
2014	Ram 2500	ABS	○	●	●	●	●	●	●	0433 03AB 0434
2014	Ram 2500	PDM	○	●	●	●	●	●	●	
2014	Ram 2500	DTCM	○	●	●	●	●	●	●	
2014	Ram 2500	DCU	○	●	●	○	○	○	○	

YEAR	VehicleType	Control unit	Ecu info.	Read codes	Erase codes	Live Data	Freeze Frame	Active Test	ECU Configure Info.	Special Function
2014	Ram 1500	ESM	○	●	●	●	●	○	○	
2014	Ram 1500	PTS	○	●	●	●	●	●	●	02ED 03B7
2014	Ram 1500	ITBM	○	●	●	●	●	○	○	
2014	Ram 1500	AMP	○	●	●	●	●	○	○	006D 0068
2014	Ram 1500	RFH	○	●	●	●	●	●	●	0443 0463 0442 052A 0414 051E 0444 043F 051B 051D 0445 052B
2014	Ram 1500	RADIO	○	●	●	●	●	●	●	
2014	Ram 1500	IPC	○	●	●	●	●	●	●	04B3 0456
2014	Ram 1500	ORC	○	●	●	●	●	●	●	02A1
2014	Ram 1500	ICS	○	●	●	●	●	●	●	
2014	Ram 1500	DTCM	○	●	●	●	●	●	●	
2014	Ram 1500	SCCM	○	●	●	●	●	○	○	
2014	Ram 1500	HVAC	○	●	●	●	●	●	●	00EA 03B9 02EA 02EB
2014	Ram 1500	DDM	○	●	●	●	●	●	●	
2014	Ram 1500	ASCM	○	●	●	●	●	○	●	046E 052D 046A 0466 0469 0468 046D 046C 0470
2014	Ram 1500	MSM	○	●	●	●	●	●	●	0455 0451 0454 044F 0452 0450 0453
2014	Ram 1500	PCM	○	●	●	●	●	●	●	03FC 03FD 03FE 04EE 054F 04EF 0127 03F3 0140 0126 0411 0403 040A 0401 0128 03FF 03F4 0407 040F 03B8 04ED 013C 012C 012D 0550 04EC 0551 0429 054B 054C 02F9 03F1 03F0 03F2 012A 02FA 040B 054E 012B 04F0 055F 0149 055C 055B 0431 05E1 0430 0560 05E4 0049 03DC 055E 05E2 055D 05DF 0432 042D 055A 0555 05E0 0554 0558 0556 0557 031D 03D8 054A
2014	Ram 1500	PDM	○	●	●	●	●	●	●	
2014	Ram 1500	TCM	○	●	●	●	●	○	●	047F
2014	Ram 1500	HSM	○	●	●	●	●	●	●	
2014	Ram 1500	BCM	○	●	●	●	●	●	●	02F1 0438 02F0 02F3 02EF 02F5 008F 003D 043B 043A 002E 0553 038F 022D 03C0
2014	Ram 1500	EPS	○	●	●	●	●	○	○	050B
2014	Ram (Mexico)	ABS	○	●	●	●	●	●	●	0433 03AB 0434
2014	Ram (Mexico)	ITBM	○	●	●	●	●	○	○	
2014	Ram (Mexico)	PCM	○	●	●	●	●	●	●	03FC 03FD 03FE 04EE 054F 04EF 0127 03F3 0140 0126 0411 0403 040A 0401 0128 03FF 03F4 0407 040F 03B8 04ED 013C 012C 012D 0550 04EC 0551 0429 054B 054C 02F9 03F1 03F0 03F2 012A 02FA 040B 054E 012B 04F0 0525 0521 0526 03EC 0523 0524 03C7 0313 0528 052F 0491 04AF 03CB 03C8 052E 0522 0478 0477 03EF 039A 0527 0552 054A
2014	Ram (Mexico)	IPC	○	●	●	●	●	●	●	04B3 0456
2014	Ram (Mexico)	BCM	○	●	●	●	●	●	●	02F1 0438 02F0 02F3 02EF 02F5 008F 003D 043B 043A 002E 0553 038F 022D 03C0
2014	Ram (Mexico)	HSM	○	●	●	●	●	●	●	
2014	Ram (Mexico)	VGT	○	●	●	○	○	○	○	
2014	Ram (Mexico)	EDM	○	●	●	●	●	●	○	
2014	Ram (Mexico)	PTS	○	●	●	●	●	●	●	02ED 03B7
2014	Ram (Mexico)	PDM	○	●	●	●	●	●	●	
2014	Ram (Mexico)	DCU	○	●	●	○	○	○	○	

YEAR	VehicleType	Control unit	Ecu info.	Read codes	Erase codes	Live Data	Freeze Frame	Active Test	ECU Configure Info.	Special Function
2014	Ram (Mexico)	ICS	○	●	●	●	●	●	●	
2014	Ram (Mexico)	HVAC	○	●	●	●	●	●	●	00EA 03B9 02EA 02EB
2014	Ram (Mexico)	VSIM	○	●	●	●	●	●	○	
2014	Ram (Mexico)	DTCM	○	●	●	●	●	●	●	
2014	Ram (Mexico)	RFH	○	●	●	●	●	●	●	0443 0463 0442 052A 0414 051E 0444 043F 051B 051D 0445 052B
2014	Ram (Mexico)	MSM	○	●	●	●	●	●	●	0455 0451 0454 044F 0452 0450 0453
2014	Ram (Mexico)	ASCM	○	●	●	●	●	○	●	046E 052D 046A 0466 0469 0468 046D 046C 0470
2014	Ram (Mexico)	SCCM	○	●	●	●	●	○	○	
2014	Ram (Mexico)	DDM	○	●	●	●	●	●	●	
2014	Ram (Mexico)	ORC	○	●	●	●	●	●	●	02A1
2014	Ram (Mexico)	EPS	○	●	●	●	●	○	○	050B
2014	Ram (Mexico)	RADIO	○	●	●	●	●	●	●	
2014	Ram (Mexico)	AMP	○	●	●	●	●	○	○	006D 0068
2014	Ram (Mexico)	TCM	○	●	●	●	●	●	●	047F 01EF
2014	Ram (Mexico)	ESM	○	●	●	●	●	○	○	
2014	ProMaster	PAM	○	●	●	●	●	○	○	
2014	ProMaster	HVAC	○	●	●	●	●	●	○	04FE
2014	ProMaster	BCM	○	●	●	●	●	●	●	003E 05E7 043B
2014	ProMaster	ABS	○	●	●	●	●	○	●	
2014	ProMaster	PCM	○	●	●	●	●	●	●	042A 03F6 03F7 042B 04EE 054F 04EF 0127 03F3 0140 0126 0575 0411 0404 040A 0128 042C 03F4 040C 04ED 013C 012C 012D 0550 0410 04EC 0551 054B 054C 02F9 03F1 03F0 03F2 012A 040D 054E 012B 0408 054A 0574 031D 05E9 0572 0565 0567 0049 03DC 055D 05E8 0554 0573 0556 0557 05EA
2014	ProMaster	ETM	○	●	●	●	●	○	●	
2014	ProMaster	ORC	○	●	●	●	●	○	●	
2014	ProMaster	TPM	○	●	●	●	●	●	●	
2014	ProMaster	TCM	○	●	●	●	○	●	●	044D 02BD 044E 044A 044C 01EF 044B
2014	ProMaster	IPC	○	●	●	●	●	●	○	
2015	Ram 3500 Pickup	IPC	○	●	●	●	●	●	●	04B3 0456 0530
2015	Ram 3500 Pickup	DDM	○	●	●	●	●	●	●	
2015	Ram 3500 Pickup	PDM	○	●	●	●	●	●	●	
2015	Ram 3500 Pickup	ASCM	○	●	●	●	●	○	●	052D 0466 0469 0468 046D 0470
2015	Ram 3500 Pickup	PCM	○	●	●	●	●	●	●	03FC 03FD 03FE 04EE 054F 04F0 04EF 0127 03F3 0140 0126 0411 0403 040A 0401 0128 03FF 03F4 0407 040F 03B8 04ED 013C 012C 012D 0550 0410 04F1 04EC 0551 0429 054B 054C 02F9 03F1 03F0 03F2 012A 02FA 040B 054E 012B 04F2 0525 0521 0526 03EC 0523 0524 03C7 0313 0528 0552 0491 04AF 03CB 0522 0478 0477 05EC 039A 0527
2015	Ram 3500 Pickup	MSM	○	●	●	●	●	●	●	0455 0451 0454 044F 0452 0450 0453
2015	Ram 3500 Pickup	ORC	○	●	●	●	●	●	●	02A1
2015	Ram 3500 Pickup	ITBM	○	●	●	●	●	○	○	
2015	Ram 3500 Pickup	HSM	○	●	●	●	●	●	●	
2015	Ram 3500 Pickup	TCM	○	●	●	●	●	●	●	01EF
2015	Ram 3500 Pickup	DTCM	○	●	●	●	●	●	●	

YEAR	VehicleType	Control unit	Ecu info.	Read codes	Erase codes	Live Data	Freeze Frame	Active Test	ECU Configure Info.	Special Function
2015	Ram 3500 Pickup	RADIO	○	●	●	●	●	●	●	
2015	Ram 3500 Pickup	VGT	○	●	●	○	○	○	○	
2015	Ram 3500 Pickup	BCM	○	●	●	●	●	●	●	02F1 0438 02F0 02F3 02EF 02F5 008F 03C0 003D 043B 043A 002E 038F 022D 0553
2015	Ram 3500 Pickup	RFH	○	●	●	●	●	●	●	0443 0463 0442 052A 0414 051E 0444 043F 051B 051D 0445 052B
2015	Ram 3500 Pickup	EDM	○	●	●	●	●	●	○	
2015	Ram 3500 Pickup	ICS	○	●	●	●	●	●	●	
2015	Ram 3500 Pickup	AMP	○	●	●	●	●	○	○	006D 0068
2015	Ram 3500 Pickup	SCCM	○	●	●	●	●	○	○	
2015	Ram 3500 Pickup	VSIM	○	●	●	●	●	●	○	
2015	Ram 3500 Pickup	ABS	○	●	●	●	●	●	●	0433 03AB 0434
2015	Ram 3500 Pickup	HVAC	○	●	●	●	●	●	●	00EA 03B9 02EA 02EB
2015	Ram 3500 Pickup	DCU	○	●	●	○	○	○	○	
2015	Ram 3500 Pickup	PTS	○	●	●	●	●	●	●	02ED 03B7
2015	Ram 3500 Cab Chassis	PCM	○	●	●	●	●	●	●	0525 0521 0526 03EC 0523 0524 03C7 0411 03F4 012D 0313 0528 0552 052F 0491 04AF 03CB 03C8 052E 0478 0477 03EF 05EC 039A 0527 03FC 03FD 03FE 04EE 054F 04F0 04EF 0127 03F3 0140 0126 0403 040A 0401 0128 03FF 0407 040F 03B8 04ED 013C 012C 0550 0410 04F1 04EC 0551 0429 054B 054C 02F9 03F1 03F0 03F2 012A 02FA 040B 054E 012B 04F2
2015	Ram 3500 Cab Chassis	DCU	○	●	●	○	○	○	○	
2015	Ram 3500 Cab Chassis	RADIO	○	●	●	●	●	●	●	
2015	Ram 3500 Cab Chassis	DDM	○	●	●	●	●	●	●	
2015	Ram 3500 Cab Chassis	EDM	○	●	●	●	●	●	○	
2015	Ram 3500 Cab Chassis	PDM	○	●	●	●	●	●	●	
2015	Ram 3500 Cab Chassis	MSM	○	●	●	●	●	●	●	0455 0451 0454 044F 0452 0450 0453
2015	Ram 3500 Cab Chassis	SCCM	○	●	●	●	●	○	○	
2015	Ram 3500 Cab Chassis	AMP	○	●	●	●	●	○	○	006D 0068
2015	Ram 3500 Cab Chassis	TCM	○	●	●	●	●	●	●	01EF
2015	Ram 3500 Cab Chassis	ICS	○	●	●	●	●	●	●	
2015	Ram 3500 Cab Chassis	ABS	○	●	●	●	●	●	●	0433 03AB 0434
2015	Ram 3500 Cab Chassis	ITBM	○	●	●	●	●	○	○	
2015	Ram 3500 Cab Chassis	VGT	○	●	●	○	○	○	○	
2015	Ram 3500 Cab Chassis	RFH	○	●	●	●	●	●	●	0443 0463 0442 052A 0414 051E 0444 043F 051B 051D 0445 052B
2015	Ram 3500 Cab Chassis	BCM	○	●	●	●	●	●	●	02F1 0438 02F0 02F3 02EF 02F5 008F 003D 043B 043A 002E 0553 038F 022D 03C0
2015	Ram 3500 Cab Chassis	ORC	○	●	●	●	●	●	●	02A1
2015	Ram 3500 Cab Chassis	HSM	○	●	●	●	●	●	●	
2015	Ram 3500 Cab Chassis	VSIM	○	●	●	●	●	●	○	
2015	Ram 3500 Cab Chassis	PTS	○	●	●	●	●	●	●	02ED 03B7
2015	Ram 3500 Cab Chassis	DTCM	○	●	●	●	●	●	●	
2015	Ram 3500 Cab Chassis	HVAC	○	●	●	●	●	●	●	00EA 03B9 02EA 02EB
2015	Ram 3500 Cab Chassis	IPC	○	●	●	●	●	●	●	04B3 0456 0530
2015	Ram 2500	VSIM	○	●	●	●	●	●	○	

YEAR	VehicleType	Control unit	Ecu info.	Read codes	Erase codes	Live Data	Freeze Frame	Active Test	ECU Configure Info.	Special Function
2015	Ram 4500/5500	PTS	○	●	●	●	●	●	●	02ED 03B7
2015	Ram 4500/5500	BCM	○	●	●	●	●	●	●	02F1 0438 02F0 02F3 02EF 02F5 008F 003D 043B 043A 002E 0553 038F 022D 03C0
2015	Ram 4500/5500	HVAC	○	●	●	●	●	●	●	00EA 03B9 02EA 02EB
2015	Ram 4500/5500	DDM	○	●	●	●	●	●	●	
2015	Ram 4500/5500	MSM	○	●	●	●	●	●	●	0455 0451 0454 044F 0452 0450 0453
2015	Ram 4500/5500	ABS	○	●	●	●	●	●	●	0433 03AB 0434
2015	Ram 4500/5500	HSM	○	●	●	●	●	●	●	
2015	Ram 4500/5500	AMP	○	●	●	●	●	○	○	006D 0068
2015	Ram 4500/5500	PCM	○	●	●	●	●	●	●	03FC 03FD 03FE 04EE 054F 04F0 04EF 0127 03F3 0140 0126 0411 0403 040A 0401 0128 03FF 03F4 0407 040F 03B8 04ED 013C 012C 012D 0550 0410 04F1 04EC 0551 0429 054B 054C 02F9 03F1 03F0 03F2 012A 02FA 040B 054E 012B 04F2 0525 0521 0526 03EC 0523 0524 03C7 0313 0528 0552 052F 0491 04AF 03CB 03C8 052E 0478 0477 03EF 05EC 039A 0527
2015	Ram 1500	ASCM	○	●	●	●	●	○	●	046E 052D 046A 0466 0469 0468 046D 046C 0470
2015	Ram 1500	BCM	○	●	●	●	●	●	●	02F1 0438 02F0 02F3 02EF 02F5 008F 03C0 003D 043B 043A 002E 038F 022D 0553
2015	Ram 1500	ESM	○	●	●	●	●	○	○	
2015	Ram 1500	PDM	○	●	●	●	●	●	●	
2015	Ram 1500	ITBM	○	●	●	●	●	○	○	
2015	Ram 1500	HSM	○	●	●	●	●	●	●	
2015	Ram 1500	IPC	○	●	●	●	●	●	●	04B3 0456
2015	Ram 1500	HVAC	○	●	●	●	●	●	●	00EA 03B9 02EA 02EB
2015	Ram 1500	RFH	○	●	●	●	●	●	●	0443 0463 0442 052A 0414 051E 0444 043F 051B 051D 0445 052B
2015	Ram 1500	DTCM	○	●	●	●	●	●	●	
2015	Ram 1500	AMP	○	●	●	●	●	○	○	006D 0068
2015	Ram 1500	PTS	○	●	●	●	●	●	●	02ED 03B7
2015	Ram 1500	PCM	○	●	●	●	●	●	●	03FC 03FD 03FE 04EE 054F 04F0 04EF 0127 03F3 0140 0126 0411 0403 040A 0401 0128 03FF 03F4 0407 040F 03B8 04ED 013C 012C 012D 0550 0410 04F1 04EC 0551 0429 054B 054C 02F9 03F1 03F0 03F2 012A 02FA 040B 054E 012B 04F2 055F 0149 055C 055B 0431 05E1 0430 0560 05E4 0049 03DC 055E 05E2 055D 05DF 0432 042D 055A 0555 05E0 0554 0558 0556 0557 031D 03D8
2015	Ram 1500	ICS	○	●	●	●	●	●	●	
2015	Ram 1500	DDM	○	●	●	●	●	●	●	
2015	Ram 1500	RADIO	○	●	●	●	●	●	●	
2015	Ram 1500	TCM	○	●	●	●	●	○	●	047F
2015	Ram 1500	SCCM	○	●	●	●	●	○	○	
2015	Ram 1500	ABS	○	●	●	●	●	●	●	0433 03AB 0434
2015	Ram 1500	EDM	○	●	●	●	●	●	○	
2015	Ram 1500	ORC	○	●	●	●	●	●	●	02A1
2015	Ram 1500	EPS	○	●	●	●	●	○	○	050B
2015	Ram 1500	MSM	○	●	●	●	●	●	●	0455 0451 0454 044F 0452 0450 0453

YEAR	VehicleType	Control unit	Ecu info.	Read codes	Erase codes	Live Data	Freeze Frame	Active Test	ECU Configure Info.	Special Function
2015	Ram 1500	VSIM	○	●	●	●	●	●	○	
2015	Ram (Mexico)	ORC	○	●	●	●	●	●	●	02A1
2015	Ram (Mexico)	ESM	○	●	●	●	●	○	○	
2015	Ram (Mexico)	SCCM	○	●	●	●	●	○	○	
2015	Ram (Mexico)	HVAC	○	●	●	●	●	●	●	00EA 03B9 02EA 02EB
2015	Ram (Mexico)	DDM	○	●	●	●	●	●	●	
2015	Ram (Mexico)	RADIO	○	●	●	●	●	●	●	
2015	Ram (Mexico)	BCM	○	●	●	●	●	●	●	02F1 0438 02F0 02F3 02EF 02F5 008F 003D 043B 043A 002E 0553 038F 022D 03C0
2015	Ram (Mexico)	AMP	○	●	●	●	●	○	○	006D 0068
2015	Ram (Mexico)	EDM	○	●	●	●	●	●	○	
2015	Ram (Mexico)	PTS	○	●	●	●	●	●	●	02ED 03B7
2015	Ram (Mexico)	PCM	○	●	●	●	●	●	●	03FC 03FD 03FE 0525 0521 0526 03EC 0523 0524 03C7 0411 0403 03FF 03F4 0407 040F 012D 0313 0528 0552 052F 0491 04AF 03CB 03C8 052E 0522 0478 0477 03EF 05EC 039A 0527 04EE 054F 04F0 04EF 0127 03F3 0140 0126 040A 0401 0128 03B8 04ED 013C 012C 0550 0410 04F1 04EC 0551 0429 054B 054C 02F9 03F1 03F0 03F2 012A 02FA 040B 054E 012B 04F2
2015	Ram (Mexico)	ITBM	○	●	●	●	●	○	○	
2015	Ram (Mexico)	VGT	○	●	●	○	○	○	○	
2015	Ram (Mexico)	HSM	○	●	●	●	●	●	●	
2015	Ram (Mexico)	ABS	○	●	●	●	●	●	●	0433 03AB 0434
2015	Ram (Mexico)	DTCM	○	●	●	●	●	●	●	
2015	Ram (Mexico)	ASCM	○	●	●	●	●	○	●	046E 052D 046A 0466 0469 0468 046D 046C 0470
2015	Ram (Mexico)	VSIM	○	●	●	●	●	●	○	
2015	Ram (Mexico)	ICS	○	●	●	●	●	●	●	
2015	Ram (Mexico)	DCU	○	●	●	○	○	○	○	
2015	Ram (Mexico)	TCM	○	●	●	●	●	●	●	01EF 047F
2015	Ram (Mexico)	MSM	○	●	●	●	●	●	●	0455 0451 0454 044F 0452 0450 0453
2015	Ram (Mexico)	PDM	○	●	●	●	●	●	●	
2015	Ram (Mexico)	RFH	○	●	●	●	●	●	●	0443 0463 0442 052A 0414 051E 0444 043F 051B 051D 0445 052B
2015	Ram (Mexico)	IPC	○	●	●	●	●	●	●	04B3 0456
2015	Ram (Mexico)	EPS	○	●	●	●	●	○	○	050B
2015	ProMaster	ETM	○	●	●	●	●	○	●	
2015	ProMaster	TCM	○	●	●	●	○	●	●	044D 02BD 044E 044A 044C 01EF 044B
2015	ProMaster	BCM	○	●	●	●	●	●	●	003E 05E7 043B
2015	ProMaster	ABS	○	●	●	●	●	○	●	
2015	ProMaster	ORC	○	●	●	●	●	○	●	
2015	ProMaster	TPM	○	●	●	●	●	●	●	
2015	ProMaster	PCM	○	●	●	●	●	●	●	042A 03F6 03F7 042B 04EE 04F0 04EF 0127 03F3 0140 0126 0575 0411 0404 040A 0128 042C 03F4 040C 03B8 04ED 013C 012C 012D 0550 0410 04F1 04EC 0551 02F9 03F1 03F0 03F2 012A 02FA 040D 054E 012B 04F2 0408 054A 0574 031D 05E9 0572 0565 0567 0049 03DC 055D 05E8 0554 0573 0556 0557 05EA

YEAR	VehicleType	Control unit	Ecu info.	Read codes	Erase codes	Live Data	Freeze Frame	Active Test	ECU Configure Info.	Special Function
2016	Ram (Mexico)	ASCM	●	●	●	●	●	○	●	046E 052D 046A 0466 0469 0468 046D 046C 0470
2016	Ram (Mexico)	ESM	●	●	●	●	●	○	○	
2016	Ram (Mexico)	HSM	●	●	●	●	●	●	●	
2016	ProMaster	ETM	●	●	●	●	●	●	●	0649 064A 05A7 05A8 0622 064B
2016	ProMaster	BCM	●	●	●	●	●	●	●	003E 05E7 043B
2016	ProMaster	PAM	●	●	●	●	●	○	○	5, 470, 546
2016	ProMaster	ABS	●	●	●	●	●	○	●	04E8 04EA 04E9 04E7
2016	ProMaster	TPM	●	●	●	●	●	●	●	0414 0232 0230 0231 022F 0413 04F7
2016	ProMaster	IPC	●	●	●	●	●	●	○	04FC 04FB
2016	ProMaster	EPB	●	●	●	●	●	●	○	
2016	ProMaster	RADIO	●	●	●	●	●	●	●	05A7 05A8 0622
2016	ProMaster	ORC	●	●	●	●	●	○	●	
2016	ProMaster	TCM	●	●	●	●	●	●	●	044D 02BD 044A 01EF 044B
2016	ProMaster	HVAC	●	●	●	●	●	●	○	
2016	ProMaster	PCM	●	●	●	●	●	●	●	0574 031D 0572 0565 0567 0049 03E5 03DC 055D 05E8 0554 0573 0556 0557 05EA 042A 03F6 03F7 042B 04EE 054F 04F0 04EF 0127 03F3 0140 0126 0575 0411 0404 040A 0128 042C 03F4 040C 03B8 04ED 013C 012C 012D 0550 0410 04F1 04EC 0551 02F9 03F1 03F0 03F2 012A 054A 02FA 040D 054E 012B 04F2 0408
2016	ProMaster City	ESM	●	●	●	●	●	○	○	
2016	ProMaster City	ETM	●	●	●	●	○	●	●	0649 064A 05A7 05A8 0622 064B
2016	ProMaster City	TPM	●	●	●	●	○	●	●	058F 0232 0230 0231 022F 0413 04F7
2016	ProMaster City	ORC	●	●	●	●	○	○	○	
2016	ProMaster City	RADIO	●	●	●	●	○	○	●	
2016	ProMaster City	HVAC	●	●	●	●	●	●	○	
2016	ProMaster City	PCM	●	●	●	●	●	●	●	04EE 04F0 04EF 0127 03F3 0140 0126 0411 040A 0128 03F4 03B8 04ED 013C 012C 012D 0550 04F1 04EC 0551 02F9 03F1 03F0 03F2 012A 03E5 02FA 054E 012B 04F2
2016	ProMaster City	TCM	●	●	●	●	●	○	●	0391 047F 0564 0563
2016	ProMaster City	BCM	●	●	●	●	●	●	●	043B 04E5
2016	ProMaster City	PAM	●	●	●	●	●	○	○	
2016	ProMaster City	TTM	●	●	●	●	●	○	●	
2016	ProMaster City	IPC	●	●	●	●	●	●	○	
2016	ProMaster City	ABS	●	●	●	●	●	●	○	04E8 04EA 04E9 0549 0514

Specil_Function

Index	Specil Function Name	Index	Specil Function Name
00E3	HFM Self Test	00E8	Actuator DTC Detection
00E9	Cool Down Test	00E5	Calibrate HDT Module
0001	Calibrate G-Sensor	0002	Bleed Brakes
0003	Drive Test	03E0	Compression Test (Engine NOT Running)
0004	AEHM Actuate Heater Booster	0005	Gauge Sweep Test
05E0	SCR System Catalyst Reset	0006	Speaker Test
0007	CCN Display Dimmer Test	0008	CCN LCD Display Test
0009	Oil Change Reset	0012	Learn Motor
0013	Reset ORC	0014	ORC Initialize ECU
0018	TCM Reset Learned Adaptives	02E1	Disable In Plant Mode
0020	Reset Adaptive Memory	0021	Throttle Valve Initialization
0022	Fuel Pump Activation	0023	Engine ECU Replaced (Drive Authorization)
0024	Camshaft Reference Adaptation	0025	O2 Sensor Monitor Test
0030	Bleed Brakes 2WD	03E1	Injector Circuit Test
0031	Bleed Brakes 4WD	0032	Disable Radio Clock Display
0033	Sound Horn On Lock	0034	Horn Chirp Duration
0035	Headlamps On With Wipers	0036	Flash Hazard Lamps On Lock
0037	Headlamps Delay Time	0038	Illuminated Entry Time
0039	Accessory Time Delay	0040	Trailer Tow Relay Outputs
0041	Radio Initialization	0042	Compression Test
0043	Exhaust Throttle Plate Adaptive Learn	0044	Injector Kill System Test
0045	Diesel Particulate Filter (New) Initialization	0046	Diesel Particulate Filter (Used) Learning
0049	Injector Quantity Adjustment	05E1	Clear DEF Pump Learned Offset Values
0058	Bleed Brakes:LX	0059	Bleed Brakes:WK
0060	Initialize ESP Module:PT	0062	Initialize ESP Sensor
0064	ACC Cutout Reasons Clear	0065	Align ACC Sensor
0066	Aim Test	0067	AHBM Self Test
0068	AMP Software Test	0069	AMP Channel Output Channel Test
0073	AMP Mute Channel:7 Channel	0079	AMP Multiple Mute Channel
0081	Reset ECU	0090	Unlock Driver Door On 1st Press
0091	Change Measurement Units	0092	Measurement Unit
0094	Language Preference	0096	Seatbelt Alert System
0097	CCN Gauge Test	0098	Service Interval - Gas
0099	Service Interval - Diesel	0104	ITM Siren Test
0106	ITM Initialize Siren	0107	ITM and Siren Communication Test
0114	Drive All Motors	0115	Standardization Routine
0116	Easy Entry/Exit Feature	0117	Key Fobs Linked to Memory Feature
0119	Tilt Mirrors in Reverse Feature	0122	Rollover Detection
0126	ETC Throttle Follower Test	0127	EGR System Test
0128	Purge Vapors System Test	0129	NVLD Forced Monitor Test
0140	ESIM Forced Monitor Test	0141	GENERATOR FULL FIELD TEST
0142	Cylinder Fuel Quantity Correction Test	0144	Program Variant Code
0145	Set RPM System Test	0146	NOx Catalyst(New) Initialization
0147	NOx Catalyst(Used) Learning	0148	IMA Rapid Calibration
0149	Cylinder Balance Test	0150	Set RPM System Test - Automatic Transmission
0151	Set RPM System Test - Manual Transmission	0152	VIEW/RESET TRIP INFORMATION ACCUMULATORS
0153	TORQUE CONVERTER CLUTCH TEST	0154	FUEL PRESSURE OVERRIDE - Automatic Transmission
0155	FUEL PRESSURE OVERRIDE - Manual Transmission	0156	CYLINDER PERFORMANCE TEST - Automatic Transmission
0157	CYLINDER PERFORMANCE TEST - Manual Transmission	0158	IDLE UP FEATURE ENABLE
0159	TVA SPAN TEST	0166	1st Gear Clutch Test:RWD
0167	1st Gear Clutch Test:FWD	0169	2nd Gear Clutch Test:RWD
0170	Quick Learn:NOT RFE	0172	Shift Lever Position Test:RFE
0173	FCM Enable Emissions Rolls Test Mode	0175	TCC Break-In

Index	Specil Function Name	Index	Specil Function Name
0176	Overdrive Switch Test	0177	Clear Variable Line Pressure (VLP) Counters
0178	Reset NOx Adsorber Counts	0179	Reset Pressure limiting Valve Accumulators
0193	Leak detection pump test	02E2	Program Tire Size:KK
0211	PT Restore Customer Preference	0214	Combined Rear Lighting
0215	Program Tire Size:PM or MK	0219	Auto Wipers
0225	Program Ignition Keys or Key FOBs:SKIM	0226	Program Ignition Keys or Key FOBs:RKEONLY
0227	WCM Replaced	0228	PCM Replaced
0230	Program Left Rear Tire Sensor ID	0231	Program Right Front Tire Sensor ID
0232	Program Left Front Tire Sensor ID	0233	TPM Trigger Module Test
0240	PCM Replaced 1.6L Only	0245	WIN Replaced
0247	Tire Pressure ECU Replacement with Manual Initialization	0259	Manual Top Movement
0260	2 Prime Gear Clutch Test:RFE	0261	2nd Gear Clutch Test:RFE
0262	2nd Gear Clutch Test:NonRFE	0263	3rd Gear Clutch Test:RFE
0264	3rd Gear Clutch Test:NonRFE	0265	Reverse Gear Clutch Test:RFE
0266	Reverse Gear Clutch Test:NonRFE	0269	TCC BreakIn
0270	WCM Replaced Var 5 non TPM	0271	WCM Replaced Not Var 5 non TPM
0272	WK:Enable DRL	0273	XK:Enable DRL
0274	WCM Replaced Non TPM	0276	Mobile DeSoot - Minimum Required Soot Load
0277	Mobile DeSoot - No Minimum Required Soot Load	0278	Reset Regenerative Filter Timers
0280	Neutral Gate Test:RFE	0281	Neutral Gate Test:NOT RFE
0285	Initialize ABS Non ESP	0289	AMP Channel Output Channel Test:6 Channel
0290	Direct Gear Clutch Test:68RFE	0291	3rd Gear Clutch Test:68RFE
0292	Enable / Disable Vehicle Features:pu	0293	Remote Start Override
0300	Reset WIN Configuration	03E2	HPV Electrical Circuit Test
0303	AMP Tone Test with volume control	0304	Engine On Odometer
0305	Anti-Theft Override Test	0306	Denormalize Window
0307	PEM Replace	0310	Cruise Control Data
0311	Manual DPF Regeneration	0312	ECM Replacement
0313	DPF Replacement	0314	Adaptive Numerator Learn
0317	Smart Bar Motor Self Test	0318	Sway Bar Telltale Fast Blink Actuator
0319	Sway Bar Telltale Slow Blink Actuator	0321	ACC Exit In-Plant Mode
0323	IR Sensor Data	0324	Rear AC and Rear Wiper Wash Data Display
0325	LDP Forced Monitor Test	0326	View Adaptive Numerator Status
0330	Customer Programmable- Daytime Running Lamps	0331	Customer Programmable- Language
0332	Customer Programmable- Speedometer/Odometer Units	0333	Customer Programmable- Temperature
0334	Pushbutton Test	0336	Set Maximum Vehicle Speed
0337	Set High Idle Allowed Speeds	0340	Non-Volatile Memory Reset
0342	Ramp Van Configuration	0343	Actuate Drive Clutch Engage
0346	Write Left Rear Seat Position	0347	Write Right Rear Seat Position
0350	Hybrid Battery Contactor Test	0351	HVIL Operating Status
0352	View Battery Monitoring Information	0353	View Battery Warranty Information
0354	Reset Weld Check Fault	0355	View Isolation Test Results
0356	View Hybrid Battery Reasons Contactor Not Closing When Commanded	0357	View Stored Reasons Contactor Not Closing When Commanded
0358	View Stored Hybrid Battery Reasons Contactors Opened	0360	Replace TCM
0361	View Battery Pack Information	0365	Enable Jump Assist Mode
0367	Regulation of Low Voltage Control	0368	Reset High Voltage Impact Event
0369	Trans Aux Pump Speed	0372	Sensor Connectivity and HMI Test
0373	Program Tire Size for EATX	0374	Program Tire Size for EGS 52
0378	ATC Data Display	0379	PTO RPM Adjustment
0380	TCM Initialization	0381	Enable Emissions Rolls Test Mode (FCM)
0382	Change Language Preference	0383	Update Measurement Unit
0385	ITM Initialize	0386	Enable Emissions Rolls Test Mode (TIPM)
0387	Relearn TIPM VIN	0388	Sound Horn on Lock

Index	Specil Function Name	Index	Specil Function Name
0389	Headlamps on with Wipers	0390	Tip Start Temporary Disable
0391	QuickLearn	0392	1st Gear Clutch Test RFE
0393	2nd Gear Clutch Test RFE	0394	2nd Prime Clutch Test RFE
0395	3rd Gear Clutch Test RFE	0396	Reverse Gear Clutch Test RFE
0398	Fuel System Run Up Test	0399	High Pressure Fuel System Test
0400	Overdrive Switch Test (Non-RFE)	0401	Overdrive Switch Test (RFE)
0402	Neutral Gate Test (Non-RFE)	0403	Neutral Gate Test (RFE)
0404	Neutral Gate Test (62TE)	0406	Shift Lever Position Test (Non-RFE)
0407	Shift Lever Position Test (RFE)	0408	TCC Break-In (62TE)
0409	TCC Break-In (Non-RFE)	0410	Clear Learned Variable Line Pressure (VLP) Counters
0411	Injector Kill Test	0412	Heated Steering Wheel Configuration
0414	TPM Sensor Rolls Test	0415	Trans Adapt Reset Trigger
0416	Check TCM VIN	0417	Trans Cleaning Procedure
0420	High Voltage Contactor Circuit	0421	Secondary Air Service Test
0422	Check APM VIN	0423	Lambda Sensor 1 Initialization
0424	IMA Quick Calibration	0425	Request Anti-Slugging For Air Condition Compressor
0427	Oxidation Catalyst Initialization	0428	Fuel Mean Value Adaption Initialization
0429	Enable Emissions Rolls Test Mode (PowerNet)	0430	DPF Reset Option
0431	Air Flow Meter Replace	0432	Reset Oil Change Indicator
0433	ABS Bleed Brakes	0434	Brake Pedal Calibration
0435	Sensor Rolls Test	0436	Initialize Siren
0437	ITM Self Test	0438	View Last VTA Trigger Cause Data
0440	Immobilizer Antenna Test	0441	ELV Replace
0442	Locate Learned Keys	0443	Door Handle Verification Test
0444	Erase Ignition FOBs	0445	RF-HUB Replace
0446	TGW Tone Test	0447	Stop Start Confirmation
0449	Ultrasonic Self Test	0450	Standardization
0451	MSMD Self Test	0452	Key Fobs Linked to Memory
0453	Tilt Mirrors in Reverse	0454	Clear All Learned Seat Parameters
0455	Actuate Seat Recall	0456	Disable/Enable Seatbelt Minder Chime
0458	Activate TPM High Gain Mode	0459	TPM Sensor Position Parameter Update
0460	Learn Side Identifier	0461	Sliding Door Close Test
0463	LF Antenna Verification Test	0464	Record Curb Sensor Values
0465	ESCL Replaced	0466	Fill Spring From Reservoir
0467	Atmosphere Valve Actuator Test	0468	Set Ride Height Level
0469	Height Sensor Check	0470	Write Suspension Height Values
0471	Enable/Disable Air Suspension for ITM	0472	Configure Suspension Type
0473	ELSD Quicklearn	0474	System Functionality Test
0476	Program Tire Size/Pinion Factor	0477	Set Max Vehicle Speed
0478	Set Max Cruise Speed	0479	2nd Gear Clutch Test 62TE
0480	HIDT Calibration	0481	Quicklearn (62TE - PCM Var16)
0482	Learn ETC (NGC4)	0483	Acutate Fuel Pump
0484	Enable/Disable Front Fog Lamp	0485	Initialize ABS
0486	Cylinder Performance Test	0487	Torque Converter Clutch Test
0488	Enable / Disable Vehicle Feature	0489	NOx Catalyst (Used) Learning
0490	Reverse Gear Clutch Test:Non RFE	0491	Enable / Disable Vehicle Features
0493	Program Ignition Keys SKIM only	0494	Program RKE Only Keys
0495	Reverse Gear Clutch Test 68RFE	0496	Direct Gear Clutch Test 68RFE
0497	3rd Gear Clutch Test 68RFE	0498	2nd Gear Clutch Test 68RFE
0499	1st Gear Clutch Test 68RFE	05E2	Reset Error Free Operation Time to 40 Hours
0504	Reset Accelerator Pedal Adaptives	0506	Brake Switch Learn
0507	Air-Conditioning Self Learning	0509	Clear Misfire TLC
0510	Clear Learned Values	0511	Air-Conditioning Self-Learning
0512	Throttle Body Self-Learning	0513	Longitudinal G-Sensor Calibration
0514	Steering Angle Sensor Calibration	0516	Sound Horn on Remote Start
0517	Enable Auto Highbeam	0518	Compass Calibration
0519	Enable the One Press All Unlock Feature	0521	Catalyst Efficiency Test
0522	Quicklearn RFE	0523	DEF Reductant Doser Prime Override Test
0524	DEF Reductant Doser Pump Override Test	0525	Alternator(s) Test

Index	Specil Function Name	Index	Specil Function Name
0526	DEF (Reductant) Pressure Line Heater Test	0527	Turbo Actuator Pre-Align / Self Calibrate
0528	Dual Alternator Enable / Disable	0530	Fleet PIN Reset
0531	Swap Line Test	0532	RBC Sensor Calibration
0533	Bleed Brakes Verification Test	0534	PTS Calibration
0539	High Voltage Battery Drain	0540	Learn Mis-Fire Adaptive Numerator
0541	LIN Line Request Check	0543	Configure Door Locks
0550	Clear Engine Auto Restart Crank Counter	0551	Cooled EGR H-Bridge Valve System Test
0552	Dual Fuel Tank Enable / Disable	0553	Rear View Camera Grid Lines
0554	SCR System Dosing Module Replacement	0555	SCR System After ECU Replacement Procedure
0556	SCR System Tank Pump Replacement	0557	SCR System Wiring Harness Replacement
0558	SCR System Pressure Line Replacement	0560	ECU Replaced With Value Transfer
0562	Calibrate Liftgate	0563	Valve Body Solenoid Learn
0564	TCM VIN Verification	0565	ECU Replaced Without Value Transfer
0566	Neutral gear position learning	0567	Initialize Air Flow Sensor Values
0568	Rear Differential Bleed	0569	Reset PTU Shift Counter
0570	ABS Valve Calibration	0572	DPF Pressure Sensor Reset
0573	SCR System Procedure After ECU Replacement	0574	SCR DEF Dosing Injection Quantity
0575	High Speed Fan Test	0576	Fuel Pressure Override Test
0577	Clear DTCs	0578	Hydraulic Valve Test
0579	Disable In-Plant Mode	0580	Tone Output Test
0581	Actuate Mode Doors	0582	Program RKE
0583	RKE Horn Chirp	0584	Enable VTSS
0585	Disable EU DRL	0586	Reset Oil Change Light Service Information
0586	Radio EQ Setting	0587	RKE Unlock Sequence
0587	Reset Wrench Light Service Information	0588	Rolling Door Locks
0589	Calibrate HVAC Door Motors	0590	Enable VTSS Tamper Alert
0591	Headlamps On W/Wipers	0592	Initialize VIN
0593	Primary Fuel Tank Data	0594	Secondary Fuel Tank Data
0595	Optical Horn Chirp	0596	Reset Customer Preferences
0597	Reset Learned Features	0598	Headlamp Delay
0599	Toggle Horn Chirp	0599	Enable Front Fog Lamp Dropout
0600	Enable Fleet DRL	0601	Init Learned Features
0602	Input Test	0603	Speaker Output Test
0604	Continuous Tone Test	0605	PCI Amplifier Test
0606	Mute Output Test	0607	Reset Amplifier
0608	Vin Verification	0609	Identify EQ
0610	Initialize Learned Features	0611	Configure for Radio Clock
0612	Wiper Actuation Test	0613	Input/Output Test
0614	Reset HVAC Module	0615	Actuator Circuit Test
0616	Disable Ambient Temp Sensor	0617	Enable Ambient Temp Sensor
0618	Reset Rear Blend Sw Span	0619	Navigation Voice Test
0620	Verify OCS	0621	Clear VIN Mismatch
0622	Configure for AOSIM	0623	Configure for Side Airbags
0624	Door Close Test	0625	TRD Link
0626	EATX DTC Event Data	0627	Enable Illuminated Entry
0628	Check VTSS Mode	0629	Instrusion Sensor Test
02E3	Program Tire Size:JC	03E3	High Pressure Fuel Rail Test (Engine Running)
8001	TPM Train Tires	8002	Stop Tire Training
8003	WCM Replaced - Gas	8004	PCM Replaced - Gas
8005	WCM Replaced - Diesel	8006	PCM Replaced - Diesel
8007	Erase Key FOBs Only	8008	Program Key FOBs
8009	View SKREEM VIN	8012	Enable VTSS
8015	Rolling Door Locks	8017	Optical Horn Chirp
8018	Horn Chirp	8023	Original VIN Read
8024	Current VIN Read	8050	Clear Learned Features
8051	Seatbelt Alert System 2007	8052	Seatbelt Alert System 2006
8057	RKE Unlock Sequence	8058	Update Model Year to 2007
8070	Oil Change	03E4	LRSM Re-Adaption
05E4	EGR Coolant Regeneration	04E5	Fire Protection System Activate

Index	Specil Function Name	Index	Specil Function Name
03E6	Program Ignition Keys or Key FOBs	04E6	Program Keys
05E6	Enable Trailer Tow Lamps	02E7	Downstream O2 Response Monitor
03E7	Enable/Disable DRL	05E7	Enable Heated Mirrors
03E8	DEF (Reductant) Doser Pump Override Test	05E8	SCR Reset Options
03E9	DEF (Reductant) Pressure Line Heater Tester	05E9	Closed Couple Replacement
000A	Personalize with Electronic Ignition Switch	001A	Left Front Tire Pressure Signal Transmission Test
001B	Left Rear Tire Pressure Signal Transmission Test	001C	Right Front Tire Pressure Signal Transmission Test
001D	Right Rear Tire Pressure Signal Transmission Test	001E	Check/Write VIN
002A	Replace Steering Column Lock	002B	Program New Ignition Key FOB
002C	Erase All Keys and Program New Ignition Key FOB	002E	Program Tire Size
002F	Bleed Brakes ABS only	003A	Program Network Configuration
003C	Add Navigation Radio	003D	Change Country Code
003E	Enable Front Fog Lamp Output	003F	Enable DRL
004E	View Electronic TPM ID	005A	Cycle Stop Lamp Relay
005B	Initialize Steering Angle Sensor	005C	Initialize ESP Module:LX
005D	Initialize ESP Module:WK	005E	Initialize ABS Module
005F	Initialize ESP Module:WK-Non ESP	006A	AMP Tone Test
006B	AMP Mute Channel:6 Channel	006C	AMP Mute Channel:8 Channel
006D	AMP Input Test	007D	Program Tire Size:CS
007E	Enable FCM/IPM Diagnostics	008C	CCN Self Test
008D	Disable Seatbelt Minder Chime	008E	Auto Door Unlock
008F	Auto Door Lock	00AC	Mirror Position Test
00B4	Latch Cinch Test	00B5	Latch Release Test
00B6	Learn Latch Sector Home	00BA	EOM Self Test
00BC	Self Test	00C4	Enable Cruise Control
00C6	Tip Start Override	00C8	Police VTA
00C9	Program Tire Size:ND	00D5	HB and HG:Enable DRL
00D6	ND:Enable DRL	00D8	HB and HG:Program Tire Size
00D9	ND:Program Tire Size	00DA	WK and XK:Program Tire Size
00DB	ND:Enable Cruise Control	00EA	Actuator Calibration Test
00EB	Actuator Calibration Test DR	00EC	HVAC Self Test
010A	Initialize ITM	010D	Initialize Optical Paths
011E	OCM System Verification Test	012A	Learn ETC
012B	Reset Memory	012C	Check PCM Odometer
012D	Check PCM VIN	012E	Set RPM Test - ETC Equipped
012F	Set RPM Test - non - ETC Equipped	013B	TIPM Enable Emissions Rolls Test Mode
013C	Cam Crank Relearn	013E	ETC System Test
014A	Fuel Mean Value Adaptation Initialization	014B	Exhaust Throttle Plate Adaptive Learn Position
014D	Manual Diesel Particulate Filter Regeneration	014F	VIEW/RESET DUTY CYCLE ACCUMULATORS
015A	TVA AUTO ZERO TEST	016A	2nd Gear Clutch Test:FWD
016B	3rd Gear Clutch Test:RWD	016C	3rd Gear Clutch Test:FWD
016D	Reverse Gear Clutch Test:RWD	016E	Reverse Gear Clutch Test:FWD
016F	Quick Learn:RFE	017A	Reset Aftertreatment Trip Information
017B	Enable / Disable Vehicle Features:cc	018D	Check Vin
01B3	Sensor Versions	01B4	Sensor Functional Test
01B5	Sensor Wiring Test	01B8	Configure PTS
01BB	Radio Tone Test	01D2	Erase All Ignition Keys
01DA	WCM TPM Sensor Test	01DE	Program Spare Tire Sensor ID
01EE	2 Prime Gear Clutch Test	01EF	Quick Learn
01F0	Shift Lever Position Test:NON RFE	01F1	Clear Variable Line Pressure (VLP)
01F2	Store Learned Adaptives	01F3	Reset Learned Adaptives
01F4	Initialize EGS-52	01F5	CVT Initialization
01F6	Enable or Disable Mobile PTO	01FB	Quick Learn:Non-RFE
01FC	Thermistor Test	020E	Program Tire Size:DR
021F	Program Tire Size:KA	022D	Update Pressure Thresholds
022E	ELV Replaced	022F	Program Right Rear Tire Sensor ID
023D	WCM Replaced 1	023E	WCM Replaced 2

Index	Specil Function Name	Index	Specil Function Name
023F	PCM Replaced SRT-10 Only	024E	Overdrive Switch Test:RFE
025D	Enable/Disable Front Seat Video	025E	1st Gear Clutch Test:RFE
025F	1st Gear Clutch Test:NonRFE	026C	02 Heater System Test:1bank
026D	02 Heater System Test:2bank	026E	Mass Air Flow Sensor Initialization
026F	Rail Pressure Initialization	027B	1st Gear Clutch Test:62TE
027C	2nd Gear Clutch Test:62TE	027D	3rd Gear Clutch Test:62TE
027E	Reverse Gear Clutch Test:62TE	027F	AMP Mute Channel:No Channel 7
028A	AMP Channel Output Channel Test:8 Channel	028B	AMP Channel Output Channel Test:7 Channel
028D	AMP Channel Output Channel Test:No Channel 7	028E	Program Tire Size:PT No TCM
028F	Program Tire Size:PM or MK No TCM	029F	Calibrate AHLM
02A1	Initialize ORC	02A4	Clear Remote Start Inhibit Reasons
02A5	Clear Remote Start Abort Reasons	02A6	Clear Last Successful Remote Start
02A7	Antenna Loop Test	02AD	OCM Rezero Procedure
02AF	Actuate TracRite Unlock LED	02B0	Actuate TracRite Unlock RR LED
02B1	Actuate TracRite Unlock FR/RR LED	02B2	Actuate SmartBar On-Road LED
02B3	Actuate SmartBar Off-Road LED	02B5	Actuate SmartBar Motor
02B9	Differential Pressure Sensor Replacement	02BA	Diesel Particulate Filter Replacement
02BB	Reset Mass Airflow Values	02BD	ECU Replacement With Value Transfer
02BE	ECU Replacement Without Value Transfer	02BF	Display Diesel Particulate Filter Values
02C0	Reset Inhibiting Timer	02C1	Set Oil Dilution Mass Value
02C2	View Oil Dilution Mass Value	02C3	Hard Top / Soft Top Configuration
02C5	Battery Pack Fan Test	02CE	Change Cruise Control Mode
02CF	Sensors:Busse Inputs:and Busse Outputs	02D0	Verify Front TPM Antenna
02D1	Verify Rear TPM Antenna	02D2	All LED and Sound
02D3	LED Zebra Display	02D4	TCC Solenoid Test
02D5	Transmission Shift Solenoids Test	02D6	Modulator Solenoid Test
02D7	Shift Pressure Solenoid Test	02DC	Accessory Delay Time
02DD	Illuminated Approach Time	02EA	First Pass Cool Down Test Results
02EB	Most Recent Cool Down Test Results	02ED	System Wiring Test
02EE	Actuate Memory Seat and Pedals	02EF	View Remote Start Inhibit Data
02F0	View Remote Start Abort Data	02F1	View Last Successful Remote Start Event Data
02F2	View Last VTA Trigger Cause	02F3	View Remote Start Enable Data
02F5	View VTA Enable Data	02F7	TPM Sensor Test
02F8	4th Gear Clutch Test:62TE	02F9	Exhaust Phaser 1 Cleaning
02FA	New Engine Installed	02FB	SRV Test
02FF	PCM Replaced Cummins	030C	Actuate Transmission Relay
030E	Actuate Engine Battery Feed	031A	Sway Bar Telltale Off Actuator
031B	Sway Bar Telltale On Actuator	031D	Service Diesel Particulate Filter Regeneration
032D	Activate/Deactivate Cruise Control	032E	Update Service Interval
032F	Customer Programmable- Clock	033A	VIEW/RESET DUTY CYCLE ACCUMULATORS:03
033B	Mobile DeSoot - No Minimum Required Soot Load Var03	033C	Mobile DeSoot - No Minimum Required Soot Load Var05
033D	Aisin Trans Data	033F	TPM Trigger Module Test DH
034A	Aux Heater Coolant Pump Temp Test	034B	EVAP Temp Target Speed
034C	Resolver Offset Learn Trigger Test	034E	Reset Active Discharge Fault
034F	Hybrid Battery Contactor Status	035B	Shift Lever Position Test
035C	Trans Adapts Reset Trigger	035D	Trans Fast Learn Trigger
035E	Trans Line Pressure	035F	Transmission Cleaning Procedure
036A	Hybrid Trans Start/Stop	036B	Replace HCP
036C	High Voltage Battery Charge	036D	Transmission Motor Control
036E	View Strong Hybrid Limp In Status	036F	View HV Charge Mode Status and Amp Hours of Algorithm Charge
037A	EVR Enable/Disable	037D	Auxiliary Fuel Filter Enable
038A	Calibrate Liftgate Full Close Position	038B	Calibrate Liftgate Full Open Position
038C	Initialize EGS	038D	Seatbelt Alert Minder
038F	Remote Start Temporary Disable	039A	Stationary Desoot
039B	VG Turbo Cleaning Procedure	039E	Radio Anti Theft Override Test
039F	Radio Hard-drive Back-up	03A1	Unlock All Doors First Press
03A2	Update Radio Market Select and DVD Region Code	03A3	Flexible Oil Change Indicator Reset

Index	Specil Function Name	Index	Specil Function Name
03A4	Set Oil Type	03A9	First Passed Cool Down Test Results
03AB	ABS Initialization	03AC	Calibrate Full Recline
03AD	Calibrate Stow	03AF	1st Gear Clutch Test - 62TE
03B0	2nd Gear Clutch Test - 62TE	03B1	3rd Gear Clutch Test - 62TE
03B2	4th Gear Clutch Test - 62TE	03B3	Reverse Gear Clutch Test - 62TE
03B4	Quicklearn - 62TE	03B6	Neutral Gate Test
03B7	Configure License Plate Size	03B8	VVT System Test
03B9	HVAC Cool Down Test	03BB	Vacuum Pump Rezero
03C0	Auto High Beam Aim Test	03C1	Reset Regen Filter Timers
03C2	View/Reset DOC After Treatment Over Temp Events	03C3	View/Reset DPF After Treatment Over Temp Events
03C4	View/Reset Duty Cycle Maps	03C6	VG Turbocharger Cleaning Procedure
03C7	Fuel Pressure Override	03C8	Oil Change Monitor Type
03C9	View/Reset NAC After Treatment Over Temp Events	03CB	Idle Shutdown Timer Adjustment
03CC	Activate Driver and Passenger Head Restraint	03CD	Rollover Detection TRW Only
03CE	Ultrasonic Motion Detection Test	03CF	Siren Test
03D0	EGR/ECU Self Test	03D2	Program Variant Coding
03D3	DPF Regeneration	03D4	New DPF Initialize
03D5	VGT Learn	03D6	Swirl Control Learn
03D8	Throttle Valve Learn	03D9	Engine ECU Replacement
03DA	Injector Accelerated Drift Learn	03DB	Mass Airflow Sensor Replace
03DC	O2 Sensor Replace	03DD	Fuel Rail Pressure Control Test
03DE	IMV Electrical Circuit Test	03DF	Engine Coolant System Air Purge
03EA	DEF (Reductant) Return Line Heater Test	03EB	DEF (Reductant) Suction Line Heater Test
03EC	DEF (Reductant) Tank Heater Test	03ED	DEF (Reductant) Doser Prime Override Test
03EE	View/Reset DEF (Reductant) Doser Purge Count Reset	03EF	Set PTO Max Vehicle Speed
03F0	Intake Phaser 1 Cleaning	03F1	Exhaust Phaser 2 Cleaning
03F2	Intake Phaser 2 Cleaning	03F3	Electric Vacuum Pump Test
03F4	Set Engine RPM	03F5	QuickLearn (Non-RFE)
03F6	2nd Gear Clutch Test (62TE)	03F7	3rd Gear Clutch Test (62TE)
03F8	1st Gear Clutch Test (Non-RFE)	03F9	2nd Gear Clutch Test (Non-RFE)
03FA	3rd Gear Clutch Test (Non-RFE)	03FB	Reverse Gear Clutch Test (Non-RFE)
03FC	1st Gear Clutch Test (RFE)	03FD	2nd Gear Clutch Test (RFE)
03FE	3rd Gear Clutch Test (RFE)	03FF	Reverse Gear Clutch Test (RFE)
040A	O2 System Heater Test	040B	Quicklearn (RFE)
040C	Thermistor Test (62TE)	040D	Quicklearn (62TE)
040E	Thermistor Test (Non-RFE)	040F	Thermistor Test (RFE)
041C	HV Battery Open Cable Detected Fault Reset	041E	Constrain Battery Power Limits
041F	Check HCP VIN	042A	1st Gear Clutch Test (62TE)
042B	4th Gear Clutch Test (62TE)	042C	Reverse Gear Clutch Test (62TE)
042D	Reset Zero Fuel Quantity Calibration	042E	Reset of Lambda values
042F	Lambda Sensor Replace	043A	Light Rain Sensor Re-Adaption
043B	Exit Shipping Mode	043F	Program Ignition FOBIS
044A	Learn Clutches Contact Point	044B	Reset of Data group
044C	New Actuators	044D	Bleed Hydraulic Circuit
044E	Hydraulic Circuit depressurization	044F	Easy Entry/Exit
045B	AFLS Calibration	045C	Actuator Calibration
045D	Front Blower State	045E	Rear Blower State
045F	First Passed Cooldown Test Results	046A	Disable Level Control
046B	Measure System Air Mass	046C	Spring Deflate to Reservoir
046D	Spring Deflate to Atmosphere	046E	Air Spring Circuit Test
046F	System Pressure Measurement	047A	3rd Gear Clutch Test 62TE
047B	4th Gear Clutch Test 62TE	047C	1st Gear Clutch Test 62TE
047D	Quicklearn (62TE - PCM Var17)	047E	Initialize EPPM
047F	Reset Adaptive Values	048A	NOx Catalyst (New) Initialization
048B	VIN Verify Write	048C	Quick Learn:Non RFE
048D	1st Gear Clutch Test:Non RFE	048E	2nd Gear Clutch Test:Non RFE
048F	3rd Gear Clutch Test:Non RFE	049A	3rd Gear Clutch Test FWD
049B	2nd Gear Clutch Test FWD	049C	1st Gear Clutch Test FWD

Index	Specil Function Name	Index	Specil Function Name
049D	Reverse Gear Clutch Test FWD	049E	Radio Clock Display
049F	Headlamp Delay Time	04A0	Temporary Tip Start Disable
04A1	Radio Anti-Theft Override Test	04A2	Program Ignition Keys
04A4	Rear Window Movement	04A5	ACC Post Service Flash Process
04A6	Temporary Remote Start Disable	04A7	Sunroof Initialization
04A8	Shift Lever Position Test - 62TE	04A9	Sliding Door Open Test
04AA	Leak Detection Pump (LDP) Forced Monitor	04AB	Throttle Follower Test
04AC	Purge Vapor System Test	04AD	ABS System Calibration
04AE	Quicklearn (PCM RFE Transmission)	04AF	Engine Warm Up
04B0	Clear Learned Variable Line Pressure Counters	04B1	JK Enable HFM
04B2	Fuel Rail Control Test	04B3	IPC Self Test
04B4	Disable Key-Alike	04B9	Self-learnt functions reset
04BE	Lambda sensor replacement	04BF	Phonic wheel replacement
04C0	Oil change	04C2	Reset learn flag wheel tooth
04C6	Neutral signal learning	04D2	Control unit replacement
04DB	IPC Replacement	04EA	Longitudinal and Lateral sensor calibration
04EB	Brake Sensor Zero Calibration	04EC	Coolant Three Way Valve Replaced
04ED	Active Grille Shutter Replaced	04EE	Active Grille Shutter Test
04EF	Coolant Three Way Valve Test	04F0	CNG/Gasoline Forced Fuel Type
04F1	Clear Stored Accumulated Fuel Mass	04F2	Reset VCM Adaptives
04F4	ABS Static Test	04F7	Update Front and Rear Axle Nominal Tire Pressure Values
04FA	Learn long acceleration Signal	04FB	IPC Enable Seatbelt Minder Chime
04FE	Self Learning Motor Test	050A	Emissions Rolls Test Mode
050B	Clear Steering Pull Compensation	050C	Initialize EPS
050D	ROW Map Configuration	050E	Clear Multi-Module VIN Handshake Immobilizer Failure
050F	View Recent Multi-Module VIN Handshake Immobilizer Failures	051A	EPS Learn
051B	Program Ignition FOBIKs Baseline System	051C	Program Ignition FOBIKs Keyless Go System
051D	Program Tire Sensor Identifications	051E	BCM Replaced
051F	Read Ignition Module (IGNM) Software Information	052A	Remote Start Antenna Test
052B	View Ignition (IGNM/KIN) Part Information	052D	Component Air Mass/Pressure/Ride Height Readings
052E	PTO Single Speed RPM	052F	Enable / Disable PTO Types
053A	High Voltage Battery Coolant Fill	053B	Power Electronics Coolant Fill
053C	Accelerator Pedal Learn	053D	Check EVCU VIN
053E	Motor Resolver Offset Learn	053F	Write Pinion Factor
054A	Max Vehicle Speed Adjustment	054B	Engine Idle Shutdown Feature Enable/Disable
054C	Engine Idle Shutdown Timer Adjustment	054E	Reset Enhanced Automatic Oil Change Indicator
054F	Alternator 2 Field Test	055A	SCR Extend Mileage W Active Fault
055B	SCR DEF Tank Fluid Level Reset	055C	DEF Dosing Injection Quantity
055D	Reset of O2 Values	055E	Program Variant Coding.
055F	Active Grill Shutter	056A	Reset RDM Shift Counter
056B	ACC Aim Mode - Auto Alignment	056C	Service Procedures
056D	Take Out of In Plant Mode	056F	FFCM Calibration
057A	Reset Module	057B	ATC AC Cooldown
057C	Uplift Pump Enable	057C	Reset ATC Head
057D	Automatic Loudness	057E	Radio Clock Display
057F	Reset Default Parameters	058A	Key FOB Test
058B	Double Door Unlock	058C	Lock Ignition FOBIKs
058C	Vehicle Configuration	058D	Fuel Gauge Update
058E	Enable Mopar VTSS	058F	Enable Mopar VTSS Tampr Alert
059A	Disable Disarm Switches	059B	Horn Chirp
059C	Ultrasonic sensors check	059C	DRL Enable
059D	Enable Immobilizer	059D	Modify volumetric sensors sensibility
059E	Modify longitudinal anti-tilt sensor	059E	Headlamp Delay Enable
059F	Horn Chirp Enable	05A0	Modify lateral anti-tilt sensor

Index	Specil Function Name	Index	Specil Function Name
05A2	LIN Siren Check	05A3	LIN Anti-tilt Sensor Check
05AC	Phase Front reset	05AE	Control unit reprogramming
05AF	Fuel supply system components replacement	05B0	Original VIN Lock
05B1	NOx replacement	05B2	Resetting distance travelled with Water in diesel warning lamp ON
05B3	Resetting distance travelled with water temperature warning lamp ON	05B4	Electrical VGT actuator test
05B5	Fan cooling activation	05B6	Particulate Filter Regeneration
05B7	Particulate filter with integrated pre-cat replacement	05B8	Injector replacement (per bank)
05B9	Cylinder 1 injector replacement	05BA	Cylinder 2 injector replacement
05BB	Cylinder 3 injector replacement	05BC	Cylinder 4 injector replacement
05BD	Replacement of EGR valve	05BE	EGR low pressure valve replacement
05BF	Glow plug preheating circuit test	05C0	EGR low pressure valve test
05C1	Throttle valve test	05C2	EGR high pressure valve test
05C3	Clutch group and/or clutch potentiometer replacement	05C4	Injector/s replacement
05C5	self learning motors test	05C6	Wheel Speed Sensor Recognition
05C7	Electric Park Brake management	05C9	Replacement instrument panel cluster
05D0	RFH_TPM program left rear tire sensorId	05D1	RFH_TPM program right front tire sensorId
05D2	Clear TPM Sensor Audit	05D3	RFH TPM sensor rolls tests
05D5	RFH TPM program left front tire sensorId	05D6	RFH TPM program right rear tire sensorId
05D7	Clear TPM Sensor Warnings	05D8	RFH immobilizer antenna test
05D9	RFH locate learned keys	05DF	Reset of SCR Long Term Adaptation Factor
05EA	Speed Limiter	05EB	Enable/Disable Seatbelt Minder
05EC	Snorkel Output Test	05ED	Disable Auto Relock
05EE	IPC Service Mode	05EF	Passenger Passive Entry Handle Delete
060A	Initialize Learned	060B	Mirror Actuation Test
060C	Initialize Module	060D	Inhibit Monitor
060E	Comb R Stop and Turn Lamps	060F	RG Headlamp Washer Disable
061A	Door Open Test	061B	Internal Relay Test
061C	Enable Chime	061D	Verify Module Calibration
061E	EATX TCM Has Been Changed	061F	Pinion Factor
062A	RKE FOB & Module Test	062B	Configure ITM
062C	Door Input Test	062D	Configure Module
800A	View SKREEM Country Code	800B	Reset SKREEM
800C	Enable Disable TPM	800E	WCM Trigger Module Test
801A	Reset Module	802A	Software Reset Module
802B	Hardware Reset Module	804F	Configure Cluster
807D	RESET OIL CHANGE		