

MaxiSysCV_Fiat_Truck_V1.00 Function List (Note:For reference only)

NOTES:

- This function is supported. ✖ This function may be supported, which depends on the actual condition of the vehicle.
 - This function is not supported. ▲ This function is the new feature in this version.
- As for special function please refer to the special function table.

Model	Version	Group	System	ECU Info.	Read Codes	Erase Codes	Live Data	Active Test	Specil Function
DOBLO' (119)	1.2 8V	Safety	Teves ABS MK20/MK70	●	●	●	●	●	○
DOBLO' (119)	1.3 JTD	Safety	Teves ABS MK20/MK70	●	●	●	●	●	○
DOBLO' (119)	1.4 8V	Safety	Teves ABS MK20/MK70	●	●	●	●	●	○
DOBLO' (119)	1.6 16V	Safety	Teves ABS MK20/MK70	●	●	●	●	●	○
DOBLO' (119)	1.8 8V	Safety	Teves ABS MK20/MK70	●	●	●	●	●	○
DOBLO' (119)	1.9 DS	Safety	Teves ABS MK20/MK70	●	●	●	●	●	○
DOBLO' (119)	1.9 JTD	Safety	Teves ABS MK20/MK70	●	●	●	●	●	○
DOBLO' (119)	BIPOWER-GPOWER	Safety	Teves ABS MK20/MK70	●	●	●	●	●	○
DOBLO' CARGO (223)	1.3 JTD	Safety	Teves ABS MK20/MK70	●	●	●	●	●	○
DOBLO' CARGO (223)	1.4 8V	Safety	Teves ABS MK20/MK70	●	●	●	●	●	○
DOBLO' CARGO (223)	1.9 JTD	Safety	Teves ABS MK20/MK70	●	●	●	●	●	○
DOBLO' CARGO (223)	BIPOWER-GPOWER	Safety	Teves ABS MK20/MK70	●	●	●	●	●	○
DUCATO (230)	1.9 TDS	Safety	Bosch 5.3 ABS	●	●	●	●	●	○
DUCATO (230)	1.9 TDS ECO	Safety	Bosch 5.3 ABS	●	●	●	●	●	○
DUCATO (230)	19 DS	Safety	Bosch 5.3 ABS	●	●	●	●	●	○
DUCATO (230)	2.0 BZ KAT	Safety	Bosch 5.3 ABS	●	●	●	●	●	○
DUCATO (230)	2.0 JTD	Safety	Bosch 5.3 ABS	●	●	●	●	●	○
DUCATO (230)	2.5 DS	Safety	Bosch 5.3 ABS	●	●	●	●	●	○
DUCATO (230)	2.5 TDS	Safety	Bosch 5.3 ABS	●	●	●	●	●	○
DUCATO (230)	2.5 TDS ECO	Safety	Bosch 5.3 ABS	●	●	●	●	●	○
DUCATO (230)	2.8 DS	Safety	Bosch 5.3 ABS	●	●	●	●	●	○
DUCATO (230)	2.8 JTD	Safety	Bosch 5.3 ABS	●	●	●	●	●	○
DUCATO (230)	2.8 TDS	Safety	Bosch 5.3 ABS	●	●	●	●	●	○
DUCATO (244)	2.0	Safety	Bosch 5.3 ABS	●	●	●	●	●	○
DUCATO (244)	2.0 JTD	Safety	Bosch 5.3 ABS	●	●	●	●	●	○
DUCATO (244)	2.3 JTD	Safety	Bosch 5.3 ABS	●	●	●	●	●	○
DUCATO (244)	2.8 JTD	Safety	Bosch 5.3 ABS	●	●	●	●	●	○
DUCATO (244)	BIPOWER-GPOWER	Safety	Bosch 5.3 ABS	●	●	●	●	●	○
STRADA	1.3 JTD	Safety	Bosch 5.3 ABS	●	●	●	●	●	○
FIORINO (255)	1.4 I.E.	Engine - Gearbox	Bosch Monomotronic MA 1.7 Injection (El. Key)	●	●	●	●	●	○
FIORINO (255)	1.6 I.E.	Engine - Gearbox	Bosch Monomotronic MA 1.7 Injection (El. Key)	●	●	●	●	●	○
SCUDO (222)	1.6 I.E	Engine - Gearbox	Bosch Monomotronic MA 1.7 Injection (El. Key)	●	●	●	●	●	○
SCUDO (222)	97 1.6 I.E.	Engine - Gearbox	Bosch Monomotronic MA 1.7 Injection (El. Key)	●	●	●	●	●	○
FIORINO (255)	1.4 I.E GASOLINA	Engine - Gearbox	Magneti Marelli IAW IG7 Gasoline Injection	●	○	○	●	●	○
FIORINO (255)	1.4 I.E.	Engine - Gearbox	Bosch Monomotronic MA1.7 Injection	●	●	●	●	●	○
FIORINO (255)	1.6 I.E.	Engine - Gearbox	Bosch Monomotronic MA1.7 Injection	●	●	●	●	●	○
FIORINO (255)	1.4 I.E GASOLINA	Engine - Gearbox	Magnetic Marelli IAW G7.XX Injection	●	○	○	●	●	○
FIORINO (255)	1.6 I.E GASOLINA	Engine - Gearbox	Magnetic Marelli IAW G7.XX Injection	●	○	○	●	●	○
SCUDO (222)	1.9 D	Engine - Gearbox	Bosch AS3 Diesel Injection	●	●	●	●	●	○
SCUDO (222)	1.9 TD	Engine - Gearbox	Bosch AS3 Diesel Injection	●	●	●	●	●	○
SCUDO (222)	97 1.9 TD	Engine - Gearbox	Bosch AS3 Diesel Injection	●	●	●	●	●	○

Model	Version	Group	System	ECU Info.	Read Codes	Erase Codes	Live Data	Active Test	Specil Function
STRADA	1.3 JTD	Safety	TRW MY 97 Airbag (2F-I)	●	●	●	●	○	○
STRADA	1.6 16V	Safety	TRW MY 97 Airbag (2F-I)	●	●	●	●	○	○
DUCATO (244)	2.0	Safety	Bosch 5.3 ASR ABS	●	●	●	●	●	○
DUCATO (244)	2.0 JTD	Safety	Bosch 5.3 ASR ABS	●	●	●	●	●	○
DUCATO (244)	2.3 JTD	Safety	Bosch 5.3 ASR ABS	●	●	●	●	●	○
DUCATO (244)	2.8 JTD	Safety	Bosch 5.3 ASR ABS	●	●	●	●	●	○
DUCATO (244)	BIPOWER-GPOWER	Safety	Bosch 5.3 ASR ABS	●	●	●	●	●	○
SCUDO (222)	2.0 16V	Engine - Gearbox	Bosch Motronic MP7.3 injection	●	●	●	●	●	○
DUCATO (230)	1.9 TDS ECO	Safety	BREED MY 97 Air Bag (1F-2P)	●	●	●	●	○	○
DUCATO (230)	2.0 BZ KAT	Safety	BREED MY 97 Air Bag (1F-2P)	●	●	●	●	○	○
DUCATO (230)	2.0 JTD	Safety	BREED MY 97 Air Bag (1F-2P)	●	●	●	●	○	○
DUCATO (230)	2.8 DS	Safety	BREED MY 97 Air Bag (1F-2P)	●	●	●	●	○	○
DUCATO (230)	2.8 JTD	Safety	BREED MY 97 Air Bag (1F-2P)	●	●	●	●	○	○
DUCATO (230)	2.8 TDS	Safety	BREED MY 97 Air Bag (1F-2P)	●	●	●	●	○	○
DOBLO' (119)	1.2 8V	Engine - Gearbox	Magneti Marelli IAW 59F injection	●	●	●	●	●	○
STRADA	1.3 JTD	Safety	Trw MY 97 airbag (2F-2L-I)	●	●	●	●	○	○
STRADA	1.6 16V	Safety	Trw MY 97 airbag (2F-2L-I)	●	●	●	●	○	○
DOBLO' (119)	1.9 DS	Engine - Gearbox	Lucas Epic DCU3F Diesel Injection	●	●	●	●	●	○
SCUDO (222)	00 2.0 JTD	Engine - Gearbox	Bosch EDC15 PSA Diesel Injection (2.0 8v v60	●	●	●	●	○	○
SCUDO (222)	00 2.0 16V	Engine - Gearbox	Magneti Marelli MM4.8P PSA injection	●	●	●	●	●	○
SCUDO (222)	00 2.0 16V	Safety	Autoliv ACU airbag	●	●	●	●	○	○
SCUDO (222)	00 2.0 JTD	Safety	Autoliv ACU airbag	●	●	●	●	○	○
SCUDO (222)	01 1.9 D	Safety	Autoliv ACU airbag	●	●	●	●	○	○
SCUDO (222)	00 2.0 16V	Engine - Gearbox	Siemens AL4 TA2000 PSA Automatic gearbox	●	●	●	●	○	○
SCUDO (222)	00 2.0 JTD	Engine - Gearbox	Siemens AL4 TA2000 PSA Automatic gearbox	●	●	●	●	○	○
DOBLO' (119)	1.2 8V	Safety	Autoliv MY 99 airbag (2F-2P-2L-I)	●	●	●	●	●	○
DOBLO' (119)	1.3 JTD	Safety	Autoliv MY 99 airbag (2F-2P-2L-I)	●	●	●	●	●	○
DOBLO' (119)	1.4 8V	Safety	Autoliv MY 99 airbag (2F-2P-2L-I)	●	●	●	●	●	○
DOBLO' (119)	1.6 16V	Safety	Autoliv MY 99 airbag (2F-2P-2L-I)	●	●	●	●	●	○
DOBLO' (119)	1.8 8V	Safety	Autoliv MY 99 airbag (2F-2P-2L-I)	●	●	●	●	●	○
DOBLO' (119)	1.9 DS	Safety	Autoliv MY 99 airbag (2F-2P-2L-I)	●	●	●	●	●	○
DOBLO' (119)	1.9 JTD	Safety	Autoliv MY 99 airbag (2F-2P-2L-I)	●	●	●	●	●	○
DOBLO' (119)	BIPOWER-GPOWER	Safety	Autoliv MY 99 airbag (2F-2P-2L-I)	●	●	●	●	●	○
DOBLO' CARGO (223)	1.3 JTD	Safety	Autoliv MY 99 airbag (2F-2P-2L-I)	●	●	●	●	●	○
DOBLO' CARGO (223)	1.4 8V	Safety	Autoliv MY 99 airbag (2F-2P-2L-I)	●	●	●	●	●	○
DOBLO' CARGO (223)	1.9 JTD	Safety	Autoliv MY 99 airbag (2F-2P-2L-I)	●	●	●	●	●	○
DOBLO' CARGO (223)	BIPOWER-GPOWER	Safety	Autoliv MY 99 airbag (2F-2P-2L-I)	●	●	●	●	●	○
DOBLO' (119)	1.2 8V	Safety	Autoliv MY 99 airbag (2F-2P-I)	●	●	●	●	●	○
DOBLO' (119)	1.3 JTD	Safety	Autoliv MY 99 airbag (2F-2P-I)	●	●	●	●	●	○
DOBLO' (119)	1.4 8V	Safety	Autoliv MY 99 airbag (2F-2P-I)	●	●	●	●	●	○
DOBLO' (119)	1.6 16V	Safety	Autoliv MY 99 airbag (2F-2P-I)	●	●	●	●	●	○
DOBLO' (119)	1.8 8V	Safety	Autoliv MY 99 airbag (2F-2P-I)	●	●	●	●	●	○
DOBLO' (119)	1.9 DS	Safety	Autoliv MY 99 airbag (2F-2P-I)	●	●	●	●	●	○
DOBLO' (119)	1.9 JTD	Safety	Autoliv MY 99 airbag (2F-2P-I)	●	●	●	●	●	○
DOBLO' (119)	BIPOWER-GPOWER	Safety	Autoliv MY 99 airbag (2F-2P-I)	●	●	●	●	●	○
DOBLO' CARGO (223)	1.3 JTD	Safety	Autoliv MY 99 airbag (2F-2P-I)	●	●	●	●	●	○
DOBLO' CARGO (223)	1.4 8V	Safety	Autoliv MY 99 airbag (2F-2P-I)	●	●	●	●	●	○
DOBLO' CARGO (223)	1.9 JTD	Safety	Autoliv MY 99 airbag (2F-2P-I)	●	●	●	●	●	○
DOBLO' CARGO (223)	BIPOWER-GPOWER	Safety	Autoliv MY 99 airbag (2F-2P-I)	●	●	●	●	●	○
DOBLO' (119)	1.2 8V	Safety	Autoliv MY 99 airbag (1F-2P)	●	●	●	●	●	○

Model	Version	Group	System	ECU Info.	Read Codes	Erase Codes	Live Data	Active Test	Specil Function
DOBLO' (119)	1.3 JTD	Safety	Autoliv MY 99 airbag (1F-2P)	●	●	●	●	●	○
DOBLO' (119)	1.4 8V	Safety	Autoliv MY 99 airbag (1F-2P)	●	●	●	●	●	○
DOBLO' (119)	1.6 16V	Safety	Autoliv MY 99 airbag (1F-2P)	●	●	●	●	●	○
DOBLO' (119)	1.8 8V	Safety	Autoliv MY 99 airbag (1F-2P)	●	●	●	●	●	○
DOBLO' (119)	1.9 DS	Safety	Autoliv MY 99 airbag (1F-2P)	●	●	●	●	●	○
DOBLO' (119)	1.9 JTD	Safety	Autoliv MY 99 airbag (1F-2P)	●	●	●	●	●	○
DOBLO' (119)	BIPOWER-GPOWER	Safety	Autoliv MY 99 airbag (1F-2P)	●	●	●	●	●	○
DOBLO' CARGO (223)	1.3 JTD	Safety	Autoliv MY 99 airbag (1F-2P)	●	●	●	●	●	○
DOBLO' CARGO (223)	1.4 8V	Safety	Autoliv MY 99 airbag (1F-2P)	●	●	●	●	●	○
DOBLO' CARGO (223)	1.9 JTD	Safety	Autoliv MY 99 airbag (1F-2P)	●	●	●	●	●	○
DOBLO' CARGO (223)	BIPOWER-GPOWER	Safety	Autoliv MY 99 airbag (1F-2P)	●	●	●	●	●	○
DUCATO (244)	2.0	Safety	SIEMENS Airbag MY 99 (1F-2P)	●	●	●	●	●	○
DUCATO (244)	2.0 JTD	Safety	SIEMENS Airbag MY 99 (1F-2P)	●	●	●	●	●	○
DUCATO (244)	2.3 JTD	Safety	SIEMENS Airbag MY 99 (1F-2P)	●	●	●	●	●	○
DUCATO (244)	2.8 JTD	Safety	SIEMENS Airbag MY 99 (1F-2P)	●	●	●	●	●	○
DUCATO (244)	BIPOWER-GPOWER	Safety	SIEMENS Airbag MY 99 (1F-2P)	●	●	●	●	●	○
DUCATO (244)	2.0	Safety	SIEMENS Airbag MY 99 (1F-3P)	●	●	●	●	●	○
DUCATO (244)	2.0 JTD	Safety	SIEMENS Airbag MY 99 (1F-3P)	●	●	●	●	●	○
DUCATO (244)	2.3 JTD	Safety	SIEMENS Airbag MY 99 (1F-3P)	●	●	●	●	●	○
DUCATO (244)	2.8 JTD	Safety	SIEMENS Airbag MY 99 (1F-3P)	●	●	●	●	●	○
DUCATO (244)	BIPOWER-GPOWER	Safety	SIEMENS Airbag MY 99 (1F-3P)	●	●	●	●	●	○
DUCATO (244)	2.0	Safety	SIEMENS Airbag MY 99 (2F-2P-I)	●	●	●	●	●	○
DUCATO (244)	2.0 JTD	Safety	SIEMENS Airbag MY 99 (2F-2P-I)	●	●	●	●	●	○
DUCATO (244)	2.3 JTD	Safety	SIEMENS Airbag MY 99 (2F-2P-I)	●	●	●	●	●	○
DUCATO (244)	2.8 JTD	Safety	SIEMENS Airbag MY 99 (2F-2P-I)	●	●	●	●	●	○
DUCATO (244)	BIPOWER-GPOWER	Safety	SIEMENS Airbag MY 99 (2F-2P-I)	●	●	●	●	●	○
DUCATO (244)	2.0	Safety	SIEMENS Airbag MY 99 (2F-3P-I)	●	●	●	●	●	○
DUCATO (244)	2.0 JTD	Safety	SIEMENS Airbag MY 99 (2F-3P-I)	●	●	●	●	●	○
DUCATO (244)	2.3 JTD	Safety	SIEMENS Airbag MY 99 (2F-3P-I)	●	●	●	●	●	○
DUCATO (244)	2.8 JTD	Safety	SIEMENS Airbag MY 99 (2F-3P-I)	●	●	●	●	●	○
DUCATO (244)	BIPOWER-GPOWER	Safety	SIEMENS Airbag MY 99 (2F-3P-I)	●	●	●	●	●	○
DUCATO (244)	2.0	Safety	SIEMENS Airbag MY 99 (2F-2P-2L-I)	●	●	●	●	●	○
DUCATO (244)	2.0 JTD	Safety	SIEMENS Airbag MY 99 (2F-2P-2L-I)	●	●	●	●	●	○
DUCATO (244)	2.3 JTD	Safety	SIEMENS Airbag MY 99 (2F-2P-2L-I)	●	●	●	●	●	○
DUCATO (244)	2.8 JTD	Safety	SIEMENS Airbag MY 99 (2F-2P-2L-I)	●	●	●	●	●	○
DUCATO (244)	BIPOWER-GPOWER	Safety	SIEMENS Airbag MY 99 (2F-2P-2L-I)	●	●	●	●	●	○
DUCATO (244)	2.0	Safety	Bosch ABS 5.3 (4x4)	●	●	●	●	●	○
DUCATO (244)	2.8 JTD	Safety	Bosch ABS 5.3 (4x4)	●	●	●	●	●	○
DOBLO' (119)	1.2 8V	Safety	Delphi/Marelli Body Computer	●	●	●	●	●	○
DOBLO' (119)	1.3 JTD	Safety	Delphi/Marelli Body Computer	●	●	●	●	●	○
DOBLO' (119)	1.4 8V	Safety	Delphi/Marelli Body Computer	●	●	●	●	●	○
DOBLO' (119)	1.6 16V	Safety	Delphi/Marelli Body Computer	●	●	●	●	●	○
DOBLO' (119)	1.8 8V	Safety	Delphi/Marelli Body Computer	●	●	●	●	●	○
DOBLO' (119)	1.9 DS	Safety	Delphi/Marelli Body Computer	●	●	●	●	●	○
DOBLO' (119)	1.9 JTD	Safety	Delphi/Marelli Body Computer	●	●	●	●	●	○
DOBLO' (119)	BIPOWER-GPOWER	Safety	Delphi/Marelli Body Computer	●	●	●	●	●	○
DOBLO' CARGO (223)	1.3 JTD	Safety	Delphi/Marelli Body Computer	●	●	●	●	●	○
DOBLO' CARGO (223)	1.4 8V	Safety	Delphi/Marelli Body Computer	●	●	●	●	●	○
DOBLO' CARGO (223)	1.9 JTD	Safety	Delphi/Marelli Body Computer	●	●	●	●	●	○
DOBLO' CARGO (223)	BIPOWER-GPOWER	Safety	Delphi/Marelli Body Computer	●	●	●	●	●	○

Model	Version	Group	System	ECU Info.	Read Codes	Erase Codes	Live Data	Active Test	Specil Function
DOBLO' (119)	1.2 8V	Instrumentation	Marelli cluster	●	●	●	●	●	○
DOBLO' (119)	1.3 JTD	Instrumentation	Marelli cluster	●	●	●	●	●	○
DOBLO' (119)	1.4 8V	Instrumentation	Marelli cluster	●	●	●	●	●	○
DOBLO' (119)	1.6 16V	Instrumentation	Marelli cluster	●	●	●	●	●	○
DOBLO' (119)	1.8 8V	Instrumentation	Marelli cluster	●	●	●	●	●	○
DOBLO' (119)	1.9 DS	Instrumentation	Marelli cluster	●	●	●	●	●	○
DOBLO' (119)	1.9 JTD	Instrumentation	Marelli cluster	●	●	●	●	●	○
DOBLO' (119)	BIPOWER-GPOWER	Instrumentation	Marelli cluster	●	●	●	●	●	○
DOBLO' CARGO (223)	1.3 JTD	Instrumentation	Marelli cluster	●	●	●	●	●	○
DOBLO' CARGO (223)	1.4 8V	Instrumentation	Marelli cluster	●	●	●	●	●	○
DOBLO' CARGO (223)	1.9 JTD	Instrumentation	Marelli cluster	●	●	●	●	●	○
DOBLO' CARGO (223)	BIPOWER-GPOWER	Instrumentation	Marelli cluster	●	●	●	●	●	○
DOBLO' (119)	1.2 8V	Engine - Gearbox	Magneti Marelli IAW 4AF/4EF/59F/5AF EOBD	●	●	●	●	●	
FIORINO (255)	1242 BENZINA	Engine - Gearbox	Magneti Marelli IAW 4AF/4EF/59F/5AF EOBD	●	●	●	●	●	
DUCATO (230)	2.0 JTD	Engine - Gearbox	Diesel Bosch EDC15 CF3 injection (eng. 2.0/2.3/2.8)	●	●	●	●	●	○
DUCATO (230)	2.8 JTD	Engine - Gearbox	Diesel Bosch EDC15 CF3 injection (eng. 2.0/2.3/2.8)	●	●	●	●	●	○
DUCATO (244)	2.0 JTD	Engine - Gearbox	Diesel Bosch EDC15 CF3 injection (eng. 2.0/2.3/2.8)	●	●	●	●	●	○
DUCATO (244)	2.3 JTD	Engine - Gearbox	Diesel Bosch EDC15 CF3 injection (eng. 2.0/2.3/2.8)	●	●	●	●	●	○
DUCATO (244)	2.8 JTD	Engine - Gearbox	Diesel Bosch EDC15 CF3 injection (eng. 2.0/2.3/2.8)	●	●	●	●	●	○
DOBLO' (119)	1.9 JTD	Engine - Gearbox	Bosch EDC15 CF3/EOBD Diesel Injection (eng. 1.9/2.4)	●	●	●	●	●	○
DOBLO' CARGO (223)	1.9 JTD	Engine - Gearbox	Bosch EDC15 CF3/EOBD Diesel Injection (eng. 1.9/2.4)	●	●	●	●	●	○
SCUDO (222)	00 2.0 JTD	Engine - Gearbox	Bosch EDC15 PSA Diesel Injection (eng. 2.0	●	●	●	●	●	○
DOBLO' (119)	1.2 8V	Engine - Gearbox	Injection - Magneti Marelli IAW 4AF/4EF/59F/5AF Outside EEC	●	●	●	●	●	
DOBLO' (119)	1.6 16V	Engine - Gearbox	Injection - Magneti Marelli IAW 4AF/4EF/59F/5AF Outside EEC	●	●	●	●	●	
FIORINO (255)	1242 BENZINA	Engine - Gearbox	Injection - Magneti Marelli IAW 4AF/4EF/59F/5AF Outside EEC	●	●	●	●	●	
DUCATO (230)	2.8 JTD	Engine - Gearbox	Automatic Gearbox ZF 4HP20 (KW2)	●	●	●	●	●	○
DUCATO (244)	2.8 JTD	Engine - Gearbox	Automatic Gearbox ZF 4HP20 (KW2)	●	●	●	●	●	○
DUCATO (250)	2.2 JTD	Safety	SAGEM SpeedPro power steering	●	●	●	●	○	○
DUCATO (250)	2.3 JTD	Safety	SAGEM SpeedPro power steering	●	●	●	●	○	○
DUCATO (250)	3.0 16V CNG	Safety	SAGEM SpeedPro power steering	●	●	●	●	○	○
DUCATO (250)	3.0 JTD	Safety	SAGEM SpeedPro power steering	●	●	●	●	○	○
DUCATO (250)	MINIBUS 16+1	Safety	SAGEM SpeedPro power steering	●	●	●	●	○	○
DUCATO (250)	MINIBUS 3.0 16V CNG	Safety	SAGEM SpeedPro power steering	●	●	●	●	○	○
DOBLO' (119)	1.6 16V	Engine - Gearbox	Injection - Magneti Marelli IAW 5NF EOBD	●	●	●	●	●	○
DUCATO (244)	2.0	Engine - Gearbox	Magneti Marelli MM4.8P Injection (El. Key)	●	●	●	●	●	○
DUCATO (244)	BIPOWER-GPOWER	Engine - Gearbox	Magneti Marelli MM4.8P Injection (El. Key)	●	●	●	●	●	○
SCUDO (222)	00 2.0 JTD	Engine - Gearbox	Bosch EDC15 PSA diesel injection (eng. 16v)	●	●	●	●	●	○
DOBLO' (119)	BIPOWER-GPOWER	Engine - Gearbox	Metatron 6A0 Gas Injection	●	●	●	●	●	○
DOBLO' CARGO (223)	BIPOWER-GPOWER	Engine - Gearbox	Metatron 6A0 Gas Injection	●	●	●	●	●	○

Model	Version	Group	System	ECU Info.	Read Codes	Erase Codes	Live Data	Active Test	Specil Function
DOBLO' (119)	BIPOWER-GPOWER	Engine - Gearbox	Magneti Marelli IAW 4EF/4AF Gas Injection	●	●	●	●	●	○
DOBLO' CARGO (223)	BIPOWER-GPOWER	Engine - Gearbox	Magneti Marelli IAW 4EF/4AF Gas Injection	●	●	●	●	●	○
SCUDO (222)	01 1.9 D	Engine - Gearbox	Lucas DCN2 Diesel Injection	●	●	●	●	●	○
DOBLO' (119)	1.6 16V	Engine - Gearbox	Magneti Marelli IAW 5NF Injection Outside EEC	●	●	●	●	●	○
DOBLO' (119)	1.3 JTD	Engine - Gearbox	Marelli 6JF EOBD Diesel injection (eng. 1.3	●	●	●	●	●	○
DOBLO' CARGO (223)	1.3 JTD	Engine - Gearbox	Marelli 6JF EOBD Diesel injection (eng. 1.3	●	●	●	●	●	○
DOBLO' (119)	1.2 8V	Instrumentation	Marelli instrument panel (Comfort)	●	●	●	●	●	0070 0064 0066 0065 0034
DOBLO' (119)	1.3 JTD	Instrumentation	Marelli instrument panel (Comfort)	●	●	●	●	●	0070 0064 0066 0065 0034
DOBLO' (119)	1.4 8V	Instrumentation	Marelli instrument panel (Comfort)	●	●	●	●	●	0070 0064 0066 0065 0034
DOBLO' (119)	1.6 16V	Instrumentation	Marelli instrument panel (Comfort)	●	●	●	●	●	0070 0064 0066 0065 0034
DOBLO' (119)	1.8 8V	Instrumentation	Marelli instrument panel (Comfort)	●	●	●	●	●	0070 0064 0066 0065 0034
DOBLO' (119)	1.9 DS	Instrumentation	Marelli instrument panel (Comfort)	●	●	●	●	●	0070 0064 0066 0065 0034
DOBLO' (119)	1.9 JTD	Instrumentation	Marelli instrument panel (Comfort)	●	●	●	●	●	0070 0064 0066 0065 0034
DOBLO' (119)	BIPOWER-GPOWER	Instrumentation	Marelli instrument panel (Comfort)	●	●	●	●	●	0070 0064 0066 0065 0034
DOBLO' CARGO (223)	1.3 JTD	Instrumentation	Marelli instrument panel (Comfort)	●	●	●	●	●	0070 0064 0066 0065 0034
DOBLO' CARGO (223)	1.4 8V	Instrumentation	Marelli instrument panel (Comfort)	●	●	●	●	●	0070 0064 0066 0065 0034
DOBLO' CARGO (223)	1.9 JTD	Instrumentation	Marelli instrument panel (Comfort)	●	●	●	●	●	0070 0064 0066 0065 0034
DOBLO' CARGO (223)	BIPOWER-GPOWER	Instrumentation	Marelli instrument panel (Comfort)	●	●	●	●	●	0070 0064 0066 0065 0034
DUCATO (244)	2.3 JTD	Safety	Bosch 8 ABS	●	●	●	●	●	○
DUCATO (250)	2.2 JTD	Safety	Bosch 8 ABS	●	●	●	●	●	○
DUCATO (250)	2.3 JTD	Safety	Bosch 8 ABS	●	●	●	●	●	○
DUCATO (250)	3.0 16V CNG	Safety	Bosch 8 ABS	●	●	●	●	●	○
DUCATO (250)	3.0 JTD	Safety	Bosch 8 ABS	●	●	●	●	●	○
DUCATO (250)	MINIBUS 16+1	Safety	Bosch 8 ABS	●	●	●	●	●	○
DUCATO (250)	MINIBUS 3.0 16V CNG	Safety	Bosch 8 ABS	●	●	●	●	●	○
STRADA	1.3 JTD	Safety	Bosch 8 ABS	●	●	●	●	●	○
STRADA	1.6 16V	Safety	Bosch 8 ABS	●	●	●	●	●	○
DUCATO (250)	2.2 JTD	Safety	Bosch 8 VDC ABS	●	●	●	●	●	○
DUCATO (250)	2.3 JTD	Safety	Bosch 8 VDC ABS	●	●	●	●	●	○
DUCATO (250)	3.0 16V CNG	Safety	Bosch 8 VDC ABS	●	●	●	●	●	○
DUCATO (250)	3.0 JTD	Safety	Bosch 8 VDC ABS	●	●	●	●	●	○
DUCATO (250)	MINIBUS 16+1	Safety	Bosch 8 VDC ABS	●	●	●	●	●	○
DUCATO (250)	MINIBUS 3.0 16V CNG	Safety	Bosch 8 VDC ABS	●	●	●	●	●	○
DOBLO' (119)	1.2 8V	Instrumentation	Marelli instrument panel (Strip/Modale)	●	●	●	●	●	
DOBLO' (119)	1.3 JTD	Instrumentation	Marelli instrument panel (Strip/Modale)	●	●	●	●	●	
DOBLO' (119)	1.4 8V	Instrumentation	Marelli instrument panel (Strip/Modale)	●	●	●	●	●	
DOBLO' (119)	1.6 16V	Instrumentation	Marelli instrument panel (Strip/Modale)	●	●	●	●	●	
DOBLO' (119)	1.8 8V	Instrumentation	Marelli instrument panel (Strip/Modale)	●	●	●	●	●	
DOBLO' (119)	1.9 DS	Instrumentation	Marelli instrument panel (Strip/Modale)	●	●	●	●	●	
DOBLO' (119)	1.9 JTD	Instrumentation	Marelli instrument panel (Strip/Modale)	●	●	●	●	●	
DOBLO' (119)	BIPOWER-GPOWER	Instrumentation	Marelli instrument panel (Strip/Modale)	●	●	●	●	●	
DOBLO' CARGO (223)	1.3 JTD	Instrumentation	Marelli instrument panel (Strip/Modale)	●	●	●	●	●	
DOBLO' CARGO (223)	1.4 8V	Instrumentation	Marelli instrument panel (Strip/Modale)	●	●	●	●	●	
DOBLO' CARGO (223)	1.9 JTD	Instrumentation	Marelli instrument panel (Strip/Modale)	●	●	●	●	●	
DOBLO' CARGO (223)	BIPOWER-GPOWER	Instrumentation	Marelli instrument panel (Strip/Modale)	●	●	●	●	●	
DOBLO' (119)	1.2 8V	Safety	Marelli Body Computer MY 03	●	●	●	●	●	○
DOBLO' (119)	1.3 JTD	Safety	Marelli Body Computer MY 03	●	●	●	●	●	○
DOBLO' (119)	1.4 8V	Safety	Marelli Body Computer MY 03	●	●	●	●	●	○

Model	Version	Group	System	ECU Info.	Read Codes	Erase Codes	Live Data	Active Test	Specil Function
DOBLO' (119)	1.6 16V	Safety	Marelli Body Computer MY 03	●	●	●	●	●	○
DOBLO' (119)	1.8 8V	Safety	Marelli Body Computer MY 03	●	●	●	●	●	○
DOBLO' (119)	1.9 DS	Safety	Marelli Body Computer MY 03	●	●	●	●	●	○
DOBLO' (119)	1.9 JTD	Safety	Marelli Body Computer MY 03	●	●	●	●	●	○
DOBLO' (119)	BIPOWER-GPOWER	Safety	Marelli Body Computer MY 03	●	●	●	●	●	○
DOBLO' CARGO (223)	1.3 JTD	Safety	Marelli Body Computer MY 03	●	●	●	●	●	○
DOBLO' CARGO (223)	1.4 8V	Safety	Marelli Body Computer MY 03	●	●	●	●	●	○
DOBLO' CARGO (223)	1.9 JTD	Safety	Marelli Body Computer MY 03	●	●	●	●	●	○
DOBLO' CARGO (223)	BIPOWER-GPOWER	Safety	Marelli Body Computer MY 03	●	●	●	●	●	○
DOBLO' (119)	BIPOWER-GPOWER	Engine - Gearbox	Gas injection Metatron 6D0 EOBD	●	●	●	●	●	○
DOBLO' CARGO (223)	BIPOWER-GPOWER	Engine - Gearbox	Gas injection Metatron 6D0 EOBD	●	●	●	●	●	○
STRADA	1.3 JTD	Instrumentation	Marelli instrument panel (Palio RST2)	●	●	●	●	●	0070 0044 0064 0034
STRADA	1.6 16V	Instrumentation	Marelli instrument panel (Palio RST2)	●	●	●	●	●	0070 0044 0064 0034
STRADA	1.3 JTD	Safety	Marelli Body Computer 2	●	●	●	●	●	○
STRADA	1.6 16V	Safety	Marelli Body Computer 2	●	●	●	●	●	○
DOBLO' (119)	1.9 JTD	Engine - Gearbox	Bosch Diesel Injection EDC16C39 CF4/EOBD (eng. 1.9/2.4)	●	●	●	●	●	0043 0014 0063 0054 0053 0037 0002 0020 0052 0047 0046
DOBLO' CARGO (223)	1.9 JTD	Engine - Gearbox	Bosch Diesel Injection EDC16C39 CF4/EOBD (eng. 1.9/2.4)	●	●	●	●	●	0043 0014 0063 0054 0053 0037 0002 0020 0052 0047 0046
DUCATO (250)	2.2 JTD	Safety	Bosch 8 ASR ABS	●	●	●	●	●	○
DUCATO (250)	2.3 JTD	Safety	Bosch 8 ASR ABS	●	●	●	●	●	○
DUCATO (250)	3.0 16V CNG	Safety	Bosch 8 ASR ABS	●	●	●	●	●	○
DUCATO (250)	3.0 JTD	Safety	Bosch 8 ASR ABS	●	●	●	●	●	○
DUCATO (250)	MINIBUS 16+1	Safety	Bosch 8 ASR ABS	●	●	●	●	●	○
DUCATO (250)	MINIBUS 3.0 16V CNG	Safety	Bosch 8 ASR ABS	●	●	●	●	●	○
DOBLO' (119)	1.4 8V	Engine - Gearbox	Magneti Marelli Injection IAW 5SF CF4/EOBD (eng. 1.4 8v)	●	●	●	●	●	
DOBLO' CARGO (223)	1.4 8V	Engine - Gearbox	Magneti Marelli Injection IAW 5SF CF4/EOBD (eng. 1.4 8v)	●	●	●	●	●	
SCUDO (272)	1.6 JTD 16V	Safety	Delphi Alarm	●	●	●	●	●	
SCUDO (272)	2.0 JTD 16V	Safety	Delphi Alarm	●	●	●	●	●	
SCUDO (272)	1.6 JTD 16V	Comfort	Blaupunkt radio	●	●	●	●	●	○
SCUDO (272)	2.0 JTD 16V	Comfort	Blaupunkt radio	●	●	●	●	●	○
DOBLO' (119)	1.3 JTD	Engine - Gearbox	Marelli Diesel Injection 6F3 EOBD (eng. 1.3 JTD)	●	●	●	●	●	0043 0014 0063 0050 0054 0053 0037 0002 0020 0052 0047 0046
DOBLO' CARGO (223)	1.3 JTD	Engine - Gearbox	Marelli Diesel Injection 6F3 EOBD (eng. 1.3 JTD)	●	●	●	●	●	0043 0014 0063 0050 0054 0053 0037 0002 0020 0052 0047 0046
STRADA	1.3 JTD	Engine - Gearbox	Marelli Diesel Injection 6F3 EOBD (eng. 1.3 JTD)	●	●	●	●	●	0043 0014 0063 0050 0054 0053 0037 0002 0020 0052 0047 0046
SCUDO (272)	1.6 JTD 16V	Comfort	Clarion CD Magazine (CAN)	●	●	●	●	●	
SCUDO (272)	2.0 JTD 16V	Comfort	Clarion CD Magazine (CAN)	●	●	●	●	●	
SCUDO (272)	1.6 JTD 16V	Instrumentation	PSA Marelli Connect (CAN)	●	●	●	●	●	○
SCUDO (272)	2.0 JTD 16V	Instrumentation	PSA Marelli Connect (CAN)	●	●	●	●	●	○
SCUDO (272)	1.6 JTD 16V	Comfort	Bosch luminosity/rain sensor	●	●	●	●	○	○
SCUDO (272)	2.0 JTD 16V	Comfort	Bosch luminosity/rain sensor	●	●	●	●	○	○
SCUDO (272)	1.6 JTD 16V	Safety	BOSCH/TEMIC Airbag (CAN)	●	●	●	●	○	○
SCUDO (272)	2.0 JTD 16V	Safety	BOSCH/TEMIC Airbag (CAN)	●	●	●	●	○	○
SCUDO (272)	1.6 JTD 16V	Instrumentation	Johnson / Borg multi-function screen	●	●	●	●	●	
SCUDO (272)	2.0 JTD 16V	Instrumentation	Johnson / Borg multi-function screen	●	●	●	●	●	

Model	Version	Group	System	ECU Info.	Read Codes	Erase Codes	Live Data	Active Test	Specil Function
SCUDO (272)	1.6 JTD 16V	Safety	HPI Power steering	●	●	●	●	●	○
SCUDO (272)	2.0 JTD 16V	Safety	HPI Power steering	●	●	●	●	●	○
DOBLO' (152)	1.3 MJET 16V	Instrumentation	Marelli/Microsoft Convergence (EP)	●	●	●	●	●	○
DOBLO' (152)	1.4 16V	Instrumentation	Marelli/Microsoft Convergence (EP)	●	●	●	●	●	○
DOBLO' (152)	1.6 MJET 16V	Instrumentation	Marelli/Microsoft Convergence (EP)	●	●	●	●	●	○
DOBLO' (152)	2.0 MJET 16V	Instrumentation	Marelli/Microsoft Convergence (EP)	●	●	●	●	●	○
DOBLO' (152)	NATURAL POWER	Instrumentation	Marelli/Microsoft Convergence (EP)	●	●	●	●	●	○
DOBLO' (263)	1.3 MJET 16V	Instrumentation	Marelli/Microsoft Convergence (EP)	●	●	●	●	●	○
DOBLO' (263)	1.4 16V	Instrumentation	Marelli/Microsoft Convergence (EP)	●	●	●	●	●	○
DOBLO' (263)	1.6 MJET 16V	Instrumentation	Marelli/Microsoft Convergence (EP)	●	●	●	●	●	○
DOBLO' (263)	2.0 MJET 16V	Instrumentation	Marelli/Microsoft Convergence (EP)	●	●	●	●	●	○
DOBLO' (263)	NATURAL POWER	Instrumentation	Marelli/Microsoft Convergence (EP)	●	●	●	●	●	○
FIORINO (225)	1.3 JTD	Instrumentation	Marelli/Microsoft Convergence (EP)	●	●	●	●	●	○
FIORINO (225)	1.4 8V	Instrumentation	Marelli/Microsoft Convergence (EP)	●	●	●	●	●	○
DUCATO (250)	2.2 JTD	Instrumentation	Marelli/Microsoft Convergence	●	●	●	●	●	○
DUCATO (250)	2.3 JTD	Instrumentation	Marelli/Microsoft Convergence	●	●	●	●	●	○
DUCATO (250)	3.0 16V CNG	Instrumentation	Marelli/Microsoft Convergence	●	●	●	●	●	○
DUCATO (250)	3.0 JTD	Instrumentation	Marelli/Microsoft Convergence	●	●	●	●	●	○
DUCATO (250)	MINIBUS 16+1	Instrumentation	Marelli/Microsoft Convergence	●	●	●	●	●	○
DUCATO (250)	MINIBUS 3.0 16V CNG	Instrumentation	Marelli/Microsoft Convergence	●	●	●	●	●	○
FIORINO (225)	1.3 JTD	Instrumentation	Marelli cluster (EP)	●	●	●	●	●	0070 0064 0066 0065 0034
FIORINO (225)	1.4 8V	Instrumentation	Marelli cluster (EP)	●	●	●	●	●	0070 0064 0066 0065 0034
SCUDO (272)	1.6 JTD 16V	Comfort	PSA Valeo Parking Control Unit (CAN)	●	●	●	●	●	○
SCUDO (272)	2.0 JTD 16V	Comfort	PSA Valeo Parking Control Unit (CAN)	●	●	●	●	●	○
FIORINO (225)	1.3 JTD	Safety	Bosch ABS 8 ESP (EP)	●	●	●	●	●	
FIORINO (225)	1.4 8V	Safety	Bosch ABS 8 ESP (EP)	●	●	●	●	●	
DOBLO' (152)	1.3 MJET 16V	Comfort	Denso Heater (EP)	●	●	●	●	●	○
DOBLO' (152)	1.4 16V	Comfort	Denso Heater (EP)	●	●	●	●	●	○
DOBLO' (152)	1.6 MJET 16V	Comfort	Denso Heater (EP)	●	●	●	●	●	○
DOBLO' (152)	2.0 MJET 16V	Comfort	Denso Heater (EP)	●	●	●	●	●	○
DOBLO' (152)	NATURAL POWER	Comfort	Denso Heater (EP)	●	●	●	●	●	○
DOBLO' (263)	1.3 MJET 16V	Comfort	Denso Heater (EP)	●	●	●	●	●	○
DOBLO' (263)	1.4 16V	Comfort	Denso Heater (EP)	●	●	●	●	●	○
DOBLO' (263)	1.6 MJET 16V	Comfort	Denso Heater (EP)	●	●	●	●	●	○
DOBLO' (263)	2.0 MJET 16V	Comfort	Denso Heater (EP)	●	●	●	●	●	○
DOBLO' (263)	NATURAL POWER	Comfort	Denso Heater (EP)	●	●	●	●	●	○
DOBLO' (119)	1.8 8V	Engine - Gearbox	Delphi MT27E injection (eng.1.8 8v)	●	●	●	●	●	○
DUCATO (250)	2.2 JTD	Safety	TRW 1 Airbag (Proxi)	●	●	●	●	●	○
DUCATO (250)	2.3 JTD	Safety	TRW 1 Airbag (Proxi)	●	●	●	●	●	○
DUCATO (250)	3.0 16V CNG	Safety	TRW 1 Airbag (Proxi)	●	●	●	●	●	○
DUCATO (250)	3.0 JTD	Safety	TRW 1 Airbag (Proxi)	●	●	●	●	●	○
DUCATO (250)	MINIBUS 16+1	Safety	TRW 1 Airbag (Proxi)	●	●	●	●	●	○
DUCATO (250)	MINIBUS 3.0 16V CNG	Safety	TRW 1 Airbag (Proxi)	●	●	●	●	●	○
DUCATO (250)	2.2 JTD	Instrumentation	Marelli/Microsoft C3 Convergence	●	●	●	●	●	○
DUCATO (250)	2.3 JTD	Instrumentation	Marelli/Microsoft C3 Convergence	●	●	●	●	●	○
DUCATO (250)	3.0 16V CNG	Instrumentation	Marelli/Microsoft C3 Convergence	●	●	●	●	●	○
DUCATO (250)	3.0 JTD	Instrumentation	Marelli/Microsoft C3 Convergence	●	●	●	●	●	○
DUCATO (250)	MINIBUS 16+1	Instrumentation	Marelli/Microsoft C3 Convergence	●	●	●	●	●	○

Model	Version	Group	System	ECU Info.	Read Codes	Erase Codes	Live Data	Active Test	Specil Function
DUCATO (250)	MINIBUS 3.0 16V CNG	Instrumentation	Marelli/Microsoft C3 Convergence	●	●	●	●	●	○
DOBLO' (152)	1.3 MJET 16V	Instrumentation	Marelli/Microsoft C3 (EP) Convergence	●	●	●	●	●	○
DOBLO' (152)	1.4 16V	Instrumentation	Marelli/Microsoft C3 (EP) Convergence	●	●	●	●	●	○
DOBLO' (152)	1.6 MJET 16V	Instrumentation	Marelli/Microsoft C3 (EP) Convergence	●	●	●	●	●	○
DOBLO' (152)	2.0 MJET 16V	Instrumentation	Marelli/Microsoft C3 (EP) Convergence	●	●	●	●	●	○
DOBLO' (152)	NATURAL POWER	Instrumentation	Marelli/Microsoft C3 (EP) Convergence	●	●	●	●	●	○
DOBLO' (263)	1.3 MJET 16V	Instrumentation	Marelli/Microsoft C3 (EP) Convergence	●	●	●	●	●	○
DOBLO' (263)	1.4 16V	Instrumentation	Marelli/Microsoft C3 (EP) Convergence	●	●	●	●	●	○
DOBLO' (263)	1.6 MJET 16V	Instrumentation	Marelli/Microsoft C3 (EP) Convergence	●	●	●	●	●	○
DOBLO' (263)	2.0 MJET 16V	Instrumentation	Marelli/Microsoft C3 (EP) Convergence	●	●	●	●	●	○
DOBLO' (263)	NATURAL POWER	Instrumentation	Marelli/Microsoft C3 (EP) Convergence	●	●	●	●	●	○
DUCATO (250)	2.2 JTD	Other systems	Actia Chronotachigraph	●	●	●	●	●	○
DUCATO (250)	2.3 JTD	Other systems	Actia Chronotachigraph	●	●	●	●	●	○
DUCATO (250)	3.0 16V CNG	Other systems	Actia Chronotachigraph	●	●	●	●	●	○
DUCATO (250)	3.0 JTD	Other systems	Actia Chronotachigraph	●	●	●	●	●	○
DUCATO (250)	MINIBUS 16+1	Other systems	Actia Chronotachigraph	●	●	●	●	●	○
DUCATO (250)	MINIBUS 3.0 16V CNG	Other systems	Actia Chronotachigraph	●	●	●	●	●	○
DUCATO (250)	2.2 JTD	Instrumentation	Marelli instrument cluster (1)	●	●	●	●	●	0070 0044 0064 0066 0065 0034
DUCATO (250)	2.3 JTD	Instrumentation	Marelli instrument cluster (1)	●	●	●	●	●	0070 0044 0064 0066 0065 0034
DUCATO (250)	3.0 16V CNG	Instrumentation	Marelli instrument cluster (1)	●	●	●	●	●	0070 0044 0064 0066 0065 0034
DUCATO (250)	3.0 JTD	Instrumentation	Marelli instrument cluster (1)	●	●	●	●	●	0070 0044 0064 0066 0065 0034
DUCATO (250)	MINIBUS 16+1	Instrumentation	Marelli instrument cluster (1)	●	●	●	●	●	0070 0044 0064 0066 0065 0034
DUCATO (250)	MINIBUS 3.0 16V CNG	Instrumentation	Marelli instrument cluster (1)	●	●	●	●	●	0070 0044 0064 0066 0065 0034
DOBLO' (119)	1.4 8V	Engine - Gearbox	Magneti Marelli IAW 5SF injection (eng. 1.4 8v) Extra EEC	●	●	●	●	●	
DOBLO' CARGO (223)	1.4 8V	Engine - Gearbox	Magneti Marelli IAW 5SF injection (eng. 1.4 8v) Extra EEC	●	●	●	●	●	
DUCATO (244)	2.3 JTD	Engine - Gearbox	Bosch EDC16C39 CF4/EOBD Diesel Injection (eng 2.3/3.0)	●	●	●	●	●	0043 0014 0063 0054 0053 0037 0002 0020 0052 0047 0046 0072
DUCATO (250)	2.3 JTD	Engine - Gearbox	Bosch EDC16C39 CF4/EOBD Diesel Injection (eng 2.3/3.0)	●	●	●	●	●	0043 0014 0063 0054 0053 0037 0002 0020 0052 0047 0046 0072
DUCATO (250)	3.0 JTD	Engine - Gearbox	Bosch EDC16C39 CF4/EOBD Diesel Injection (eng 2.3/3.0)	●	●	●	●	●	0043 0014 0063 0054 0053 0037 0002 0020 0052 0047 0046 0072
DUCATO (250)	MINIBUS 16+1 SEATS	Engine - Gearbox	Bosch EDC16C39 CF4/EOBD Diesel Injection (eng 2.3/3.0)	●	●	●	●	●	0043 0014 0063 0054 0053 0037 0002 0020 0052 0047 0046 0072
SCUDO (272)	2.0 JTD 16V	Engine - Gearbox	Siemens Diesel Injection SID803 CF4/EOBD	●	●	●	●	●	
DUCATO (250)	2.2 JTD	Engine - Gearbox	Visteon CF4/EOBD Diesel Injection (eng. 2.2)	●	●	●	●	●	0102
DUCATO (250)	2.2 JTD	Comfort	Bosch Parking Control Unit (1)	●	●	●	●	○	
DUCATO (250)	2.3 JTD	Comfort	Bosch Parking Control Unit (1)	●	●	●	●	○	
DUCATO (250)	3.0 16V CNG	Comfort	Bosch Parking Control Unit (1)	●	●	●	●	○	
DUCATO (250)	3.0 JTD	Comfort	Bosch Parking Control Unit (1)	●	●	●	●	○	
DUCATO (250)	MINIBUS 16+1	Comfort	Bosch Parking Control Unit (1)	●	●	●	●	○	
DUCATO (250)	MINIBUS 3.0 16V CNG	Comfort	Bosch Parking Control Unit (1)	●	●	●	●	○	
FIORINO (225)	1.3 JTD	Engine - Gearbox	Marelli SELESPEED CFC300 (EP) Automatic	●	●	●	●	●	0164 0014 0172
DUCATO (250)	2.2 JTD	Other systems	Continental Air Springs	●	●	●	●	○	○
DUCATO (250)	2.3 JTD	Other systems	Continental Air Springs	●	●	●	●	○	○

Model	Version	Group	System	ECU Info.	Read Codes	Erase Codes	Live Data	Active Test	Specil Function
DUCATO (250)	3.0 16V CNG	Other systems	Continental Air Springs	●	●	●	●	○	○
DUCATO (250)	3.0 JTD	Other systems	Continental Air Springs	●	●	●	●	○	○
DUCATO (250)	MINIBUS 16+1	Other systems	Continental Air Springs	●	●	●	●	○	○
DUCATO (250)	MINIBUS 3.0 16V CNG	Other systems	Continental Air Springs	●	●	●	●	○	○
DUCATO (250)	2.2 JTD	Safety	Marelli Body Computer 6	●	●	●	●	●	○
DUCATO (250)	2.3 JTD	Safety	Marelli Body Computer 6	●	●	●	●	●	○
DUCATO (250)	3.0 16V CNG	Safety	Marelli Body Computer 6	●	●	●	●	●	○
DUCATO (250)	3.0 JTD	Safety	Marelli Body Computer 6	●	●	●	●	●	○
DUCATO (250)	MINIBUS 16+1	Safety	Marelli Body Computer 6	●	●	●	●	●	○
DUCATO (250)	MINIBUS 3.0 16V CNG	Safety	Marelli Body Computer 6	●	●	●	●	●	○
DUCATO (250)	2.2 JTD	Comfort	Climate control Denso 2 (Single-zone)	●	●	●	●	●	○
DUCATO (250)	2.3 JTD	Comfort	Climate control Denso 2 (Single-zone)	●	●	●	●	●	○
DUCATO (250)	3.0 16V CNG	Comfort	Climate control Denso 2 (Single-zone)	●	●	●	●	●	○
DUCATO (250)	3.0 JTD	Comfort	Climate control Denso 2 (Single-zone)	●	●	●	●	●	○
DUCATO (250)	MINIBUS 16+1	Comfort	Climate control Denso 2 (Single-zone)	●	●	●	●	●	○
DUCATO (250)	MINIBUS 3.0 16V CNG	Comfort	Climate control Denso 2 (Single-zone)	●	●	●	●	●	○
SCUDO (272)	1.6 JTD 16V	Other systems	Wabco Air Springs	●	●	●	●	●	○
SCUDO (272)	2.0 JTD 16V	Other systems	Wabco Air Springs	●	●	●	●	●	○
SCUDO (272)	1.6 JTD 16V	Safety	Bosch ABS 8 PSA (CAN)	●	●	●	●	●	
SCUDO (272)	2.0 JTD 16V	Safety	Bosch ABS 8 PSA (CAN)	●	●	●	●	●	
SCUDO (272)	1.6 JTD 16V	Safety	Bosch ABS 8 ESP PSA 2 (CAN)	●	●	●	●	●	
SCUDO (272)	2.0 JTD 16V	Safety	Bosch ABS 8 ESP PSA 2 (CAN)	●	●	●	●	●	
SCUDO (272)	1.6 JTD 16V	Comfort	Denso Climate control PSA 2 (CAN)	●	●	●	●	●	
SCUDO (272)	2.0 JTD 16V	Comfort	Denso Climate control PSA 2 (CAN)	●	●	●	●	●	
SCUDO (272)	1.6 JTD 16V	Instrumentation	Marelli Instrument Panel PSA 2 (CAN)	●	●	●	●	●	○
SCUDO (272)	2.0 JTD 16V	Instrumentation	Marelli Instrument Panel PSA 2 (CAN)	●	●	●	●	●	○
SCUDO (272)	1.6 JTD 16V	Other systems	Siemens PSA viva voce	●	●	●	●	●	○
SCUDO (272)	2.0 JTD 16V	Other systems	Siemens PSA viva voce	●	●	●	●	●	○
SCUDO (272)	1.6 JTD 16V	Other systems	Delphi multi-function switch (COM2005)	●	●	●	●	●	○
SCUDO (272)	2.0 JTD 16V	Other systems	Delphi multi-function switch (COM2005)	●	●	●	●	●	○
SCUDO (272)	1.6 JTD 16V	Engine - Gearbox	Bosch Diesel Injection EDC16C34 CF4/EOBD (eng. 1.6)	●	●	●	●	●	○
SCUDO (272)	1.6 JTD 16V	Comfort	Denso PSA climate control (Rear)	●	●	●	●	●	○
SCUDO (272)	2.0 JTD 16V	Comfort	Denso PSA climate control (Rear)	●	●	●	●	●	○
SCUDO (272)	1.6 JTD 16V	Safety	Valeo Body Computer 2 (BSI CAN)	●	●	●	●	●	○
SCUDO (272)	2.0 JTD 16V	Safety	Valeo Body Computer 2 (BSI CAN)	●	●	●	●	●	○
DOBLO' (152)	1.4 16V	Engine - Gearbox	Bosch Motronic Injection Me7.9.10 CF5/EOBD (EP eng. 1.4)	●	●	●	●	●	○
DOBLO' (263)	1.4 16V	Engine - Gearbox	Bosch Motronic Injection Me7.9.10 CF5/EOBD (EP eng. 1.4)	●	●	●	●	●	○
FIORINO (225)	1.3 JTD	Safety	DELPHI Body Computer (EP) 2	●	●	●	●	●	○
FIORINO (225)	1.4 8V	Safety	DELPHI Body Computer (EP) 2	●	●	●	●	●	○
DOBLO' (152)	1.3 MJET 16V	Engine - Gearbox	Marelli 6F3 EOBD CAN Diesel Injection (EP eng. 1.3 JTD) 2	●	●	●	●	●	0043 0014 0047 0046
DOBLO' (263)	1.3 MJET 16V	Engine - Gearbox	Marelli 6F3 EOBD CAN Diesel Injection (EP eng. 1.3 JTD) 2	●	●	●	●	●	0043 0014 0047 0046

Model	Version	Group	System	ECU Info.	Read Codes	Erase Codes	Live Data	Active Test	Specil Function
FIORINO (225)	1.3 JTD	Engine - Gearbox	Marelli 6F3 EOBD CAN Diesel Injection (EP eng. 1.3 JTD) 2	●	●	●	●	●	0043 0014 0047 0046
DUCATO (250)	3.0 JTD	Engine - Gearbox	Automatic Gearbox Marelli SELESPEED CFC348	●	●	●	●	●	0164 0172
DUCATO (250)	MINIBUS 16+1	Engine - Gearbox	Automatic Gearbox Marelli SELESPEED CFC348	●	●	●	●	●	0164 0172
SCUDO (272)	1.6 JTD 16V	Safety	ABS Bosch 8.1 PSA (CAN)	●	●	●	●	●	
SCUDO (272)	2.0 JTD 16V	Safety	ABS Bosch 8.1 PSA (CAN)	●	●	●	●	●	
SCUDO (272)	1.6 JTD 16V	Safety	Bosch ABS 8.1 ESP PSA (CAN)	●	●	●	●	●	
SCUDO (272)	2.0 JTD 16V	Safety	Bosch ABS 8.1 ESP PSA (CAN)	●	●	●	●	●	
FIORINO (225)	1.3 JTD	Safety	Autoliv 2 Airbag (Proxi)	●	●	●	●	●	○
FIORINO (225)	1.4 8V	Safety	Autoliv 2 Airbag (Proxi)	●	●	●	●	●	○
DOBLO' (152)	1.3 MJET 16V	Comfort	Bosch Parking Control Unit (EP)	●	●	●	●	○	○
DOBLO' (152)	1.4 16V	Comfort	Bosch Parking Control Unit (EP)	●	●	●	●	○	○
DOBLO' (152)	1.6 MJET 16V	Comfort	Bosch Parking Control Unit (EP)	●	●	●	●	○	○
DOBLO' (152)	2.0 MJET 16V	Comfort	Bosch Parking Control Unit (EP)	●	●	●	●	○	○
DOBLO' (152)	NATURAL POWER	Comfort	Bosch Parking Control Unit (EP)	●	●	●	●	○	○
DOBLO' (263)	1.3 MJET 16V	Comfort	Bosch Parking Control Unit (EP)	●	●	●	●	○	○
DOBLO' (263)	1.4 16V	Comfort	Bosch Parking Control Unit (EP)	●	●	●	●	○	○
DOBLO' (263)	1.6 MJET 16V	Comfort	Bosch Parking Control Unit (EP)	●	●	●	●	○	○
DOBLO' (263)	2.0 MJET 16V	Comfort	Bosch Parking Control Unit (EP)	●	●	●	●	○	○
DOBLO' (263)	NATURAL POWER	Comfort	Bosch Parking Control Unit (EP)	●	●	●	●	○	○
FIORINO (225)	1.3 JTD	Comfort	Bosch Parking Control Unit (EP)	●	●	●	●	○	○
FIORINO (225)	1.4 8V	Comfort	Bosch Parking Control Unit (EP)	●	●	●	●	○	○
FIORINO (225)	1.4 8V	Engine - Gearbox	Injection, Valeo TU3 PSA (1.4 eng.)	●	●	●	●	●	○
SCUDO (272)	1.6 JTD 16V	Safety	Johnson EV Body Computer (BSI CAN)	●	●	●	●	●	0110
SCUDO (272)	2.0 JTD 16V	Safety	Johnson EV Body Computer (BSI CAN)	●	●	●	●	●	0110
FIORINO (225)	1.4 8V	Engine - Gearbox	Magneti Marelli Injection IAW 5SF8 Natural Power (EP eng. 8v)	●	●	●	●	●	
DOBLO' (152)	1.6 MJET 16V	Engine - Gearbox	Diesel Bosch Injection EDC16C39 CF5/EOBD CAN (EP 1.6/2.0 eng.)	●	●	●	●	●	0043 0198 0199 0014 0062 0046
DOBLO' (152)	2.0 MJET 16V	Engine - Gearbox	Diesel Bosch Injection EDC16C39 CF5/EOBD CAN (EP 1.6/2.0 eng.)	●	●	●	●	●	0043 0198 0199 0014 0062 0046
DOBLO' (263)	1.6 MJET 16V	Engine - Gearbox	Diesel Bosch Injection EDC16C39 CF5/EOBD CAN (EP 1.6/2.0 eng.)	●	●	●	●	●	0043 0198 0199 0014 0062 0046
DOBLO' (263)	2.0 MJET 16V	Engine - Gearbox	Diesel Bosch Injection EDC16C39 CF5/EOBD CAN (EP 1.6/2.0 eng.)	●	●	●	●	●	0043 0198 0199 0014 0062 0046
DOBLO' (152)	1.3 MJET 16V	Instrumentation	Marelli instrument cluster (EP) 3	●	●	●	●	●	0070 0064 0066 0065 0034
DOBLO' (152)	1.4 16V	Instrumentation	Marelli instrument cluster (EP) 3	●	●	●	●	●	0070 0064 0066 0065 0034
DOBLO' (152)	1.6 MJET 16V	Instrumentation	Marelli instrument cluster (EP) 3	●	●	●	●	●	0070 0064 0066 0065 0034
DOBLO' (152)	2.0 MJET 16V	Instrumentation	Marelli instrument cluster (EP) 3	●	●	●	●	●	0070 0064 0066 0065 0034
DOBLO' (152)	NATURAL POWER	Instrumentation	Marelli instrument cluster (EP) 3	●	●	●	●	●	0070 0064 0066 0065 0034
DOBLO' (263)	1.3 MJET 16V	Instrumentation	Marelli instrument cluster (EP) 3	●	●	●	●	●	0070 0064 0066 0065 0034
DOBLO' (263)	1.4 16V	Instrumentation	Marelli instrument cluster (EP) 3	●	●	●	●	●	0070 0064 0066 0065 0034
DOBLO' (263)	1.6 MJET 16V	Instrumentation	Marelli instrument cluster (EP) 3	●	●	●	●	●	0070 0064 0066 0065 0034
DOBLO' (263)	2.0 MJET 16V	Instrumentation	Marelli instrument cluster (EP) 3	●	●	●	●	●	0070 0064 0066 0065 0034
DOBLO' (263)	NATURAL POWER	Instrumentation	Marelli instrument cluster (EP) 3	●	●	●	●	●	0070 0064 0066 0065 0034
SCUDO (272)	1.6 JTD 16V	Instrumentation	Marelli Connect PSA RT5 (CAN)	●	●	●	●	●	○
SCUDO (272)	2.0 JTD 16V	Instrumentation	Marelli Connect PSA RT5 (CAN)	●	●	●	●	●	○
DUCATO (250)	3.0 16V CNG	Engine - Gearbox	Injection Magneti Marelli IAW 5SF4 Natural Power (eng. 3.0)	●	●	●	●	●	○

Model	Version	Group	System	ECU Info.	Read Codes	Erase Codes	Live Data	Active Test	Specil Function
DUCATO (250)	MINIBUS 3.0 16V CNG	Engine - Gearbox	Injection Magneti Marelli IAW 5SF4 Natural Power (eng. 3.0)	●	●	●	●	●	○
DOBLO' (152)	1.3 MJET 16V	Instrumentation	Lauberhorn Convergence (EP)	●	●	●	●	●	○
DOBLO' (152)	1.4 16V	Instrumentation	Lauberhorn Convergence (EP)	●	●	●	●	●	○
DOBLO' (152)	1.6 MJET 16V	Instrumentation	Lauberhorn Convergence (EP)	●	●	●	●	●	○
DOBLO' (152)	2.0 MJET 16V	Instrumentation	Lauberhorn Convergence (EP)	●	●	●	●	●	○
DOBLO' (152)	NATURAL POWER	Instrumentation	Lauberhorn Convergence (EP)	●	●	●	●	●	○
DOBLO' (263)	1.3 MJET 16V	Instrumentation	Lauberhorn Convergence (EP)	●	●	●	●	●	○
DOBLO' (263)	1.4 16V	Instrumentation	Lauberhorn Convergence (EP)	●	●	●	●	●	○
DOBLO' (263)	1.6 MJET 16V	Instrumentation	Lauberhorn Convergence (EP)	●	●	●	●	●	○
DOBLO' (263)	2.0 MJET 16V	Instrumentation	Lauberhorn Convergence (EP)	●	●	●	●	●	○
DOBLO' (263)	NATURAL POWER	Instrumentation	Lauberhorn Convergence (EP)	●	●	●	●	●	○
FIORINO (225)	1.3 JTD	Instrumentation	Lauberhorn Convergence (EP)	●	●	●	●	●	○
FIORINO (225)	1.4 8V	Instrumentation	Lauberhorn Convergence (EP)	●	●	●	●	●	○
DOBLO' (152)	1.3 MJET 16V	Engine - Gearbox	Marelli Diesel Injection 8DF CF5/EOBD (EP eng. 1.3 JTD)	●	●	●	●	●	0102 0198 0199 0014 0212 0213
DOBLO' (263)	1.3 MJET 16V	Engine - Gearbox	Marelli Diesel Injection 8DF CF5/EOBD (EP eng. 1.3 JTD)	●	●	●	●	●	0102 0198 0199 0014 0212 0213
FIORINO (225)	1.3 JTD	Engine - Gearbox	Marelli Diesel Injection 8DF CF5/EOBD (EP eng. 1.3 JTD)	●	●	●	●	●	0102 0198 0199 0014 0212 0213
SCUDO (272)	1.6 JTD 16V	Other systems	Siemens USB Box Control unit	●	●	●	●	●	○
SCUDO (272)	2.0 JTD 16V	Other systems	Siemens USB Box Control unit	●	●	●	●	●	○
DUCATO (250)	3.0 JTD	Engine - Gearbox	Bosch Diesel Injection EDC17CP52 EURO V/EOBD (eng. 3.0)	●	●	●	●	●	0102 0241 0213 0198 0199
DUCATO (250)	MINIBUS 16+1 SEATS	Engine - Gearbox	Bosch Diesel Injection EDC17CP52 EURO V/EOBD (eng. 3.0)	●	●	●	●	●	0102 0241 0213 0198 0199
DOBLO' (152)	1.3 MJET 16V	Comfort	Denso 3 Mono-zone Climate Control (EP)	●	●	●	●	●	○
DOBLO' (152)	1.4 16V	Comfort	Denso 3 Mono-zone Climate Control (EP)	●	●	●	●	●	○
DOBLO' (152)	1.6 MJET 16V	Comfort	Denso 3 Mono-zone Climate Control (EP)	●	●	●	●	●	○
DOBLO' (152)	2.0 MJET 16V	Comfort	Denso 3 Mono-zone Climate Control (EP)	●	●	●	●	●	○
DOBLO' (152)	NATURAL POWER	Comfort	Denso 3 Mono-zone Climate Control (EP)	●	●	●	●	●	○
DOBLO' (263)	1.3 MJET 16V	Comfort	Denso 3 Mono-zone Climate Control (EP)	●	●	●	●	●	○
DOBLO' (263)	1.4 16V	Comfort	Denso 3 Mono-zone Climate Control (EP)	●	●	●	●	●	○
DOBLO' (263)	1.6 MJET 16V	Comfort	Denso 3 Mono-zone Climate Control (EP)	●	●	●	●	●	○
DOBLO' (263)	2.0 MJET 16V	Comfort	Denso 3 Mono-zone Climate Control (EP)	●	●	●	●	●	○
DOBLO' (263)	NATURAL POWER	Comfort	Denso 3 Mono-zone Climate Control (EP)	●	●	●	●	●	○
DOBLO' (152)	1.3 MJET 16V	Safety	Continental MK60EC ABS (EP)	●	●	●	●	●	
DOBLO' (152)	1.4 16V	Safety	Continental MK60EC ABS (EP)	●	●	●	●	●	
DOBLO' (152)	1.6 MJET 16V	Safety	Continental MK60EC ABS (EP)	●	●	●	●	●	
DOBLO' (152)	2.0 MJET 16V	Safety	Continental MK60EC ABS (EP)	●	●	●	●	●	
DOBLO' (152)	NATURAL POWER	Safety	Continental MK60EC ABS (EP)	●	●	●	●	●	
DOBLO' (263)	1.3 MJET 16V	Safety	Continental MK60EC ABS (EP)	●	●	●	●	●	
DOBLO' (263)	1.4 16V	Safety	Continental MK60EC ABS (EP)	●	●	●	●	●	
DOBLO' (263)	1.6 MJET 16V	Safety	Continental MK60EC ABS (EP)	●	●	●	●	●	
DOBLO' (263)	2.0 MJET 16V	Safety	Continental MK60EC ABS (EP)	●	●	●	●	●	
DOBLO' (263)	NATURAL POWER	Safety	Continental MK60EC ABS (EP)	●	●	●	●	●	
DOBLO' (152)	1.3 MJET 16V	Safety	Bosch Air bag (EP)	●	●	●	●	●	○
DOBLO' (152)	1.4 16V	Safety	Bosch Air bag (EP)	●	●	●	●	●	○
DOBLO' (152)	1.6 MJET 16V	Safety	Bosch Air bag (EP)	●	●	●	●	●	○
DOBLO' (152)	2.0 MJET 16V	Safety	Bosch Air bag (EP)	●	●	●	●	●	○

Model	Version	Group	System	ECU Info.	Read Codes	Erase Codes	Live Data	Active Test	Specil Function
DOBLO' (152)	NATURAL POWER	Safety	Bosch Air bag (EP)	●	●	●	●	●	○
DOBLO' (263)	1.3 MJET 16V	Safety	Bosch Air bag (EP)	●	●	●	●	●	○
DOBLO' (263)	1.4 16V	Safety	Bosch Air bag (EP)	●	●	●	●	●	○
DOBLO' (263)	1.6 MJET 16V	Safety	Bosch Air bag (EP)	●	●	●	●	●	○
DOBLO' (263)	2.0 MJET 16V	Safety	Bosch Air bag (EP)	●	●	●	●	●	○
DOBLO' (263)	NATURAL POWER	Safety	Bosch Air bag (EP)	●	●	●	●	●	○
DOBLO' (152)	1.3 MJET 16V	Safety	Delphi Body Computer (EP) 5	●	●	●	●	●	○
DOBLO' (152)	1.4 16V	Safety	Delphi Body Computer (EP) 5	●	●	●	●	●	○
DOBLO' (152)	1.6 MJET 16V	Safety	Delphi Body Computer (EP) 5	●	●	●	●	●	○
DOBLO' (152)	2.0 MJET 16V	Safety	Delphi Body Computer (EP) 5	●	●	●	●	●	○
DOBLO' (152)	NATURAL POWER	Safety	Delphi Body Computer (EP) 5	●	●	●	●	●	○
DOBLO' (263)	1.3 MJET 16V	Safety	Delphi Body Computer (EP) 5	●	●	●	●	●	○
DOBLO' (263)	1.4 16V	Safety	Delphi Body Computer (EP) 5	●	●	●	●	●	○
DOBLO' (263)	1.6 MJET 16V	Safety	Delphi Body Computer (EP) 5	●	●	●	●	●	○
DOBLO' (263)	2.0 MJET 16V	Safety	Delphi Body Computer (EP) 5	●	●	●	●	●	○
DOBLO' (263)	NATURAL POWER	Safety	Delphi Body Computer (EP) 5	●	●	●	●	●	○
DOBLO' (152)	1.3 MJET 16V	Safety	Bosch Airbag (EP) 2	●	●	●	●	●	○
DOBLO' (152)	1.4 16V	Safety	Bosch Airbag (EP) 2	●	●	●	●	●	○
DOBLO' (152)	1.6 MJET 16V	Safety	Bosch Airbag (EP) 2	●	●	●	●	●	○
DOBLO' (152)	2.0 MJET 16V	Safety	Bosch Airbag (EP) 2	●	●	●	●	●	○
DOBLO' (152)	NATURAL POWER	Safety	Bosch Airbag (EP) 2	●	●	●	●	●	○
DOBLO' (263)	1.3 MJET 16V	Safety	Bosch Airbag (EP) 2	●	●	●	●	●	○
DOBLO' (263)	1.4 16V	Safety	Bosch Airbag (EP) 2	●	●	●	●	●	○
DOBLO' (263)	1.6 MJET 16V	Safety	Bosch Airbag (EP) 2	●	●	●	●	●	○
DOBLO' (263)	2.0 MJET 16V	Safety	Bosch Airbag (EP) 2	●	●	●	●	●	○
DOBLO' (263)	NATURAL POWER	Safety	Bosch Airbag (EP) 2	●	●	●	●	●	○
STRADA	1.6 16V	Engine - Gearbox	Magneti Marelli Injection IAW 5SF8 Tritec	●	●	●	●	●	○
SCUDO (272)	2.0 JTD 16V	Engine - Gearbox	Delphi DCM3.5 CF5 Diesel Injection (2.0 eng.)	●	●	●	●	●	
DOBLO' (152)	NATURAL POWER	Engine - Gearbox	Bosch Motronic Me7.9.10 CF5/EOBD Injection (EP 1.4 eng.)	●	●	●	●	●	○
DOBLO' (263)	NATURAL POWER	Engine - Gearbox	Bosch Motronic Me7.9.10 CF5/EOBD Injection (EP 1.4 eng.)	●	●	●	●	●	○
SCUDO (272)	2.0 JTD 16V	Instrumentation	Johnson EV CF5 Body Computer (BSI CAN)	●	●	●	●	●	○
DOBLO' (152)	1.6 MJET 16V	Engine - Gearbox	Automatic Gearbox Marelli SELESPEED CFC308	●	●	●	●	●	0164 0014 0118 0172
DOBLO' (263)	1.6 MJET 16V	Engine - Gearbox	Automatic Gearbox Marelli SELESPEED CFC308	●	●	●	●	●	0164 0014 0118 0172
FIORINO (225)	1.3 JTD	Engine - Gearbox	Automatic Gearbox Marelli SELESPEED CFC308	●	●	●	●	●	0164 0014 0118 0172
FIORINO (225)	1.4 8V	Engine - Gearbox	Injection, Valeo TU3 PSA CF5/EOBD (1.4 eng.)	●	●	●	●	●	○

Special_Function

Index	Specil Function Name	Index	Specil Function Name
0001	Air conditioner Learn	0002	Air flow meter replacement (only for version with Lambda sensor)
0003	Air flow meter sensor replacement	0004	Air flow sensor replacement
0005	Alarm deletion	0006	Alarm state check
0007	Antenna replacement	0008	Automatic Configuration Read
0009	Automatic Configuration Write	0010	Brake bleed
0011	Cam edges zeroing (VVT)	0012	Control unit activation
0013	Control unit deactivation	0014	Control unit replacement
0015	Cruise Control Learn	0016	Cyl. 1 injector classification
0017	Cyl. 2 injector classification	0018	Cyl. 3 injector classification
0019	Cyl. 4 injector classification	0020	Differential pressure sensor replacement (only for version with DPF)
0021	EGR valve learn	0022	EGR valve replacement
0023	Engine - Control Unit Group Replacement	0024	Engine type configuration
0025	FAP Replacement	0026	Fuel supply system
0027	Headlamp pos. correct.	0028	Injector classification (4 cyl. bank)
0029	Injector codes read	0030	Injector replacement (per bank)
0031	Inputs status	0032	Inspection service value
0033	Instrument panel lighting	0034	Instrument panel replacement
0035	Knock counter reset	0036	Lambda sensor check
0037	Lambda sensor replacement (only for version with Lambda sensor)	0038	LED colours configuration
0039	Longit. acc. sensor calibration	0040	Looks for faulty wheel transmitter
0041	Manual System Configuration	0042	Odometer write
0043	Oil change (only for version with DPF)	0044	Oil change servicing information delete
0045	Overboost counter reset	0046	Particulate filter regeneration (only for version with
0047	Particulate filter replacement (only for version with	0048	Phase sensor learn zeroing
0049	Phonic wheel learn reset	0050	Phonic wheel replacement
0051	Position sensor calibration	0052	Pre-catalyser replacement (only for version with DPF)
0053	Rail pressure sensor and injector/s replacement	0054	Rail pressure sensor replacement
0055	Replacement injector cyl. 5	0056	Replacement injectors (4 cyl. bank)
0057	Replacement Lambda sensor	0058	Replacement of injector cyl. 1
0059	Replacement of injector cyl. 2	0060	Replacement of injector cyl. 3
0061	Replacement of injector cyl. 4	0062	Replacement of particulate filter with built-in pre-catalyzer (only for versions with DPF)
0063	Replacment of control unit and injector/s	0064	Reset odometer
0065	Seat belts alarm Enable	0066	Seat belts alarm exclusion
0067	Secondary wheel identification deletion	0068	Self-learnt functions reset
0069	Services Interval KM message	0070	Servicing information delete
0071	Servo Mechanism Group Replacement	0072	Speed limit setting
0073	Startup with Code Card	0074	Steering angle calibration
0075	Steering angle reset	0076	System configuration
0077	Throttle learn storage	0078	Tow hook presence disable
0079	Tow hook presence enable	0080	Variable geometry turbo replacement
0081	Vehicle configuration deletion	0082	Vehicle type learn reset
0083	Wheel identification check	0084	Wheel transmitters learning
0085	Zeroing of self-adaption parameters	0086	Engine control unit programming
0087	System calibration	0088	Total additive quantity
0089	Part. Filter regeneration	0090	Customer mode
0091	Mounting check	0092	Tyre Pressure check
0093	Control Unit Replacement	0094	Additive type configuration
0095	RH distribution flap learn	0096	LH distribution flap learn
0097	LH mixing flap learn	0098	RH mixing flap learn
0099	United Kingdom (Thatcham std)	0100	Date daylight time changed
0101	Fuel level regulat.	0102	Oil change
0103	Self-adaptive parameters	0104	Phonic wheel learn
0105	Injector classification	0106	Recognition of speed sensor type

Index	Specil Function Name	Index	Specil Function Name
0107	Actuator tests	0108	Self-adaptation Parameter erasure
0109	Sensor vibration time too long	0110	Dist. To Next Service Zeroing (Coupon)
0111	Maintenance Services Config.	0112	Call buttons configuration
0113	Clutch replacement	0114	KIT/Gearbox replacement
0115	Electropump replacement	0116	Statistical data deletion
0117	Tunnel lever replacement	0118	Steering wheel levers replacement
0119	KIT/Pump replacement	0120	Pump relay replacement
0121	AUTO switch replacement	0122	Key storage
0123	System Configuration Read	0124	System Configuration Write
0125	Reset self-adapt. param. and idle act.	0126	Electronic Key control unit programming
0127	Engine Control + Electronic Key control units	0128	Clutch bleed
0129	Accumulator depressurisation	0130	Clutch self-calibration enable
0131	End of line / service self-calibration	0132	New actuators
0133	Flap actuators learning test	0134	Oil Counter Write
0135	Engagement lever pin securing screw diagnosis	0136	Selection lever return diagnosis
0137	Memory mode write	0138	Control Unit Unlock
0139	Calculation of clutch degradation index	0140	Test limit speed disable
0141	Test limit speed restore	0142	VIN Code Configuration
0143	Personal data deletion	0144	Cyl. 5 injector classification
0145	Injector classification (5 cyl. bank)	0146	Deletion of statistical data relating to errors
0147	CITY switch replacement	0148	SPORT switch replacement
0149	Activation/Deactivation 'Auxiliary video input'	0150	Cruise control learn zeroing
0151	Zeroing fan mode learn	0152	Borg Warner sol. valves compatibility
0153	Self-adapting parameters zeroing (air)	0154	Self-adapting parameters zeroing (knock)
0155	Gearbox Lever Position Learn	0156	Deletion stored buttons
0157	Audio System Test	0158	Convergence System Restart
0159	CAN Network Activation	0160	Deletion of air temperature sensor data
0161	High pressure pump replacement	0162	Additional diesel circuit filling
0163	Gearbox replacement	0164	Gearbox oil accumulator replacement
0165	Pilot injection learn	0166	ECO switch replacement
0167	End of line self-calibration	0168	Forced trim correction
0169	Vehicle geometry height setting	0170	Pneumatic circuit filling
0171	Pneumatic circuit unloading	0172	Longitudinal acceleration signal learn
0173	JukeBox data deletion	0174	ECO/SPORT switch replacement
0175	'UP Function' switch replacement	0176	Services Interval KM write (only 1.6 MJET 16V 105 hp
0177	Automatic gearbox replacement	0178	Automatic gearbox and Control unit replacement
0179	Automatic gearbox oil replacement	0180	Services Interval KM write (only for 1.4 TURBO 16v 120/150 bhp eng.)
0181	Static test	0182	C.P.H control unit programming
0183	C.P.H. control unit and engine control unit	0184	Remote control programming
0185	Key programming	0186	New vehicle preparation
0187	Reset distance till next servicing	0188	FAP Temperature Probe presence configuration
0189	Replacement of particulate filter and interventions on diesel additive circuit.	0190	Replacement of the additive, or the pump, or the tubes.
0191	System configuration via Examiner Web	0192	Performance limiting deactivation
0193	Volumetric sensors automatic diagnosis	0194	Neutral signal learn
0195	Hydraulic Kit replacement	0196	Sensors module replacement
0197	Selection and/or engagement clutch electrovalve	0198	Resetting distance travelled with Water Temp. w. lamp
0199	Resetting distance travelled with Water in diesel w.	0200	Accelerometer calibration
0201	Control unit Replacement / Reprogramming	0202	Motorised throttle replacement
0203	Upstream lambda sensor replacement	0204	MultiAir Rolling finger replacement
0205	Timing sensor and/or cam replacement	0206	Rpm sensor and/or distribution belt replacement
0207	Oil temperature sensor replacement	0208	UniAir module replacement
0209	Supercharging system components replacement	0210	Downstream lambda sensor and/or catalyzer and/or Injectors replacement
0211	Differential pressure sensor replacement	0212	Particulate filter with integrated pre-cat replacement
0213	Particulate filter regeneration	0214	Mechanical waste-gate valve replacement
0215	Replacement of variable geometry turbo and/or turbo posit. sensor	0216	Lateral and longitud. acceleration sensor calibration
0217	Pressure sensor calibration	0218	Load valves calibration
0219	Pilot valves calibration	0220	Longitudinal acceleration sensor replacement

Index	Specil Function Name	Index	Specil Function Name
0221	Even no. gear clutch pressure sensor replacement	0222	Odd no. gear clutch position sensor replacement
0223	Odd and/or even gear clutch replacement	0224	Electropump drive unit replacement
0225	Gearbox button panel replacement	0226	Replacement injectors
0227	Additive quantity volume	0228	Air flow meter replacement
0229	Air metering unit replacement	0230	Supercharg. air cooling SV replacement
0231	Replacement of Lambda sensor	0232	Homologation number
0233	Speed limit	0234	Levers on steering wheel learn
0235	Gearbox and hydraulic KIT replacement	0236	Parking manoeuvre status
0237	Phonic wheel and/or phase sensor and/or rev sensor replacement	0238	Replacement of lambda sensor and/or spark plugs and/or injectors
0239	Replacement of pressure/temperature sensor in methane	0240	Pre-catalyzer replacement
0241	Particulate filter replacement	0242	Alcohol fuel setting
0243	Petrol fuel setting	0244	Air/Fuel learn setting
F0003	Disable seat belts reminder	F00E5	Check PCM Odometer
F0001	Ecu Replacement	F00FD	Clear Learned Variable Line Pressure (VLP) Counters
F0004	Enable seat belts reminder	F00D5	Enable Emissions Rolls Test Mode (PowerNet)
F0005	Reset Odometer	F00E1	Enable Emissions Rolls Test Mode (TIPM)
F0006	Reset Service Information	F00D1	Exhaust Phaser 1 Cleaning
F0007	Instrument Panel Cluster Replacement	F00D2	Exhaust Phaser 2 Cleaning
F0008	Longitudinal G-Sensor Calibration Test	F00D0	Intake Phaser 1 Cleaning
F0009	Static test	F00D3	Intake Phaser 2 Cleaning
F000A	Steering angle sensor calibration	F00F8	Learn ETC
F0011	Self-learnt functions reset	F00F2	New Engine Installed
F0010	Speed limit setting	F00FA	Quicklearn (62TE)
F0012	Cylinder 1 injector replacement	F00D7	Quicklearn (Non-RFE)
F0013	Cylinder 2 injector replacement	F00F5	Quicklearn (RFE)
F0014	Cylinder 3 injector replacement	F00F6	Reset Memory
F0015	Cylinder 4 injector replacement	F00F0	TCC Break-In (62TE)
F000C	Injector codes read	F00F1	TCC Break-In (Non-RFE)
F0016	Injector replacement (per bank)	F0105	ITM and Siren Communication Test
F000D	Oil change	F0104	ITM Self Test
F000E	Phonic wheel replacement	F0103	ITM Siren Test
F0019	Pre-catalyzer replacement	F0106	Ultrasonic Motion Detection Test
F0017	Rail pressure sensor replacement	F0102	Initialize Siren
F000B	Startup with CODE CARD	F010A	View Last Successful Remote Start Event Data
F0022	Fan cooling activation	F0107	View Last VTA Trigger Cause Data
F0021	Resetting distance travelled with Water in diesel warning lamp ON	F0109	View Remote Start Abort Data
F0025	Air flow meter sensor replacement	F0111	View Remote Start Enable Data
F001E	Intelligent alternator (IAM) replacement	F0108	View Remote Start Inhibit Data
F0024	Lambda sensor replacement	F0110	View VTA Enable Data
F001F	Neutral signal learning	F0113	Auto Door Lock
F002B	Clutch group and/or clutch potentiometer replacement	F010C	Auto High Beam Aim Test
F002C	Fuel press. regulator replacement (high press. pump	F010E	Exit Shipping Mode
F002D	Rail overpressure waste gate valve replacement	F010B	Light Rain Sensor Re-Adaption
F0030	Reset Learned Adaptives	F0114	Program Tire Size
F002F	Reset vehicle configuration	F0112	Remote Start Temporary Disable
F0033	Adaptive parameters reset	F0116	Amp Input Test
F0035	Vehicle Configuration reset	F0115	Amp Software Test
F0031	Motorised throttle replacement	F0117	Actuator Calibration Test
F0034	Phonic wheel Reset	F0118	HVAC Cool Down Test
F0032	Timing sensor and/or cam replacement	F011A	First Pass Cool Down Test Results
F0036	Self-adaptive parameters reset	F0119	Most Recent Cool Down Test Results
F0038	Fuel supply system components replacement	F011B	System Wiring Test
F003F	Clutch Replacement	F011C	Configure License Plate Size
F0043	ECO function switch Replacement	F011E	Sensor Rolls Test
F003D	Electropump replacement	F011D	Activate TPM High Gain Mode
F003B	Gearbox oil accumulator replacement	F011F	TPM Sensor Position Parameter Update
F003C	Gearbox replacement	F0120	Anti-Theft Override Test
F0041	Longitudinal acceleration sensor replacement	F0121	Enable/Disable Front Seat Video
F003A	Pump Relay Replacement	F0123	ROW Map Configuration

Index	Specil Function Name	Index	Specil Function Name
F0039	Tunnel lever replacement	F0122	TGW Tone Test
F004D	Accumulator Oil replacement	F0124	Wheel speed sensor type test
F0046	Clutch bleed	F0126	tow hook enabled
F0048	Clutch group replacement	F0127	tow hook exclusion
F0044	Clutch self-calibration enable	F0129	Reset learning gear neutral position value
F004E	Hydraulic pressure depressurisation	F0128	Self learning throttle body
F004A	Kit replacement	F009C	Control unit reprogramming
F004B	Levers at wheel replacement	F012B	Steering Angle Sensor
F0045	New actuators	F012F	Body Blinking Lights Configuration
F0049	Pump replacement	F0130	TPM FGA Proxi Configuration
F0047	Reset statistical data	F0132	Pressure sensor calibration
F004C	Swtich AUTO replacement	F0131	Reset gear configuration
F0050	Trailer Hook presence disabling	F0133	Program Keys TRM 343
F0051	Trailer Hook presence enabling	F0134	First Passed Cool Down Test Results
F0052	Self Learning Working Mode	F0136	IPC Disable Seatbelt Minder Chime
F0053	Audio System Test	F0135	IPC Enable Seatbelt Minder Chime
F0054	ECU Restart routine	F0137	Proxi Configuration
F0059	Blinking Lights Configuration	F0139	CTM Proxi Configuration
F005A	Change Country Code	F013A	Clear Steering Pull Compensation
F0057	Exit Logistic Mode	F013B	Initialize EPS
F0058	Fire Protection System Activate	F013C	Clear Self Learning data
F005C	LIN Anti-tilt Sensor Check	F013D	Neutral Position Self-Learning
F005D	LIN Line Request Check	F0142	Bleed Hydraulic Circuit
F005E	LIN Ultrasonic Sensors Check	F0141	Hydraulic Circuit Depressurization
F0061	Modify lateral anti-tilt sensor	F013E	Learn Clutches Contact Point
F0062	Modify longitudinal anti-tilt sensor	F0143	Learn Long Acceleration Signal
F0060	Modify volumetric sensors sensibility	F0140	Quick Learn
F0064	Self adaptive parameters reset	F013F	Reset of Data Group
F0066	Megaknock counter reset	F0144	ABS Static Test
F0065	Over boost counter reset	F0147	Enable Front Fog Lamp Output
F0067	Deactivation of the Power Limitation function	F0146	Initialize Power Top
F006A	Lambda sensor and/or catalytic convertor replacement	F0149	RADIO Proxi Configuration
F0068	Rpm sensor and/or timing chain replacement	F014E	Air-Conditioning Self Learning
F0069	Supercharging system components replacement	F014D	Brake Switch Learn
F006F	Lambda sensor and/or catalytic convertor and/or injector replacement	F0150	Clear Misfire TLC
F0020	Resetting distance travelled with water temperature warning lamp ON	F014F	Clutch Pedal Learn
F0073	Clutch pedal learning	F0151	Emissions Rolls Test Mode
F0072	Motorized Throttle learning	F014B	Reset Accelerator Pedal Adaptives
F0071	Reset phases front	F014A	Reset ECU
F0074	Overboost counter Reset	F014C	Throttle Body Self Learning
F0075	Neutral Signal learning with engine off	F0156	1st Gear Clutch Test 62TE
F0078	Power Down	F0152	2nd Gear Clutch Test 62TE
F0077	Power on and Disable User Inputs	F0153	3rd Gear Clutch Test 62TE
F0076	Reset Parameters to Default	F0154	4th Gear Clutch Test 62TE
F0079	X65 Multi Package Factory Activation - Query Routine	F0158	Quicklearn (62TE - PCM Var16)
F007A	X65 Multi Package Factory Activation - Select Routine	F0157	Quicklearn (62TE - PCM Var17)
F007B	X65 Multi Package Factory Activation - Validate	F0155	TCC Break-In
F007C	Flap actuators learning test	F0159	Initialize EPPM
F007D	Steering Angle Calibration	F015B	Clear Multi-Module VIN Handshake Immobilizer Failure
F0080	Alarms deletion	F015A	ESCL Replaced
F0081	Antenna replacement	F015C	View Recent Multi-Module VIN Handshake Immobilizer
F0082	Control unit activation	F015D	Denormalize Window
F0083	Control unit deactivation	F015E	Cool Down Test
F0084	Manual System Configuration	F015F	Bleed Brakes
F0086	Wheel trasmitters learning	F0160	Initialize ABS
F008D	TPM Sensor Rolls Test	F016E	Accessory Delay Time
F0089	Clear TPM Sensor Rolls Test Results	F0168	Actuate Engine Battery Feed
F0090	Clear TPM Warnings	F0169	Actuate Transmission Relay
F008B	Program Left Front Tire Sensor ID	F016B	Acutate Fuel Pump

Index	Specil Function Name	Index	Specil Function Name
F008A	Program Left Rear Tire Sensor ID	F016C	Add Navigation Radio
F008C	Program Right Front Tire Sensor ID	F016D	Combined Rear Lighting
F0088	Program Right Rear Tire Sensor ID	F016A	Enable/Disable DRL
F008E	Update Front and Rear Axle Nominal Tire Pressure	F0172	Enable/Disable Front Fog Lamp
F0092	Electric pump drive unit command	F0163	Flash Hazard Lamps on Lock
F0093	Engagement electrovalve PPV1 command	F016F	Hard Top / Soft Top Configuration
F0094	Engagement electrovalve PPV2 command	F0166	Headlamps Delay Time
F0096	Even gear clutch (K2) control solenoid valve command	F0165	Headlamps On With Wipers
F0098	Lever release solenoid command	F0170	Horn Chirp Duration
F0095	Odd gear clutch (K1) control solenoid valve command	F0162	Illuminated Entry Time
F0097	Range selection electrovalve command (PPVS)	F0171	Program Network Configuration
F0091	Electropump drive unit replacement	F0164	Sound Horn on Lock
F009B	Even no. gear clutch pressure sensor replacement	F0161	Tip Start Temporary Disable
F009D	Hydraulic circuit depressurisation	F0167	Update Radio Market Select and DVD Region Code
F0042	Hydraulic Kit replacement	F0173	Self Test
F0099	Odd and/or even gear clutch replacement	F0177	Auto Door Unlock
F009A	Odd no. gear clutch position sensor replacement	F0174	Change Language Preference
F003E	Selection and/or engagement clutch electrovalve	F0176	Seatbelt Alert Minder
F0040	Sensors module replacement	F0178	Unlock Driver Door On 1st Press
F009E	Reversing lights command	F0175	Update Measurement Unit
F009F	Reset adaptative parameter	F017A	Radio Anti Theft Override Test
F00A0	Motorized throttle replacement	F0179	RADIO Tone Test
F00A1	Reset learn flag wheel tooth	F017B	Radio Hard-drive Back-up
F00A3	Longitudinal and Lateral sensor calibration	F017D	Radio Anti-Theft Override Test
F00A4	Longitudinal and Lateral sensor decalibration	F017C	Radio_Enable/Diable_Front_Video
F00A5	Self Learning Motor Test	F017E	Antenna Loop Test
F00A8	Brake pressure sensor calibration	F0182	TPM Trigger Module Test
F00A6	Inlet Valve Calibration	F017F	ELV Replaced
F00A7	Pilot Valve calibration	F0181	PCM Replaced
F00A9	Steering wheel angle sensor offset calibration	F0184	WCM Replaced
F00AA	TPMS calibration	F0185	View Satellite Sensor Information
F00AD	Engine replacement	F0186	Reset Adaptive Values
F00AE	AFLS Calibration	F0188	Store Learned Adaptives
F00AF	Anti tilt sensor check	F0189	Disable/Enable Seatbelt Minder Chime
F00B0	LIN line check request	F0190	Actuate Seat Recall
F00B1	Rain Lights Sensors and Automatic Lights Sensors	F018C	MSMD Self Test
F00B2	Siren check	F018F	Clear All Learned Seat Parameters
F00B3	Ultrasonic sensors check	F018B	Easy Entry/Exit
F00B4	Activate Driver and Passenger Head Restraint	F018E	Key Fobs Linked to Memory
F00B6	Initialize ORC	F018D	Standardization
F00B5	Rollover Detection	F018A	Tilt Mirrors in Reverse
F00B7	ABS Bleed Brakes	F0192	Sensor Connectivity and HMI Test
F00B8	ABS Initialization	F0194	Disable tow hook presence
F00B9	Brake Pedal Calibration	F0193	Enable tow hook presence
F00BA	HFM Self Test	F0195	Reset Adaptative Parameters
F00BB	IPC Self Test	F0196	Deactivation of Power Limitation
F00C0	Door Handle Verification Test	F0197	Phonic wheel learning
F00BD	Immobilizer Antenna Test	F0199	Injector/s replacement
F00BF	Locate Learned Keys	F019B	Actuator Calibration
F00BE	ELV Replace	F019C	Front Blower State
F00C1	Erase Ignition FOBIKs	F019D	Rear Blower State
F00BC	Program Ignition FOBIKs	F019E	First Passed Cooldown Test Results
F00C2	RF-HUB Replace	F019F	Calibrate Liftgate Full Close Position
F00C9	Air Flow Meter Replace	F01A0	Calibrate Liftgate Full Open Position
F00C4	Check PCM VIN	F01A1	Ramp Van Configuration
F00CD	Compression Test	F01A7	Diesel Particulate Filter Replacement
F00C8	DPF Reset Option	F01A9	Fuel Mean Value Adaption Initialization
F00CF	ECU Replacement With Value Transfer	F01A3	IMA Quick Calibration
F00CA	Injector Quantity Adjustment	F01A2	Lambda Sensor 1 Initialization
F00C7	Lambda Sensor Replace	F01A6	Oxidation Catalyst Initialization

Index	Specil Function Name	Index	Specil Function Name
F00CB	Program Variant Coding	F01A5	Rail Pressure Control Switchover
F00C6	Reset of Lambda Values	F01A4	Request Anti-Slugging For Air Condition Compressor
F00CE	Reset Oil Change Indicator	F01A8	TIPM Enable Emissions Rolls Test Mode
F00C5	Reset Zero Fuel Quantity Calibration	F01AA	Latch Cinch Test
F00CC	Service Diesel Particulate Filter Regeneration	F01AB	Latch Release Test
F00D8	1st Gear Clutch Test (62TE)	F01AC	Learn Latch Sector Home
F00DD	1st Gear Clutch Test (Non-RFE)	F01AD	LF Antenna Verification Test
F0100	1st Gear Clutch Test (RFE)	F01AE	PEM Replace
F00D9	2nd Gear Clutch Test (62TE)	F01B2	Actuate Drive Clutch Engage
F00DE	2nd Gear Clutch Test (Non-RFE)	F01B0	Sliding Door Close Test
F0101	2nd Gear Clutch Test (RFE)	F01B1	Sliding Door Open Test
F00DA	3rd Gear Clutch Test (62TE)	F01AF	Learn Side Identifier
F00DF	3rd Gear Clutch Test (Non-RFE)	F01B5	Calibrate Full Recline
F00E3	3rd Gear Clutch Test (RFE)	F01B6	Calibrate Stow
F00DB	4th Gear Clutch Test (62TE)	F01B3	Write Left Rear Seat Position
F00FE	EGR System Test	F01B4	Write Right Rear Seat Position
F00D4	Electric Vacuum Pump Test	F01B7	LRSM Re-adaption
F00E2	ESIM Forced Monitor Test	F01B9	Reset WIN Configuration
F00E6	ETC Throttle Follower Test	F01B8	WIN Replaced
F00FF	Injector Kill Test	F01BD	Siren Test
F00EC	Neutral Gate Test (62TE)	F01BC	ITM Initialize
F00EA	Neutral Gate Test (Non-RFE)	F01BB	ITM Initialize Siren
F00EB	Neutral Gate Test (RFE)	F01BE	Heated Steering Wheel Configuration
F00F3	O2 System Heater Test	F01BF	HIDT Calibration
F00E8	Overdrive Switch Test (Non-RFE)	F01C4	View Last VTA Trigger Cause
F00E9	Overdrive Switch Test (RFE)	F01C1	Auto Wipers
F00F4	Purge Vapors System Test	F01C3	Disable Radio Clock Display
F00DC	Reverse Gear Clutch Test (62TE)	F01C2	Unlock All Doors First Press
F00E0	Reverse Gear Clutch Test (Non-RFE)	F01C5	VTM transport mode status
F00E4	Reverse Gear Clutch Test (RFE)	F01C7	Active Grille Shutter Test
F00D6	Set Engine RPM	F01CA	Coolant Three Way Valve Test
F00ED	Shift Lever Position Test (62TE)	F01C6	Active Grille Shutter Replaced
F00EE	Shift Lever Position Test (Non-RFE)	F01C8	Clear Stored Accumulated Fuel Mass
F00EF	Shift Lever Position Test (RFE)	F01C9	Coolant Three Way Valve Replaced
F00F9	Thermistor Test (62TE)	F01CB	Reset VCM Adaptives
F00FB	Thermistor Test (Non-RFE)	F01CD	ECU SERIAL NUMBER Management
F00FC	Thermistor Test (RFE)	F01CE	Write Front and Rear nominal tire pressure values
F00F7	VVT System Test	F01CF	Aim Test
F00E7	Cam Crank Relearn	F01E0	PROXI alignment procedure