

# BENDIX

1. X : means the function is supported.

2. \* : means the function is added or developed newly in the new version

VEHICLE INFORMATION		FUNCTION					
Module	System	ECU INFO	DTC	DTC Freeze	Data List	Actuations	Spec. Func.
6&9 DEUTSCH Interface	Bendix ABS	X	X		X		