

# BREMACH

1. X : means the function is supported.

2. \* : means the function is added or developed newly in the new version

VEHICLE INFORMATION		FUNCTION					
Model	System	ECU INFO	DTC	DTC Freeze	Data List	Actuations	Spec. Func.
Brick	DIESEL INJECTION	X	X		X	X	
Extreme	DIESEL INJECTION	X	X		X	X	
Job	DIESEL INJECTION	X	X		X	X	