

FUSO

1. X : means the function is supported.

2. * : means the function is added or developed newly in the new version

VEHICLE INFORMATION		FUNCTION					
Module	System	ECU INFO	DTC	DTC Freeze	Data List	Actuations	Spec. Func.
Powertrain	Engine control Euro 3	X	X		X	X	DPF regeneration(Manual) DPF reset
Powertrain	Engine control Euro 4	X	X		X	X	VIN Information VIN Writing
Powertrain	Engine control Bosch EDC17(Euro 5)	X	X			X	FAP regeneration Engine oil Injector Pressure limit valve in rail Rail pressure sensor Oxygen sensor Air mass sensor Turbocharger Exhaust gas recirculation valve Starter Blue Tec Oxidation catalytic converter Differential pressure sensor of diesel particulate filter
Powertrain	Transmission Euro 3		X				
Powertrain	Transmission Euro 4/5	X	X		X	X	
Powertrain	ISS	X	X		X		
Powertrain	Motor control	X	X		X		
Powertrain	Battery control	X	X		X		
Chassis	ABS_1	X	X		X		
Chassis	ABS_2	X	X		X		
Body	Immobilizer	X	X		X		
Body	SRS	X	X				