

SCANIA

1. X : means the function is supported.
2. * : means the function is added or developed newly in the new version

VEHICLE INFORMATION			FUNCTION					
Exhaustion Standard	Model	System	ECU INFO	DTC	DTC Freeze	Data List	Actuations	Spec. Func.
Euro IV / Euro V (After 2006)	P230	APS(Compressed Air Supply)	X	X		X		Resetting air meter
Euro IV / Euro V (After 2006)	P230	ATA(Auxiliary heating system air-to-air)	X	X		X		
Euro IV / Euro V (After 2006)	P230	AWD(All-Wheel Drive)		X				
Euro IV / Euro V (After 2006)	P230	BCS(Bus chassis system)	X	X		X		
Euro IV / Euro V (After 2006)	P230	BMS(Brake Management System)	X	X		X		Reset self-learned parameters
Euro IV / Euro V (After 2006)	P230	BMS(Brake management system ABS E)	X	X		X	X	
Euro IV / Euro V (After 2006)	P230	BMS(Knorr-Bremse_BMS5.0_4x2)	X	X		X	X	
Euro IV / Euro V (After 2006)	P230	BMS(Knorr-Bremse_BMS5.0_6x2 6x4)	X	X		X	X	
Euro IV / Euro V (After 2006)	P230	BMS(Knorr-Bremse_BMS5.0_8x2)	X	X		X	X	
Euro IV / Euro V (After 2006)	P230	BWS(Preparation system)	X	X				
Euro IV / Euro V (After 2006)	P230	CCS(Climate control system)	X	X		X	X	
Euro IV / Euro V (After 2006)	P230	COO(Coordinator)	X	X		X		
Euro IV / Euro V (After 2006)	P230	COO(Coordinator module)	X	X				
Euro IV / Euro V (After 2006)	P230	CSS(Collision safety system)	X	X				
Euro IV / Euro V (After 2006)	P230	DAS(Adaptive Cruise Control)		X				
Euro IV / Euro V (After 2006)	P230	DIS(Adaptive Cruise Control)	X	X				
Euro IV / Euro V (After 2006)	P230	EEC(Exhaust Gas Treatment)	X	X		X	X	
Euro IV / Euro V (After 2006)	P230	EMS S6/S7(Engine Management System)	X	X		X	X	SCR warning light reset
Euro IV / Euro V (After 2006)	P230	EMS S8(Engine Management System)	X	X		X	X	
Euro IV / Euro V (After 2006)	P230	GMS(Gearbox Control System)	X	X		X	X	
Euro IV / Euro V (After 2006)	P230	ICL1(Instrument Cluster)	X	X		X	X	
Euro IV / Euro V (After 2006)	P230	ICL2(Instrument Cluster)	X	X		X	X	
Euro IV / Euro V (After 2006)	P230	LDW(Monitor traffic lane)	X	X				
Euro IV / Euro V (After 2006)	P230	LAS(Lock and alarm system)	X	X				
Euro IV / Euro V (After 2006)	P230	LAS(Lock and alarm system)	X	X				
Euro IV / Euro V (After 2006)	P230	RET(Retarder)	X	X		X	X	
Euro IV / Euro V (After 2006)	P230	SMS(Suspension Control System)	X	X		X		
Euro IV / Euro V (After 2006)	P230	SMS(Wabco_SMS CAN 2)	X	X		X		Calibration at normal level Level sensor calibration Pressure sensor calibration
Euro IV / Euro V (After 2006)	P230	TCO(Tachograph)	X	X				
Euro IV / Euro V (After 2006)	P230	DTCO(DTCO Tachograph)	X	X				
Euro IV / Euro V (After 2006)	P230	MTCO(MTCO Tachograph)	X	X				
Euro IV / Euro V (After 2006)	P230	VIS(Visibility System)	X	X		X		
Euro IV / Euro V (After 2006)	P230	VIS(Visibility System)	X	X		X	X	
Euro IV / Euro V (After 2006)	P230	CTS(Clock and Time System)		X				
Euro IV / Euro V (After 2006)	P230	AUS(Audio system)		X				
Euro IV / Euro V (After 2006)	P230	TPM(Tires pressure Monitoring System)		X				
Euro IV / Euro V (After 2006)	P230	RTI(Road Transport informatics)		X				
Euro IV / Euro V (After 2006)	P230	WTA(Auxiliary heating system water-to-air)	X	X				
Euro IV / Euro V (After 2006)	P270	APS(Compressed Air Supply)	X	X		X		Resetting air meter
Euro IV / Euro V (After 2006)	P270	ATA(Auxiliary heating system air-to-air)	X	X		X		
Euro IV / Euro V (After 2006)	P270	AWD(All-Wheel Drive)		X				
Euro IV / Euro V (After 2006)	P270	BCS(Bus chassis system)	X	X		X		
Euro IV / Euro V (After 2006)	P270	BMS(Brake Management System)	X	X		X		Reset self-learned parameters
Euro IV / Euro V (After 2006)	P270	BMS(Brake management system ABS E)	X	X		X	X	
Euro IV / Euro V (After 2006)	P270	BMS(Knorr-Bremse_BMS5.0_4x2)	X	X		X	X	
Euro IV / Euro V (After 2006)	P270	BMS(Knorr-Bremse_BMS5.0_6x2 6x4)	X	X		X	X	
Euro IV / Euro V (After 2006)	P270	BMS(Knorr-Bremse_BMS5.0_8x2)	X	X		X	X	
Euro IV / Euro V (After 2006)	P270	BWS(Preparation system)	X	X				
Euro IV / Euro V (After 2006)	P270	CCS(Climate control system)	X	X		X	X	
Euro IV / Euro V (After 2006)	P270	COO(Coordinator)	X	X		X		
Euro IV / Euro V (After 2006)	P270	COO(Coordinator module)	X	X				
Euro IV / Euro V (After 2006)	P270	CSS(Collision safety system)	X	X				
Euro IV / Euro V (After 2006)	P270	DAS(Adaptive Cruise Control)		X				
Euro IV / Euro V (After 2006)	P270	DIS(Adaptive Cruise Control)	X	X				
Euro IV / Euro V (After 2006)	P270	EEC(Exhaust Gas Treatment)	X	X		X	X	
Euro IV / Euro V (After 2006)	P270	EMS S6/S7(Engine Management System)	X	X		X	X	SCR warning light reset
Euro IV / Euro V (After 2006)	P270	EMS S8(Engine Management System)	X	X		X	X	

Exhaustion Standard	Model	System	ECU INFO	DTC	DTC Freeze	Data List	Actua tions	Spec. Func.
Euro IV / Euro V (After 2006)	P270	GMS(Gearbox Control System)	X	X		X	X	
Euro IV / Euro V (After 2006)	P270	ICL1(Instrument Cluster)	X	X		X	X	
Euro IV / Euro V (After 2006)	P270	ICL2(Instrument Cluster)	X	X		X	X	
Euro IV / Euro V (After 2006)	P270	LDW(Monitor traffic lane)	X	X				
Euro IV / Euro V (After 2006)	P270	LAS(Lock and alarm system)	X	X				
Euro IV / Euro V (After 2006)	P270	LAS(Lock and alarm system)	X	X				
Euro IV / Euro V (After 2006)	P270	RET(Retarder)	X	X		X	X	
Euro IV / Euro V (After 2006)	P270	SMS(Suspension Control System)	X	X		X		
Euro IV / Euro V (After 2006)	P270	SMS(Wabco_SMS CAN 2)	X	X		X		Calibration at normal level Level sensor calibration Pressure sensor calibration
Euro IV / Euro V (After 2006)	P270	TCO(Tachograph)	X	X				
Euro IV / Euro V (After 2006)	P270	DTCO(DTCO Tachograph)	X	X				
Euro IV / Euro V (After 2006)	P270	MTCO(MTCO Tachograph)	X	X				
Euro IV / Euro V (After 2006)	P270	VIS(Visibility System)	X	X		X		
Euro IV / Euro V (After 2006)	P270	VIS(Visibility System)	X	X		X	X	
Euro IV / Euro V (After 2006)	P270	CTS(Clock and Time System)		X				
Euro IV / Euro V (After 2006)	P270	AUS(Audio system)		X				
Euro IV / Euro V (After 2006)	P270	TPM(Tires pressure Monitoring System)		X				
Euro IV / Euro V (After 2006)	P270	RTI(Road Transport informatics)		X				
Euro IV / Euro V (After 2006)	P270	WTA(Auxiliary heating system water-to-air)	X	X				
Euro IV / Euro V (After 2006)	P280	APS(Compressed Air Supply)	X	X		X		Resetting air meter
Euro IV / Euro V (After 2006)	P280	ATA(Auxiliary heating system air-to-air)	X	X		X		
Euro IV / Euro V (After 2006)	P280	AWD(All-Wheel Drive)		X				
Euro IV / Euro V (After 2006)	P280	BCS(Bus chassis system)	X	X		X		
Euro IV / Euro V (After 2006)	P280	BMS(Brake Management System)	X	X		X		Reset self-learned parameters
Euro IV / Euro V (After 2006)	P280	BMS(Brake management system ABS E)	X	X		X	X	
Euro IV / Euro V (After 2006)	P280	BMS(Knorr-Bremse_BMS5.0_4x2)	X	X		X	X	
Euro IV / Euro V (After 2006)	P280	BMS(Knorr-Bremse_BMS5.0_6x2 6x4)	X	X		X	X	
Euro IV / Euro V (After 2006)	P280	BMS(Knorr-Bremse_BMS5.0_8x2)	X	X		X	X	
Euro IV / Euro V (After 2006)	P280	BWS(Preparation system)	X	X				
Euro IV / Euro V (After 2006)	P280	CCS(Climate control system)	X	X		X	X	
Euro IV / Euro V (After 2006)	P280	COO(Coordinator)	X	X		X		
Euro IV / Euro V (After 2006)	P280	COO(Coordinator module)	X	X				
Euro IV / Euro V (After 2006)	P280	CSS(Collision safety system)	X	X				
Euro IV / Euro V (After 2006)	P280	DAS(Adaptive Cruise Control)		X				
Euro IV / Euro V (After 2006)	P280	DIS(Adaptive Cruise Control)	X	X				
Euro IV / Euro V (After 2006)	P280	EEC(Exhaust Gas Treatment)	X	X		X	X	
Euro IV / Euro V (After 2006)	P280	EMS S6/S7(Engine Management System)	X	X		X	X	SCR warning light reset
Euro IV / Euro V (After 2006)	P280	EMS S8(Engine Management System)	X	X		X	X	
Euro IV / Euro V (After 2006)	P280	GMS(Gearbox Control System)	X	X		X	X	
Euro IV / Euro V (After 2006)	P280	ICL1(Instrument Cluster)	X	X		X	X	
Euro IV / Euro V (After 2006)	P280	ICL2(Instrument Cluster)	X	X		X	X	
Euro IV / Euro V (After 2006)	P280	LDW(Monitor traffic lane)	X	X				
Euro IV / Euro V (After 2006)	P280	LAS(Lock and alarm system)	X	X				
Euro IV / Euro V (After 2006)	P280	LAS(Lock and alarm system)	X	X				
Euro IV / Euro V (After 2006)	P280	RET(Retarder)	X	X		X	X	
Euro IV / Euro V (After 2006)	P280	SMS(Suspension Control System)	X	X		X		
Euro IV / Euro V (After 2006)	P280	SMS(Wabco_SMS CAN 2)	X	X		X		Calibration at normal level Level sensor calibration Pressure sensor calibration
Euro IV / Euro V (After 2006)	P280	TCO(Tachograph)	X	X				
Euro IV / Euro V (After 2006)	P280	DTCO(DTCO Tachograph)	X	X				
Euro IV / Euro V (After 2006)	P280	MTCO(MTCO Tachograph)	X	X				
Euro IV / Euro V (After 2006)	P280	VIS(Visibility System)	X	X		X		
Euro IV / Euro V (After 2006)	P280	VIS(Visibility System)	X	X		X	X	
Euro IV / Euro V (After 2006)	P280	CTS(Clock and Time System)		X				
Euro IV / Euro V (After 2006)	P280	AUS(Audio system)		X				
Euro IV / Euro V (After 2006)	P280	TPM(Tires pressure Monitoring System)		X				
Euro IV / Euro V (After 2006)	P280	RTI(Road Transport informatics)		X				
Euro IV / Euro V (After 2006)	P280	WTA(Auxiliary heating system water-to-air)	X	X				
Euro IV / Euro V (After 2006)	P310	APS(Compressed Air Supply)	X	X		X		Resetting air meter
Euro IV / Euro V (After 2006)	P310	ATA(Auxiliary heating system air-to-air)	X	X		X		
Euro IV / Euro V (After 2006)	P310	AWD(All-Wheel Drive)		X				
Euro IV / Euro V (After 2006)	P310	BCS(Bus chassis system)	X	X		X		
Euro IV / Euro V (After 2006)	P310	BMS(Brake Management System)	X	X		X		Reset self-learned parameters
Euro IV / Euro V (After 2006)	P310	BMS(Brake management system ABS E)	X	X		X	X	
Euro IV / Euro V (After 2006)	P310	BMS(Knorr-Bremse_BMS5.0_4x2)	X	X		X	X	

Exhaustion Standard	Model	System	ECU INFO	DTC	DTC Freeze	Data List	Actuations	Spec. Func.
Euro IV / Euro V (After 2006)	P310	BMS(Knorr-Bremse_BMS5.0_6x2 6x4)	X	X		X	X	
Euro IV / Euro V (After 2006)	P310	BMS(Knorr-Bremse_BMS5.0_8x2)	X	X		X	X	
Euro IV / Euro V (After 2006)	P310	BWS(Preparation system)	X	X				
Euro IV / Euro V (After 2006)	P310	CCS(Climate control system)	X	X		X	X	
Euro IV / Euro V (After 2006)	P310	COO(Coordinator)	X	X		X		
Euro IV / Euro V (After 2006)	P310	COO(Coordinator module)	X	X				
Euro IV / Euro V (After 2006)	P310	CSS(Collision safety system)	X	X				
Euro IV / Euro V (After 2006)	P310	DAS(Adaptive Cruise Control)		X				
Euro IV / Euro V (After 2006)	P310	DIS(Adaptive Cruise Control)	X	X				
Euro IV / Euro V (After 2006)	P310	EEC(Exhaust Gas Treatment)	X	X		X	X	
Euro IV / Euro V (After 2006)	P310	EMS S6/S7(Engine Management System)	X	X		X	X	SCR warning light reset
Euro IV / Euro V (After 2006)	P310	EMS S8(Engine Management System)	X	X		X	X	
Euro IV / Euro V (After 2006)	P310	GMS(Gearbox Control System)	X	X		X	X	
Euro IV / Euro V (After 2006)	P310	ICL1(Instrument Cluster)	X	X		X	X	
Euro IV / Euro V (After 2006)	P310	ICL2(Instrument Cluster)	X	X		X	X	
Euro IV / Euro V (After 2006)	P310	LDW(Monitor traffic lane)	X	X				
Euro IV / Euro V (After 2006)	P310	LAS(Lock and alarm system)	X	X				
Euro IV / Euro V (After 2006)	P310	LAS(Lock and alarm system)	X	X				
Euro IV / Euro V (After 2006)	P310	RET(Retarder)	X	X		X	X	
Euro IV / Euro V (After 2006)	P310	SMS(Suspension Control System)	X	X		X		
Euro IV / Euro V (After 2006)	P310	SMS(Wabco_SMS CAN 2)	X	X		X		Calibration at normal level Level sensor calibration Pressure sensor calibration
Euro IV / Euro V (After 2006)	P310	TCO(Tachograph)	X	X				
Euro IV / Euro V (After 2006)	P310	DTCO(DTCO Tachograph)	X	X				
Euro IV / Euro V (After 2006)	P310	MTCO(MTCO Tachograph)	X	X				
Euro IV / Euro V (After 2006)	P310	VIS(Visibility System)	X	X		X		
Euro IV / Euro V (After 2006)	P310	VIS(Visibility System)	X	X		X	X	
Euro IV / Euro V (After 2006)	P310	CTS(Clock and Time System)		X				
Euro IV / Euro V (After 2006)	P310	AUS(Audio system)		X				
Euro IV / Euro V (After 2006)	P310	TPM(Tires pressure Monitoring System)		X				
Euro IV / Euro V (After 2006)	P310	RTI(Road Transport informatics)		X				
Euro IV / Euro V (After 2006)	P310	WTA(Auxiliary heating system water-to-air)	X	X				
Euro IV / Euro V (After 2006)	P320	APS(Compressed Air Supply)	X	X		X		Resetting air meter
Euro IV / Euro V (After 2006)	P320	ATA(Auxiliary heating system air-to-air)	X	X		X		
Euro IV / Euro V (After 2006)	P320	AWD(All-Wheel Drive)		X				
Euro IV / Euro V (After 2006)	P320	BCS(Bus chassis system)	X	X		X		
Euro IV / Euro V (After 2006)	P320	BMS(Brake Management System)	X	X		X		Reset self-learned parameters
Euro IV / Euro V (After 2006)	P320	BMS(Brake management system ABS E)	X	X		X	X	
Euro IV / Euro V (After 2006)	P320	BMS(Knorr-Bremse_BMS5.0_4x2)	X	X		X	X	
Euro IV / Euro V (After 2006)	P320	BMS(Knorr-Bremse_BMS5.0_6x2 6x4)	X	X		X	X	
Euro IV / Euro V (After 2006)	P320	BMS(Knorr-Bremse_BMS5.0_8x2)	X	X		X	X	
Euro IV / Euro V (After 2006)	P320	BWS(Preparation system)	X	X				
Euro IV / Euro V (After 2006)	P320	CCS(Climate control system)	X	X		X	X	
Euro IV / Euro V (After 2006)	P320	COO(Coordinator)	X	X		X		
Euro IV / Euro V (After 2006)	P320	COO(Coordinator module)	X	X				
Euro IV / Euro V (After 2006)	P320	CSS(Collision safety system)	X	X				
Euro IV / Euro V (After 2006)	P320	DAS(Adaptive Cruise Control)		X				
Euro IV / Euro V (After 2006)	P320	DIS(Adaptive Cruise Control)	X	X				
Euro IV / Euro V (After 2006)	P320	EEC(Exhaust Gas Treatment)	X	X		X	X	
Euro IV / Euro V (After 2006)	P320	EMS S6/S7(Engine Management System)	X	X		X	X	SCR warning light reset
Euro IV / Euro V (After 2006)	P320	EMS S8(Engine Management System)	X	X		X	X	
Euro IV / Euro V (After 2006)	P320	GMS(Gearbox Control System)	X	X		X	X	
Euro IV / Euro V (After 2006)	P320	ICL1(Instrument Cluster)	X	X		X	X	
Euro IV / Euro V (After 2006)	P320	ICL2(Instrument Cluster)	X	X		X	X	
Euro IV / Euro V (After 2006)	P320	LDW(Monitor traffic lane)	X	X				
Euro IV / Euro V (After 2006)	P320	LAS(Lock and alarm system)	X	X				
Euro IV / Euro V (After 2006)	P320	LAS(Lock and alarm system)	X	X				
Euro IV / Euro V (After 2006)	P320	RET(Retarder)	X	X		X	X	
Euro IV / Euro V (After 2006)	P320	SMS(Suspension Control System)	X	X		X		
Euro IV / Euro V (After 2006)	P320	SMS(Wabco_SMS CAN 2)	X	X		X		Calibration at normal level Level sensor calibration Pressure sensor calibration
Euro IV / Euro V (After 2006)	P320	TCO(Tachograph)	X	X				
Euro IV / Euro V (After 2006)	P320	DTCO(DTCO Tachograph)	X	X				
Euro IV / Euro V (After 2006)	P320	MTCO(MTCO Tachograph)	X	X				
Euro IV / Euro V (After 2006)	P320	VIS(Visibility System)	X	X		X		
Euro IV / Euro V (After 2006)	P320	VIS(Visibility System)	X	X		X	X	

Exhaustion Standard	Model	System	ECU INFO	DTC	DTC Freeze	Data List	Actuations	Spec. Func.
Euro IV / Euro V (After 2006)	P320	CTS(Clock and Time System)		X				
Euro IV / Euro V (After 2006)	P320	AUS(Audio system)		X				
Euro IV / Euro V (After 2006)	P320	TPM(Tires pressure Monitoring System)		X				
Euro IV / Euro V (After 2006)	P320	RTI(Road Transport informatics)		X				
Euro IV / Euro V (After 2006)	P320	WTA(Auxiliary heating system water-to-air)	X	X				
Euro IV / Euro V (After 2006)	P340	APS(Compressed Air Supply)	X	X		X		Resetting air meter
Euro IV / Euro V (After 2006)	P340	ATA(Auxiliary heating system air-to-air)	X	X		X		
Euro IV / Euro V (After 2006)	P340	AWD(All-Wheel Drive)		X				
Euro IV / Euro V (After 2006)	P340	BCS(Bus chassis system)	X	X		X		
Euro IV / Euro V (After 2006)	P340	BMS(Brake Management System)	X	X		X		Reset self-learned parameters
Euro IV / Euro V (After 2006)	P340	BMS(Brake management system ABS E)	X	X		X	X	
Euro IV / Euro V (After 2006)	P340	BMS(Knorr-Bremse_BMS5.0_4x2)	X	X		X	X	
Euro IV / Euro V (After 2006)	P340	BMS(Knorr-Bremse_BMS5.0_6x2 6x4)	X	X		X	X	
Euro IV / Euro V (After 2006)	P340	BMS(Knorr-Bremse_BMS5.0_8x2)	X	X		X	X	
Euro IV / Euro V (After 2006)	P340	BWS(Preparation system)	X	X				
Euro IV / Euro V (After 2006)	P340	CCS(Climate control system)	X	X		X	X	
Euro IV / Euro V (After 2006)	P340	COO(Coordinator)	X	X		X		
Euro IV / Euro V (After 2006)	P340	COO(Coordinator module)	X	X				
Euro IV / Euro V (After 2006)	P340	CSS(Collision safety system)	X	X				
Euro IV / Euro V (After 2006)	P340	DAS(Adaptive Cruise Control)		X				
Euro IV / Euro V (After 2006)	P340	DIS(Adaptive Cruise Control)	X	X				
Euro IV / Euro V (After 2006)	P340	EEC(Exhaust Gas Treatment)	X	X		X	X	
Euro IV / Euro V (After 2006)	P340	EMS S6/S7(Engine Management System)	X	X		X	X	SCR warning light reset
Euro IV / Euro V (After 2006)	P340	EMS S8(Engine Management System)	X	X		X	X	
Euro IV / Euro V (After 2006)	P340	GMS(Gearbox Control System)	X	X		X	X	
Euro IV / Euro V (After 2006)	P340	ICL1(Instrument Cluster)	X	X		X	X	
Euro IV / Euro V (After 2006)	P340	ICL2(Instrument Cluster)	X	X		X	X	
Euro IV / Euro V (After 2006)	P340	LDW(Monitor traffic lane)	X	X				
Euro IV / Euro V (After 2006)	P340	LAS(Lock and alarm system)	X	X				
Euro IV / Euro V (After 2006)	P340	LAS(Lock and alarm system)	X	X				
Euro IV / Euro V (After 2006)	P340	RET(Retarder)	X	X		X	X	
Euro IV / Euro V (After 2006)	P340	SMS(Suspension Control System)	X	X		X		
Euro IV / Euro V (After 2006)	P340	SMS(Wabco_SMS CAN 2)	X	X		X		Calibration at normal level Level sensor calibration Pressure sensor calibration
Euro IV / Euro V (After 2006)	P340	TCO(Tachograph)	X	X				
Euro IV / Euro V (After 2006)	P340	DTCO(DTCO Tachograph)	X	X				
Euro IV / Euro V (After 2006)	P340	MTCO(MTCO Tachograph)	X	X				
Euro IV / Euro V (After 2006)	P340	VIS(Visibility System)	X	X		X		
Euro IV / Euro V (After 2006)	P340	VIS(Visibility System)	X	X		X	X	
Euro IV / Euro V (After 2006)	P340	CTS(Clock and Time System)		X				
Euro IV / Euro V (After 2006)	P340	AUS(Audio system)		X				
Euro IV / Euro V (After 2006)	P340	TPM(Tires pressure Monitoring System)		X				
Euro IV / Euro V (After 2006)	P340	RTI(Road Transport informatics)		X				
Euro IV / Euro V (After 2006)	P340	WTA(Auxiliary heating system water-to-air)	X	X				
Euro IV / Euro V (After 2006)	P360	APS(Compressed Air Supply)	X	X		X		Resetting air meter
Euro IV / Euro V (After 2006)	P360	ATA(Auxiliary heating system air-to-air)	X	X		X		
Euro IV / Euro V (After 2006)	P360	AWD(All-Wheel Drive)		X				
Euro IV / Euro V (After 2006)	P360	BCS(Bus chassis system)	X	X		X		
Euro IV / Euro V (After 2006)	P360	BMS(Brake Management System)	X	X		X		Reset self-learned parameters
Euro IV / Euro V (After 2006)	P360	BMS(Brake management system ABS E)	X	X		X	X	
Euro IV / Euro V (After 2006)	P360	BMS(Knorr-Bremse_BMS5.0_4x2)	X	X		X	X	
Euro IV / Euro V (After 2006)	P360	BMS(Knorr-Bremse_BMS5.0_6x2 6x4)	X	X		X	X	
Euro IV / Euro V (After 2006)	P360	BMS(Knorr-Bremse_BMS5.0_8x2)	X	X		X	X	
Euro IV / Euro V (After 2006)	P360	BWS(Preparation system)	X	X				
Euro IV / Euro V (After 2006)	P360	CCS(Climate control system)	X	X		X	X	
Euro IV / Euro V (After 2006)	P360	COO(Coordinator)	X	X		X		
Euro IV / Euro V (After 2006)	P360	COO(Coordinator module)	X	X				
Euro IV / Euro V (After 2006)	P360	CSS(Collision safety system)	X	X				
Euro IV / Euro V (After 2006)	P360	DAS(Adaptive Cruise Control)		X				
Euro IV / Euro V (After 2006)	P360	DIS(Adaptive Cruise Control)	X	X				
Euro IV / Euro V (After 2006)	P360	EEC(Exhaust Gas Treatment)	X	X		X	X	
Euro IV / Euro V (After 2006)	P360	EMS S6/S7(Engine Management System)	X	X		X	X	SCR warning light reset
Euro IV / Euro V (After 2006)	P360	EMS S8(Engine Management System)	X	X		X	X	
Euro IV / Euro V (After 2006)	P360	GMS(Gearbox Control System)	X	X		X	X	
Euro IV / Euro V (After 2006)	P360	ICL1(Instrument Cluster)	X	X		X	X	
Euro IV / Euro V (After 2006)	P360	ICL2(Instrument Cluster)	X	X		X	X	
Euro IV / Euro V (After 2006)	P360	LDW(Monitor traffic lane)	X	X				

Exhaustion Standard	Model	System	ECU INFO	DTC	DTC Freeze	Data List	Actuations	Spec. Func.
Euro IV / Euro V (After 2006)	P360	LAS(Lock and alarm system)	X	X				
Euro IV / Euro V (After 2006)	P360	LAS(Lock and alarm system)	X	X				
Euro IV / Euro V (After 2006)	P360	RET(Retarder)	X	X		X	X	
Euro IV / Euro V (After 2006)	P360	SMS(Suspension Control System)	X	X		X		
Euro IV / Euro V (After 2006)	P360	SMS(Wabco_SMS CAN 2)	X	X		X		Calibration at normal level Level sensor calibration Pressure sensor calibration
Euro IV / Euro V (After 2006)	P360	TCO(Tachograph)	X	X				
Euro IV / Euro V (After 2006)	P360	DTCO(DTCO Tachograph)	X	X				
Euro IV / Euro V (After 2006)	P360	MTCO(MTCO Tachograph)	X	X				
Euro IV / Euro V (After 2006)	P360	VIS(Visibility System)	X	X		X		
Euro IV / Euro V (After 2006)	P360	VIS(Visibility System)	X	X		X	X	
Euro IV / Euro V (After 2006)	P360	CTS(Clock and Time System)		X				
Euro IV / Euro V (After 2006)	P360	AUS(Audio system)		X				
Euro IV / Euro V (After 2006)	P360	TPM(Tires pressure Monitoring System)		X				
Euro IV / Euro V (After 2006)	P360	RTI(Road Transport informatics)		X				
Euro IV / Euro V (After 2006)	P360	WTA(Auxiliary heating system water-to-air)	X	X				
Euro IV / Euro V (After 2006)	P380	APS(Compressed Air Supply)	X	X		X		Resetting air meter
Euro IV / Euro V (After 2006)	P380	ATA(Auxiliary heating system air-to-air)	X	X		X		
Euro IV / Euro V (After 2006)	P380	AWD(All-Wheel Drive)		X				
Euro IV / Euro V (After 2006)	P380	BCS(Bus chassis system)	X	X		X		
Euro IV / Euro V (After 2006)	P380	BMS(Brake Management System)	X	X		X		Reset self-learned parameters
Euro IV / Euro V (After 2006)	P380	BMS(Brake management syatem ABS E)	X	X		X	X	
Euro IV / Euro V (After 2006)	P380	BMS(Knorr-Bremse_BMS5.0_4x2)	X	X		X	X	
Euro IV / Euro V (After 2006)	P380	BMS(Knorr-Bremse_BMS5.0_6x2 6x4)	X	X		X	X	
Euro IV / Euro V (After 2006)	P380	BMS(Knorr-Bremse_BMS5.0_8x2)	X	X		X	X	
Euro IV / Euro V (After 2006)	P380	BWS(Preparation system)	X	X				
Euro IV / Euro V (After 2006)	P380	CCS(Climate control system)	X	X		X	X	
Euro IV / Euro V (After 2006)	P380	COO(Coordinator)	X	X		X		
Euro IV / Euro V (After 2006)	P380	COO(Coordinator module)	X	X				
Euro IV / Euro V (After 2006)	P380	CSS(Collision safety system)	X	X				
Euro IV / Euro V (After 2006)	P380	DAS(Adaptive Cruise Control)		X				
Euro IV / Euro V (After 2006)	P380	DIS(Adaptive Cruise Control)	X	X				
Euro IV / Euro V (After 2006)	P380	EEC(Exhaust Gas Treatment)	X	X		X	X	
Euro IV / Euro V (After 2006)	P380	EMS S6/S7(Engine Management System)	X	X		X	X	SCR warning light reset
Euro IV / Euro V (After 2006)	P380	EMS S8(Engine Management System)	X	X		X	X	
Euro IV / Euro V (After 2006)	P380	GMS(Gearbox Control System)	X	X		X	X	
Euro IV / Euro V (After 2006)	P380	ICL1(Instrument Cluster)	X	X		X	X	
Euro IV / Euro V (After 2006)	P380	ICL2(Instrument Cluster)	X	X		X	X	
Euro IV / Euro V (After 2006)	P380	LDW(Monitor traffic lane)	X	X				
Euro IV / Euro V (After 2006)	P380	LAS(Lock and alarm system)	X	X				
Euro IV / Euro V (After 2006)	P380	LAS(Lock and alarm system)	X	X				
Euro IV / Euro V (After 2006)	P380	RET(Retarder)	X	X		X	X	
Euro IV / Euro V (After 2006)	P380	SMS(Suspension Control System)	X	X		X		
Euro IV / Euro V (After 2006)	P380	SMS(Wabco_SMS CAN 2)	X	X		X		Calibration at normal level Level sensor calibration Pressure sensor calibration
Euro IV / Euro V (After 2006)	P380	TCO(Tachograph)	X	X				
Euro IV / Euro V (After 2006)	P380	DTCO(DTCO Tachograph)	X	X				
Euro IV / Euro V (After 2006)	P380	MTCO(MTCO Tachograph)	X	X				
Euro IV / Euro V (After 2006)	P380	VIS(Visibility System)	X	X		X		
Euro IV / Euro V (After 2006)	P380	VIS(Visibility System)	X	X		X	X	
Euro IV / Euro V (After 2006)	P380	CTS(Clock and Time System)		X				
Euro IV / Euro V (After 2006)	P380	AUS(Audio system)		X				
Euro IV / Euro V (After 2006)	P380	TPM(Tires pressure Monitoring System)		X				
Euro IV / Euro V (After 2006)	P380	RTI(Road Transport informatics)		X				
Euro IV / Euro V (After 2006)	P380	WTA(Auxiliary heating system water-to-air)	X	X				
Euro IV / Euro V (After 2006)	P400	APS(Compressed Air Supply)	X	X		X		Resetting air meter
Euro IV / Euro V (After 2006)	P400	ATA(Auxiliary heating system air-to-air)	X	X		X		
Euro IV / Euro V (After 2006)	P400	AWD(All-Wheel Drive)		X				
Euro IV / Euro V (After 2006)	P400	BCS(Bus chassis system)	X	X		X		
Euro IV / Euro V (After 2006)	P400	BMS(Brake Management System)	X	X		X		Reset self-learned parameters
Euro IV / Euro V (After 2006)	P400	BMS(Brake management system ABS E)	X	X		X	X	
Euro IV / Euro V (After 2006)	P400	BMS(Knorr-Bremse_BMS5.0_4x2)	X	X		X	X	
Euro IV / Euro V (After 2006)	P400	BMS(Knorr-Bremse_BMS5.0_6x2 6x4)	X	X		X	X	
Euro IV / Euro V (After 2006)	P400	BMS(Knorr-Bremse_BMS5.0_8x2)	X	X		X	X	
Euro IV / Euro V (After 2006)	P400	BWS(Preparation system)	X	X				
Euro IV / Euro V (After 2006)	P400	CCS(Climate control system)	X	X		X	X	

Exhaustion Standard	Model	System	ECU INFO	DTC	DTC Freeze	Data List	Actuations	Spec. Func.
Euro IV / Euro V (After 2006)	P400	COO(Coordinator)	X	X		X		
Euro IV / Euro V (After 2006)	P400	COO(Coordinator module)	X	X				
Euro IV / Euro V (After 2006)	P400	CSS(Collision safety system)	X	X				
Euro IV / Euro V (After 2006)	P400	DAS(Adaptive Cruise Control)		X				
Euro IV / Euro V (After 2006)	P400	DIS(Adaptive Cruise Control)	X	X				
Euro IV / Euro V (After 2006)	P400	EEC(Exhaust Gas Treatment)	X	X		X	X	
Euro IV / Euro V (After 2006)	P400	EMS S6/S7(Engine Management System)	X	X		X	X	SCR warning light reset
Euro IV / Euro V (After 2006)	P400	EMS S8(Engine Management System)	X	X		X	X	
Euro IV / Euro V (After 2006)	P400	GMS(Gearbox Control System)	X	X		X	X	
Euro IV / Euro V (After 2006)	P400	ICL1(Instrument Cluster)	X	X		X	X	
Euro IV / Euro V (After 2006)	P400	ICL2(Instrument Cluster)	X	X		X	X	
Euro IV / Euro V (After 2006)	P400	LDW(Monitor traffic lane)	X	X				
Euro IV / Euro V (After 2006)	P400	LAS(Lock and alarm system)	X	X				
Euro IV / Euro V (After 2006)	P400	LAS(Lock and alarm system)	X	X				
Euro IV / Euro V (After 2006)	P400	RET(Retarder)	X	X		X	X	
Euro IV / Euro V (After 2006)	P400	SMS(Suspension Control System)	X	X		X		
Euro IV / Euro V (After 2006)	P400	SMS(Wabco_SMS CAN 2)	X	X		X		Calibration at normal level Level sensor calibration Pressure sensor calibration
Euro IV / Euro V (After 2006)	P400	TCO(Tachograph)	X	X				
Euro IV / Euro V (After 2006)	P400	DTCO(DTCO Tachograph)	X	X				
Euro IV / Euro V (After 2006)	P400	MTCO(MTCO Tachograph)	X	X				
Euro IV / Euro V (After 2006)	P400	VIS(Visibility System)	X	X		X		
Euro IV / Euro V (After 2006)	P400	VIS(Visibility System)	X	X		X	X	
Euro IV / Euro V (After 2006)	P400	CTS(Clock and Time System)		X				
Euro IV / Euro V (After 2006)	P400	AUS(Audio system)		X				
Euro IV / Euro V (After 2006)	P400	TPM(Tires pressure Monitoring System)		X				
Euro IV / Euro V (After 2006)	P400	RTI(Road Transport informatics)		X				
Euro IV / Euro V (After 2006)	P400	WTA(Auxiliary heating system water-to-air)	X	X				
Euro IV / Euro V (After 2006)	P410	APS(Compressed Air Supply)	X	X		X		Resetting air meter
Euro IV / Euro V (After 2006)	P410	ATA(Auxiliary heating system air-to-air)	X	X		X		
Euro IV / Euro V (After 2006)	P410	AWD(All-Wheel Drive)		X				
Euro IV / Euro V (After 2006)	P410	BCS(Bus chassis system)	X	X		X		
Euro IV / Euro V (After 2006)	P410	BMS(Brake Management System)	X	X		X		Reset self-learned parameters
Euro IV / Euro V (After 2006)	P410	BMS(Brake management system ABS E)	X	X		X	X	
Euro IV / Euro V (After 2006)	P410	BMS(Knorr-Bremse_BMS5.0_4x2)	X	X		X	X	
Euro IV / Euro V (After 2006)	P410	BMS(Knorr-Bremse_BMS5.0_6x2 6x4)	X	X		X	X	
Euro IV / Euro V (After 2006)	P410	BMS(Knorr-Bremse_BMS5.0_8x2)	X	X		X	X	
Euro IV / Euro V (After 2006)	P410	BWS(Preparation system)	X	X				
Euro IV / Euro V (After 2006)	P410	CCS(Climate control system)	X	X		X	X	
Euro IV / Euro V (After 2006)	P410	COO(Coordinator)	X	X		X		
Euro IV / Euro V (After 2006)	P410	COO(Coordinator module)	X	X				
Euro IV / Euro V (After 2006)	P410	CSS(Collision safety system)	X	X				
Euro IV / Euro V (After 2006)	P410	DAS(Adaptive Cruise Control)		X				
Euro IV / Euro V (After 2006)	P410	DIS(Adaptive Cruise Control)	X	X				
Euro IV / Euro V (After 2006)	P410	EEC(Exhaust Gas Treatment)	X	X		X	X	
Euro IV / Euro V (After 2006)	P410	EMS S6/S7(Engine Management System)	X	X		X	X	SCR warning light reset
Euro IV / Euro V (After 2006)	P410	EMS S8(Engine Management System)	X	X		X	X	
Euro IV / Euro V (After 2006)	P410	GMS(Gearbox Control System)	X	X		X	X	
Euro IV / Euro V (After 2006)	P410	ICL1(Instrument Cluster)	X	X		X	X	
Euro IV / Euro V (After 2006)	P410	ICL2(Instrument Cluster)	X	X		X	X	
Euro IV / Euro V (After 2006)	P410	LDW(Monitor traffic lane)	X	X				
Euro IV / Euro V (After 2006)	P410	LAS(Lock and alarm system)	X	X				
Euro IV / Euro V (After 2006)	P410	LAS(Lock and alarm system)	X	X				
Euro IV / Euro V (After 2006)	P410	RET(Retarder)	X	X		X	X	
Euro IV / Euro V (After 2006)	P410	SMS(Suspension Control System)	X	X		X		
Euro IV / Euro V (After 2006)	P410	SMS(Wabco_SMS CAN 2)	X	X		X		Calibration at normal level Level sensor calibration Pressure sensor calibration
Euro IV / Euro V (After 2006)	P410	TCO(Tachograph)	X	X				
Euro IV / Euro V (After 2006)	P410	DTCO(DTCO Tachograph)	X	X				
Euro IV / Euro V (After 2006)	P410	MTCO(MTCO Tachograph)	X	X				
Euro IV / Euro V (After 2006)	P410	VIS(Visibility System)	X	X		X		
Euro IV / Euro V (After 2006)	P410	VIS(Visibility System)	X	X		X	X	
Euro IV / Euro V (After 2006)	P410	CTS(Clock and Time System)		X				
Euro IV / Euro V (After 2006)	P410	AUS(Audio system)		X				
Euro IV / Euro V (After 2006)	P410	TPM(Tires pressure Monitoring System)		X				
Euro IV / Euro V (After 2006)	P410	RTI(Road Transport informatics)		X				

Exhaustion Standard	Model	System	ECU INFO	DTC	DTC Freeze	Data List	Actua tions	Spec. Func.
Euro IV / Euro V (After 2006)	P410	WTA(Auxiliary heating system water-to-air)	X	X				
Euro IV / Euro V (After 2006)	P420	APS(Compressed Air Supply)	X	X		X		Resetting air meter
Euro IV / Euro V (After 2006)	P420	ATA(Auxiliary heating system air-to-air)	X	X		X		
Euro IV / Euro V (After 2006)	P420	AWD(All-Wheel Drive)		X				
Euro IV / Euro V (After 2006)	P420	BCS(Bus chassis system)	X	X		X		
Euro IV / Euro V (After 2006)	P420	BMS(Brake Management System)	X	X		X		Reset self-learned parameters
Euro IV / Euro V (After 2006)	P420	BMS(Brake management system ABS E)	X	X		X	X	
Euro IV / Euro V (After 2006)	P420	BMS(Knorr-Bremse_BMS5.0_4x2)	X	X		X	X	
Euro IV / Euro V (After 2006)	P420	BMS(Knorr-Bremse_BMS5.0_6x2 6x4)	X	X		X	X	
Euro IV / Euro V (After 2006)	P420	BMS(Knorr-Bremse_BMS5.0_8x2)	X	X		X	X	
Euro IV / Euro V (After 2006)	P420	BWS(Preparation system)	X	X				
Euro IV / Euro V (After 2006)	P420	CCS(Climate control system)	X	X		X	X	
Euro IV / Euro V (After 2006)	P420	COO(Coordinator)	X	X		X		
Euro IV / Euro V (After 2006)	P420	COO(Coordinator module)	X	X				
Euro IV / Euro V (After 2006)	P420	CSS(Collision safety system)	X	X				
Euro IV / Euro V (After 2006)	P420	DAS(Adaptive Cruise Control)		X				
Euro IV / Euro V (After 2006)	P420	DIS(Adaptive Cruise Control)	X	X				
Euro IV / Euro V (After 2006)	P420	EEC(Exhaust Gas Treatment)	X	X		X	X	
Euro IV / Euro V (After 2006)	P420	EMS S6/S7(Engine Management System)	X	X		X	X	SCR warning light reset
Euro IV / Euro V (After 2006)	P420	EMS S8(Engine Management System)	X	X		X	X	
Euro IV / Euro V (After 2006)	P420	GMS(Gearbox Control System)	X	X		X	X	
Euro IV / Euro V (After 2006)	P420	ICL1(Instrument Cluster)	X	X		X	X	
Euro IV / Euro V (After 2006)	P420	ICL2(Instrument Cluster)	X	X		X	X	
Euro IV / Euro V (After 2006)	P420	LDW(Monitor traffic lane)	X	X				
Euro IV / Euro V (After 2006)	P420	LAS(Lock and alarm system)	X	X				
Euro IV / Euro V (After 2006)	P420	LAS(Lock and alarm system)	X	X				
Euro IV / Euro V (After 2006)	P420	RET(Retarder)	X	X		X	X	
Euro IV / Euro V (After 2006)	P420	SMS(Suspension Control System)	X	X		X		
Euro IV / Euro V (After 2006)	P420	SMS(Wabco_SMS CAN 2)	X	X		X		Calibration at normal level Level sensor calibration Pressure sensor calibration
Euro IV / Euro V (After 2006)	P420	TCO(Tachograph)	X	X				
Euro IV / Euro V (After 2006)	P420	DTCO(DTCO Tachograph)	X	X				
Euro IV / Euro V (After 2006)	P420	MTCO(MTCO Tachograph)	X	X				
Euro IV / Euro V (After 2006)	P420	VIS(Visibility System)	X	X		X		
Euro IV / Euro V (After 2006)	P420	VIS(Visibility System)	X	X		X	X	
Euro IV / Euro V (After 2006)	P420	CTS(Clock and Time System)		X				
Euro IV / Euro V (After 2006)	P420	AUS(Audio system)		X				
Euro IV / Euro V (After 2006)	P420	TPM(Tires pressure Monitoring System)		X				
Euro IV / Euro V (After 2006)	P420	RTI(Road Transport informatics)		X				
Euro IV / Euro V (After 2006)	P420	WTA(Auxiliary heating system water-to-air)	X	X				
Euro IV / Euro V (After 2006)	P470	APS(Compressed Air Supply)	X	X		X		Resetting air meter
Euro IV / Euro V (After 2006)	P470	ATA(Auxiliary heating system air-to-air)	X	X		X		
Euro IV / Euro V (After 2006)	P470	AWD(All-Wheel Drive)		X				
Euro IV / Euro V (After 2006)	P470	BCS(Bus chassis system)	X	X		X		
Euro IV / Euro V (After 2006)	P470	BMS(Brake Management System)	X	X		X		Reset self-learned parameters
Euro IV / Euro V (After 2006)	P470	BMS(Brake management system ABS E)	X	X		X	X	
Euro IV / Euro V (After 2006)	P470	BMS(Knorr-Bremse_BMS5.0_4x2)	X	X		X	X	
Euro IV / Euro V (After 2006)	P470	BMS(Knorr-Bremse_BMS5.0_6x2 6x4)	X	X		X	X	
Euro IV / Euro V (After 2006)	P470	BMS(Knorr-Bremse_BMS5.0_8x2)	X	X		X	X	
Euro IV / Euro V (After 2006)	P470	BWS(Preparation system)	X	X				
Euro IV / Euro V (After 2006)	P470	CCS(Climate control system)	X	X		X	X	
Euro IV / Euro V (After 2006)	P470	COO(Coordinator)	X	X		X		
Euro IV / Euro V (After 2006)	P470	COO(Coordinator module)	X	X				
Euro IV / Euro V (After 2006)	P470	CSS(Collision safety system)	X	X				
Euro IV / Euro V (After 2006)	P470	DAS(Adaptive Cruise Control)		X				
Euro IV / Euro V (After 2006)	P470	DIS(Adaptive Cruise Control)	X	X				
Euro IV / Euro V (After 2006)	P470	EEC(Exhaust Gas Treatment)	X	X		X	X	
Euro IV / Euro V (After 2006)	P470	EMS S6/S7(Engine Management System)	X	X		X	X	SCR warning light reset
Euro IV / Euro V (After 2006)	P470	EMS S8(Engine Management System)	X	X		X	X	
Euro IV / Euro V (After 2006)	P470	GMS(Gearbox Control System)	X	X		X	X	
Euro IV / Euro V (After 2006)	P470	ICL1(Instrument Cluster)	X	X		X	X	
Euro IV / Euro V (After 2006)	P470	ICL2(Instrument Cluster)	X	X		X	X	
Euro IV / Euro V (After 2006)	P470	LDW(Monitor traffic lane)	X	X				
Euro IV / Euro V (After 2006)	P470	LAS(Lock and alarm system)	X	X				
Euro IV / Euro V (After 2006)	P470	LAS(Lock and alarm system)	X	X				
Euro IV / Euro V (After 2006)	P470	RET(Retarder)	X	X		X	X	
Euro IV / Euro V (After 2006)	P470	SMS(Suspension Control System)	X	X		X		

Exhaustion Standard	Model	System	ECU INFO	DTC	DTC Freeze	Data List	Actua tions	Spec. Func.
Euro IV / Euro V (After 2006)	P470	SMS(Wabco_SMS CAN 2)	X	X		X		Calibration at normal level Level sensor calibration Pressure sensor calibration
Euro IV / Euro V (After 2006)	P470	TCO(Tachograph)	X	X				
Euro IV / Euro V (After 2006)	P470	DTCO(DTCO Tachograph)	X	X				
Euro IV / Euro V (After 2006)	P470	MTCO(MTCO Tachograph)	X	X				
Euro IV / Euro V (After 2006)	P470	VIS(Visibility System)	X	X		X		
Euro IV / Euro V (After 2006)	P470	VIS(Visibility System)	X	X		X	X	
Euro IV / Euro V (After 2006)	P470	CTS(Clock and Time System)		X				
Euro IV / Euro V (After 2006)	P470	AUS(Audio system)		X				
Euro IV / Euro V (After 2006)	P470	TPM(Tires pressure Monitoring System)		X				
Euro IV / Euro V (After 2006)	P470	RTI(Road Transport informatics)		X				
Euro IV / Euro V (After 2006)	P470	WTA(Auxiliary heating system water-to-air)	X	X				
Euro IV / Euro V (After 2006)	P480	APS(Compressed Air Supply)	X	X		X		Resetting air meter
Euro IV / Euro V (After 2006)	P480	ATA(Auxiliary heating system air-to-air)	X	X		X		
Euro IV / Euro V (After 2006)	P480	AWD(All-Wheel Drive)		X				
Euro IV / Euro V (After 2006)	P480	BCS(Bus chassis system)	X	X		X		
Euro IV / Euro V (After 2006)	P480	BMS(Brake Management System)	X	X		X		Reset self-learned parameters
Euro IV / Euro V (After 2006)	P480	BMS(Brake management system ABS E)	X	X		X	X	
Euro IV / Euro V (After 2006)	P480	BMS(Knorr-Bremse_BMS5.0_4x2)	X	X		X	X	
Euro IV / Euro V (After 2006)	P480	BMS(Knorr-Bremse_BMS5.0_6x2 6x4)	X	X		X	X	
Euro IV / Euro V (After 2006)	P480	BMS(Knorr-Bremse_BMS5.0_8x2)	X	X		X	X	
Euro IV / Euro V (After 2006)	P480	BWS(Preparation system)	X	X				
Euro IV / Euro V (After 2006)	P480	CCS(Climate control system)	X	X		X	X	
Euro IV / Euro V (After 2006)	P480	COO(Coordinator)	X	X		X		
Euro IV / Euro V (After 2006)	P480	COO(Coordinator module)	X	X				
Euro IV / Euro V (After 2006)	P480	CSS(Collision safety system)	X	X				
Euro IV / Euro V (After 2006)	P480	DAS(Adaptive Cruise Control)		X				
Euro IV / Euro V (After 2006)	P480	DIS(Adaptive Cruise Control)	X	X				
Euro IV / Euro V (After 2006)	P480	EEC(Exhaust Gas Treatment)	X	X		X	X	
Euro IV / Euro V (After 2006)	P480	EMS S6/S7(Engine Management System)	X	X		X	X	SCR warning light reset
Euro IV / Euro V (After 2006)	P480	EMS S8(Engine Management System)	X	X		X	X	
Euro IV / Euro V (After 2006)	P480	GMS(Gearbox Control System)	X	X		X	X	
Euro IV / Euro V (After 2006)	P480	ICL1(Instrument Cluster)	X	X		X	X	
Euro IV / Euro V (After 2006)	P480	ICL2(Instrument Cluster)	X	X		X	X	
Euro IV / Euro V (After 2006)	P480	LDW(Monitor traffic lane)	X	X				
Euro IV / Euro V (After 2006)	P480	LAS(Lock and alarm system)	X	X				
Euro IV / Euro V (After 2006)	P480	LAS(Lock and alarm system)	X	X				
Euro IV / Euro V (After 2006)	P480	RET(Retarder)	X	X		X	X	
Euro IV / Euro V (After 2006)	P480	SMS(Suspension Control System)	X	X		X		
Euro IV / Euro V (After 2006)	P480	SMS(Wabco_SMS CAN 2)	X	X		X		Calibration at normal level Level sensor calibration Pressure sensor calibration
Euro IV / Euro V (After 2006)	P480	TCO(Tachograph)	X	X				
Euro IV / Euro V (After 2006)	P480	DTCO(DTCO Tachograph)	X	X				
Euro IV / Euro V (After 2006)	P480	MTCO(MTCO Tachograph)	X	X				
Euro IV / Euro V (After 2006)	P480	VIS(Visibility System)	X	X		X		
Euro IV / Euro V (After 2006)	P480	VIS(Visibility System)	X	X		X	X	
Euro IV / Euro V (After 2006)	P480	CTS(Clock and Time System)		X				
Euro IV / Euro V (After 2006)	P480	AUS(Audio system)		X				
Euro IV / Euro V (After 2006)	P480	TPM(Tires pressure Monitoring System)		X				
Euro IV / Euro V (After 2006)	P480	RTI(Road Transport informatics)		X				
Euro IV / Euro V (After 2006)	P480	WTA(Auxiliary heating system water-to-air)	X	X				
Euro IV / Euro V (After 2006)	G230	APS(Compressed Air Supply)	X	X		X		Resetting air meter
Euro IV / Euro V (After 2006)	G230	ATA(Auxiliary heating system air-to-air)	X	X		X		
Euro IV / Euro V (After 2006)	G230	AWD(All-Wheel Drive)		X				
Euro IV / Euro V (After 2006)	G230	BCS(Bus chassis system)	X	X		X		
Euro IV / Euro V (After 2006)	G230	BMS(Brake Management System)	X	X		X		Reset self-learned parameters
Euro IV / Euro V (After 2006)	G230	BMS(Brake management system ABS E)	X	X		X	X	
Euro IV / Euro V (After 2006)	G230	BMS(Knorr-Bremse_BMS5.0_4x2)	X	X		X	X	
Euro IV / Euro V (After 2006)	G230	BMS(Knorr-Bremse_BMS5.0_6x2 6x4)	X	X		X	X	
Euro IV / Euro V (After 2006)	G230	BMS(Knorr-Bremse_BMS5.0_8x2)	X	X		X	X	
Euro IV / Euro V (After 2006)	G230	BWS(Preparation system)	X	X				
Euro IV / Euro V (After 2006)	G230	CCS(Climate control system)	X	X		X	X	
Euro IV / Euro V (After 2006)	G230	COO(Coordinator)	X	X		X		
Euro IV / Euro V (After 2006)	G230	COO(Coordinator module)	X	X				
Euro IV / Euro V (After 2006)	G230	CSS(Collision safety system)	X	X				
Euro IV / Euro V (After 2006)	G230	DAS(Adaptive Cruise Control)		X				

Exhaustion Standard	Model	System	ECU INFO	DTC	DTC Freeze	Data List	Actuations	Spec. Func.
Euro IV / Euro V (After 2006)	G230	DIS(Adaptive Cruise Control)	X	X				
Euro IV / Euro V (After 2006)	G230	EEC(Exhaust Gas Treatment)	X	X		X	X	
Euro IV / Euro V (After 2006)	G230	EMS S6/S7(Engine Management System)	X	X		X	X	SCR warning light reset
Euro IV / Euro V (After 2006)	G230	EMS S8(Engine Management System)	X	X		X	X	
Euro IV / Euro V (After 2006)	G230	GMS(Gearbox Control System)	X	X		X	X	
Euro IV / Euro V (After 2006)	G230	ICL1(Instrument Cluster)	X	X		X	X	
Euro IV / Euro V (After 2006)	G230	ICL2(Instrument Cluster)	X	X		X	X	
Euro IV / Euro V (After 2006)	G230	LDW(Monitor traffic lane)	X	X				
Euro IV / Euro V (After 2006)	G230	LAS(Lock and alarm system)	X	X				
Euro IV / Euro V (After 2006)	G230	LAS(Lock and alarm system)	X	X				
Euro IV / Euro V (After 2006)	G230	RET(Retarder)	X	X		X	X	
Euro IV / Euro V (After 2006)	G230	SMS(Suspension Control System)	X	X		X		
Euro IV / Euro V (After 2006)	G230	SMS(Wabco_SMS CAN 2)	X	X		X		Calibration at normal level Level sensor calibration Pressure sensor calibration
Euro IV / Euro V (After 2006)	G230	TCO(Tachograph)	X	X				
Euro IV / Euro V (After 2006)	G230	DTCO(DTCO Tachograph)	X	X				
Euro IV / Euro V (After 2006)	G230	MTCO(MTCO Tachograph)	X	X				
Euro IV / Euro V (After 2006)	G230	VIS(Visibility System)	X	X		X		
Euro IV / Euro V (After 2006)	G230	VIS(Visibility System)	X	X		X	X	
Euro IV / Euro V (After 2006)	G230	CTS(Clock and Time System)		X				
Euro IV / Euro V (After 2006)	G230	AUS(Audio system)		X				
Euro IV / Euro V (After 2006)	G230	TPM(Tires pressure Monitoring System)		X				
Euro IV / Euro V (After 2006)	G230	RTI(Road Transport informatics)		X				
Euro IV / Euro V (After 2006)	G230	WTA(Auxiliary heating system water-to-air)	X	X				
Euro IV / Euro V (After 2006)	G270	APS(Compressed Air Supply)	X	X		X		Resetting air meter
Euro IV / Euro V (After 2006)	G270	ATA(Auxiliary heating system air-to-air)	X	X		X		
Euro IV / Euro V (After 2006)	G270	AWD(All-Wheel Drive)		X				
Euro IV / Euro V (After 2006)	G270	BCS(Bus chassis system)	X	X		X		
Euro IV / Euro V (After 2006)	G270	BMS(Brake Management System)	X	X		X		Reset self-learned parameters
Euro IV / Euro V (After 2006)	G270	BMS(Brake management syatem ABS E)	X	X		X	X	
Euro IV / Euro V (After 2006)	G270	BMS(Knorr-Bremse_BMS5.0_4x2)	X	X		X	X	
Euro IV / Euro V (After 2006)	G270	BMS(Knorr-Bremse_BMS5.0_6x2 6x4)	X	X		X	X	
Euro IV / Euro V (After 2006)	G270	BMS(Knorr-Bremse_BMS5.0_8x2)	X	X		X	X	
Euro IV / Euro V (After 2006)	G270	BWS(Preparation system)	X	X				
Euro IV / Euro V (After 2006)	G270	CCS(Climate control system)	X	X		X	X	
Euro IV / Euro V (After 2006)	G270	COO(Coordinator)	X	X		X		
Euro IV / Euro V (After 2006)	G270	COO(Coordinator module)	X	X				
Euro IV / Euro V (After 2006)	G270	CSS(Collision safety system)	X	X				
Euro IV / Euro V (After 2006)	G270	DAS(Adaptive Cruise Control)		X				
Euro IV / Euro V (After 2006)	G270	DIS(Adaptive Cruise Control)	X	X				
Euro IV / Euro V (After 2006)	G270	EEC(Exhaust Gas Treatment)	X	X		X	X	
Euro IV / Euro V (After 2006)	G270	EMS S6/S7(Engine Management System)	X	X		X	X	SCR warning light reset
Euro IV / Euro V (After 2006)	G270	EMS S8(Engine Management System)	X	X		X	X	
Euro IV / Euro V (After 2006)	G270	GMS(Gearbox Control System)	X	X		X	X	
Euro IV / Euro V (After 2006)	G270	ICL1(Instrument Cluster)	X	X		X	X	
Euro IV / Euro V (After 2006)	G270	ICL2(Instrument Cluster)	X	X		X	X	
Euro IV / Euro V (After 2006)	G270	LDW(Monitor traffic lane)	X	X				
Euro IV / Euro V (After 2006)	G270	LAS(Lock and alarm system)	X	X				
Euro IV / Euro V (After 2006)	G270	LAS(Lock and alarm system)	X	X				
Euro IV / Euro V (After 2006)	G270	RET(Retarder)	X	X		X	X	
Euro IV / Euro V (After 2006)	G270	SMS(Suspension Control System)	X	X		X		
Euro IV / Euro V (After 2006)	G270	SMS(Wabco_SMS CAN 2)	X	X		X		Calibration at normal level Level sensor calibration Pressure sensor calibration
Euro IV / Euro V (After 2006)	G270	TCO(Tachograph)	X	X				
Euro IV / Euro V (After 2006)	G270	DTCO(DTCO Tachograph)	X	X				
Euro IV / Euro V (After 2006)	G270	MTCO(MTCO Tachograph)	X	X				
Euro IV / Euro V (After 2006)	G270	VIS(Visibility System)	X	X		X		
Euro IV / Euro V (After 2006)	G270	VIS(Visibility System)	X	X		X	X	
Euro IV / Euro V (After 2006)	G270	CTS(Clock and Time System)		X				
Euro IV / Euro V (After 2006)	G270	AUS(Audio system)		X				
Euro IV / Euro V (After 2006)	G270	TPM(Tires pressure Monitoring System)		X				
Euro IV / Euro V (After 2006)	G270	RTI(Road Transport informatics)		X				
Euro IV / Euro V (After 2006)	G270	WTA(Auxiliary heating system water-to-air)	X	X				
Euro IV / Euro V (After 2006)	G280	APS(Compressed Air Supply)	X	X		X		Resetting air meter
Euro IV / Euro V (After 2006)	G280	ATA(Auxiliary heating system air-to-air)	X	X		X		
Euro IV / Euro V (After 2006)	G280	AWD(All-Wheel Drive)		X				

Exhaustion Standard	Model	System	ECU INFO	DTC	DTC Freeze	Data List	Actuations	Spec. Func.
Euro IV / Euro V (After 2006)	G280	BCS(Bus chassis system)	X	X		X		
Euro IV / Euro V (After 2006)	G280	BMS(Brake Management System)	X	X		X		Reset self-learned parameters
Euro IV / Euro V (After 2006)	G280	BMS(Brake management system ABS E)	X	X		X	X	
Euro IV / Euro V (After 2006)	G280	BMS(Knorr-Bremse_BMS5.0_4x2)	X	X		X	X	
Euro IV / Euro V (After 2006)	G280	BMS(Knorr-Bremse_BMS5.0_6x2 6x4)	X	X		X	X	
Euro IV / Euro V (After 2006)	G280	BMS(Knorr-Bremse_BMS5.0_8x2)	X	X		X	X	
Euro IV / Euro V (After 2006)	G280	BWS(Preparation system)	X	X				
Euro IV / Euro V (After 2006)	G280	CCS(Climate control system)	X	X		X	X	
Euro IV / Euro V (After 2006)	G280	COO(Coordinator)	X	X		X		
Euro IV / Euro V (After 2006)	G280	COO(Coordinator module)	X	X				
Euro IV / Euro V (After 2006)	G280	CSS(Collision safety system)	X	X				
Euro IV / Euro V (After 2006)	G280	DAS(Adaptive Cruise Control)		X				
Euro IV / Euro V (After 2006)	G280	DIS(Adaptive Cruise Control)	X	X				
Euro IV / Euro V (After 2006)	G280	EEC(Exhaust Gas Treatment)	X	X		X	X	
Euro IV / Euro V (After 2006)	G280	EMS S6/S7(Engine Management System)	X	X		X	X	SCR warning light reset
Euro IV / Euro V (After 2006)	G280	EMS S8(Engine Management System)	X	X		X	X	
Euro IV / Euro V (After 2006)	G280	GMS(Gearbox Control System)	X	X		X	X	
Euro IV / Euro V (After 2006)	G280	ICL1(Instrument Cluster)	X	X		X	X	
Euro IV / Euro V (After 2006)	G280	ICL2(Instrument Cluster)	X	X		X	X	
Euro IV / Euro V (After 2006)	G280	LDW(Monitor traffic lane)	X	X				
Euro IV / Euro V (After 2006)	G280	LAS(Lock and alarm system)	X	X				
Euro IV / Euro V (After 2006)	G280	LAS(Lock and alarm system)	X	X				
Euro IV / Euro V (After 2006)	G280	RET(Retarder)	X	X		X	X	
Euro IV / Euro V (After 2006)	G280	SMS(Suspension Control System)	X	X		X		
Euro IV / Euro V (After 2006)	G280	SMS(Wabco_SMS CAN 2)	X	X		X		Calibration at normal level Level sensor calibration Pressure sensor calibration
Euro IV / Euro V (After 2006)	G280	TCO(Tachograph)	X	X				
Euro IV / Euro V (After 2006)	G280	DTCO(DTCO Tachograph)	X	X				
Euro IV / Euro V (After 2006)	G280	MTCO(MTCO Tachograph)	X	X				
Euro IV / Euro V (After 2006)	G280	VIS(Visibility System)	X	X		X		
Euro IV / Euro V (After 2006)	G280	VIS(Visibility System)	X	X		X	X	
Euro IV / Euro V (After 2006)	G280	CTS(Clock and Time System)		X				
Euro IV / Euro V (After 2006)	G280	AUS(Audio system)		X				
Euro IV / Euro V (After 2006)	G280	TPM(Tires pressure Monitoring System)		X				
Euro IV / Euro V (After 2006)	G280	RTI(Road Transport informatics)		X				
Euro IV / Euro V (After 2006)	G280	WTA(Auxiliary heating system water-to-air)	X	X				
Euro IV / Euro V (After 2006)	G310	APS(Compressed Air Supply)	X	X		X		Resetting air meter
Euro IV / Euro V (After 2006)	G310	ATA(Auxiliary heating system air-to-air)	X	X		X		
Euro IV / Euro V (After 2006)	G310	AWD(All-Wheel Drive)		X				
Euro IV / Euro V (After 2006)	G310	BCS(Bus chassis system)	X	X		X		
Euro IV / Euro V (After 2006)	G310	BMS(Brake Management System)	X	X		X		Reset self-learned parameters
Euro IV / Euro V (After 2006)	G310	BMS(Brake management system ABS E)	X	X		X	X	
Euro IV / Euro V (After 2006)	G310	BMS(Knorr-Bremse_BMS5.0_4x2)	X	X		X	X	
Euro IV / Euro V (After 2006)	G310	BMS(Knorr-Bremse_BMS5.0_6x2 6x4)	X	X		X	X	
Euro IV / Euro V (After 2006)	G310	BMS(Knorr-Bremse_BMS5.0_8x2)	X	X		X	X	
Euro IV / Euro V (After 2006)	G310	BWS(Preparation system)	X	X				
Euro IV / Euro V (After 2006)	G310	CCS(Climate control system)	X	X		X	X	
Euro IV / Euro V (After 2006)	G310	COO(Coordinator)	X	X		X		
Euro IV / Euro V (After 2006)	G310	COO(Coordinator module)	X	X				
Euro IV / Euro V (After 2006)	G310	CSS(Collision safety system)	X	X				
Euro IV / Euro V (After 2006)	G310	DAS(Adaptive Cruise Control)		X				
Euro IV / Euro V (After 2006)	G310	DIS(Adaptive Cruise Control)	X	X				
Euro IV / Euro V (After 2006)	G310	EEC(Exhaust Gas Treatment)	X	X		X	X	
Euro IV / Euro V (After 2006)	G310	EMS S6/S7(Engine Management System)	X	X		X	X	SCR warning light reset
Euro IV / Euro V (After 2006)	G310	EMS S8(Engine Management System)	X	X		X	X	
Euro IV / Euro V (After 2006)	G310	GMS(Gearbox Control System)	X	X		X	X	
Euro IV / Euro V (After 2006)	G310	ICL1(Instrument Cluster)	X	X		X	X	
Euro IV / Euro V (After 2006)	G310	ICL2(Instrument Cluster)	X	X		X	X	
Euro IV / Euro V (After 2006)	G310	LDW(Monitor traffic lane)	X	X				
Euro IV / Euro V (After 2006)	G310	LAS(Lock and alarm system)	X	X				
Euro IV / Euro V (After 2006)	G310	LAS(Lock and alarm system)	X	X				
Euro IV / Euro V (After 2006)	G310	RET(Retarder)	X	X		X	X	
Euro IV / Euro V (After 2006)	G310	SMS(Suspension Control System)	X	X		X		
Euro IV / Euro V (After 2006)	G310	SMS(Wabco_SMS CAN 2)	X	X		X		Calibration at normal level Level sensor calibration Pressure sensor calibration
Euro IV / Euro V (After 2006)	G310	TCO(Tachograph)	X	X				

Exhaustion Standard	Model	System	ECU INFO	DTC	DTC Freeze	Data List	Actua tions	Spec. Func.
Euro IV / Euro V (After 2006)	G310	DTCO(DTCO Tachograph)	X	X				
Euro IV / Euro V (After 2006)	G310	MTCO(MTCO Tachograph)	X	X				
Euro IV / Euro V (After 2006)	G310	VIS(Visibility System)	X	X		X		
Euro IV / Euro V (After 2006)	G310	VIS(Visibility System)	X	X		X	X	
Euro IV / Euro V (After 2006)	G310	CTS(Clock and Time System)		X				
Euro IV / Euro V (After 2006)	G310	AUS(Audio system)		X				
Euro IV / Euro V (After 2006)	G310	TPM(Tires pressure Monitoring System)		X				
Euro IV / Euro V (After 2006)	G310	RTI(Road Transport informatics)		X				
Euro IV / Euro V (After 2006)	G310	WTA(Auxiliary heating system water-to-air)	X	X				
Euro IV / Euro V (After 2006)	G320	APS(Compressed Air Supply)	X	X		X		Resetting air meter
Euro IV / Euro V (After 2006)	G320	ATA(Auxiliary heating system air-to-air)	X	X		X		
Euro IV / Euro V (After 2006)	G320	AWD(All-Wheel Drive)		X				
Euro IV / Euro V (After 2006)	G320	BCS(Bus chassis system)	X	X		X		
Euro IV / Euro V (After 2006)	G320	BMS(Brake Management System)	X	X		X		Reset self-learned parameters
Euro IV / Euro V (After 2006)	G320	BMS(Brake management syatem ABS E)	X	X		X	X	
Euro IV / Euro V (After 2006)	G320	BMS(Knorr-Bremse_BMS5.0_4x2)	X	X		X	X	
Euro IV / Euro V (After 2006)	G320	BMS(Knorr-Bremse_BMS5.0_6x2 6x4)	X	X		X	X	
Euro IV / Euro V (After 2006)	G320	BMS(Knorr-Bremse_BMS5.0_8x2)	X	X		X	X	
Euro IV / Euro V (After 2006)	G320	BWS(Preparation system)	X	X				
Euro IV / Euro V (After 2006)	G320	CCS(Climate control system)	X	X		X	X	
Euro IV / Euro V (After 2006)	G320	COO(Coordinator)	X	X		X		
Euro IV / Euro V (After 2006)	G320	COO(Coordinator module)	X	X				
Euro IV / Euro V (After 2006)	G320	CSS(Collision safety system)	X	X				
Euro IV / Euro V (After 2006)	G320	DAS(Adaptive Cruise Control)		X				
Euro IV / Euro V (After 2006)	G320	DIS(Adaptive Cruise Control)	X	X				
Euro IV / Euro V (After 2006)	G320	EEC(Exhaust Gas Treatment)	X	X		X	X	
Euro IV / Euro V (After 2006)	G320	EMS S6/S7(Engine Management System)	X	X		X	X	SCR warning light reset
Euro IV / Euro V (After 2006)	G320	EMS S8(Engine Management System)	X	X		X	X	
Euro IV / Euro V (After 2006)	G320	GMS(Gearbox Control System)	X	X		X	X	
Euro IV / Euro V (After 2006)	G320	ICL1(Instrument Cluster)	X	X		X	X	
Euro IV / Euro V (After 2006)	G320	ICL2(Instrument Cluster)	X	X		X	X	
Euro IV / Euro V (After 2006)	G320	LDW(Monitor traffic lane)	X	X				
Euro IV / Euro V (After 2006)	G320	LAS(Lock and alarm system)	X	X				
Euro IV / Euro V (After 2006)	G320	LAS(Lock and alarm system)	X	X				
Euro IV / Euro V (After 2006)	G320	RET(Retarder)	X	X		X	X	
Euro IV / Euro V (After 2006)	G320	SMS(Suspension Control System)	X	X		X		
Euro IV / Euro V (After 2006)	G320	SMS(Wabco_SMS CAN 2)	X	X		X		Calibration at normal level Level sensor calibration Pressure sensor calibration
Euro IV / Euro V (After 2006)	G320	TCO(Tachograph)	X	X				
Euro IV / Euro V (After 2006)	G320	DTCO(DTCO Tachograph)	X	X				
Euro IV / Euro V (After 2006)	G320	MTCO(MTCO Tachograph)	X	X				
Euro IV / Euro V (After 2006)	G320	VIS(Visibility System)	X	X		X		
Euro IV / Euro V (After 2006)	G320	VIS(Visibility System)	X	X		X	X	
Euro IV / Euro V (After 2006)	G320	CTS(Clock and Time System)		X				
Euro IV / Euro V (After 2006)	G320	AUS(Audio system)		X				
Euro IV / Euro V (After 2006)	G320	TPM(Tires pressure Monitoring System)		X				
Euro IV / Euro V (After 2006)	G320	RTI(Road Transport informatics)		X				
Euro IV / Euro V (After 2006)	G320	WTA(Auxiliary heating system water-to-air)	X	X				
Euro IV / Euro V (After 2006)	G340	APS(Compressed Air Supply)	X	X		X		Resetting air meter
Euro IV / Euro V (After 2006)	G340	ATA(Auxiliary heating system air-to-air)	X	X		X		
Euro IV / Euro V (After 2006)	G340	AWD(All-Wheel Drive)		X				
Euro IV / Euro V (After 2006)	G340	BCS(Bus chassis system)	X	X		X		
Euro IV / Euro V (After 2006)	G340	BMS(Brake Management System)	X	X		X		Reset self-learned parameters
Euro IV / Euro V (After 2006)	G340	BMS(Brake management syatem ABS E)	X	X		X	X	
Euro IV / Euro V (After 2006)	G340	BMS(Knorr-Bremse_BMS5.0_4x2)	X	X		X	X	
Euro IV / Euro V (After 2006)	G340	BMS(Knorr-Bremse_BMS5.0_6x2 6x4)	X	X		X	X	
Euro IV / Euro V (After 2006)	G340	BMS(Knorr-Bremse_BMS5.0_8x2)	X	X		X	X	
Euro IV / Euro V (After 2006)	G340	BWS(Preparation system)	X	X				
Euro IV / Euro V (After 2006)	G340	CCS(Climate control system)	X	X		X	X	
Euro IV / Euro V (After 2006)	G340	COO(Coordinator)	X	X		X		
Euro IV / Euro V (After 2006)	G340	COO(Coordinator module)	X	X				
Euro IV / Euro V (After 2006)	G340	CSS(Collision safety system)	X	X				
Euro IV / Euro V (After 2006)	G340	DAS(Adaptive Cruise Control)		X				
Euro IV / Euro V (After 2006)	G340	DIS(Adaptive Cruise Control)	X	X				
Euro IV / Euro V (After 2006)	G340	EEC(Exhaust Gas Treatment)	X	X		X	X	
Euro IV / Euro V (After 2006)	G340	EMS S6/S7(Engine Management System)	X	X		X	X	SCR warning light reset
Euro IV / Euro V (After 2006)	G340	EMS S8(Engine Management System)	X	X		X	X	

Exhaustion Standard	Model	System	ECU INFO	DTC	DTC Freeze	Data List	Actuations	Spec. Func.
Euro IV / Euro V (After 2006)	G340	GMS(Gearbox Control System)	X	X		X	X	
Euro IV / Euro V (After 2006)	G340	ICL1(Instrument Cluster)	X	X		X	X	
Euro IV / Euro V (After 2006)	G340	ICL2(Instrument Cluster)	X	X		X	X	
Euro IV / Euro V (After 2006)	G340	LDW(Monitor traffic lane)	X	X				
Euro IV / Euro V (After 2006)	G340	LAS(Lock and alarm system)	X	X				
Euro IV / Euro V (After 2006)	G340	LAS(Lock and alarm system)	X	X				
Euro IV / Euro V (After 2006)	G340	RET(Retarder)	X	X		X	X	
Euro IV / Euro V (After 2006)	G340	SMS(Suspension Control System)	X	X		X		
Euro IV / Euro V (After 2006)	G340	SMS(Wabco_SMS CAN 2)	X	X		X		Calibration at normal level Level sensor calibration Pressure sensor calibration
Euro IV / Euro V (After 2006)	G340	TCO(Tachograph)	X	X				
Euro IV / Euro V (After 2006)	G340	DTCO(DTCO Tachograph)	X	X				
Euro IV / Euro V (After 2006)	G340	MTCO(MTCO Tachograph)	X	X				
Euro IV / Euro V (After 2006)	G340	VIS(Visibility System)	X	X		X		
Euro IV / Euro V (After 2006)	G340	VIS(Visibility System)	X	X		X	X	
Euro IV / Euro V (After 2006)	G340	CTS(Clock and Time System)		X				
Euro IV / Euro V (After 2006)	G340	AUS(Audio system)		X				
Euro IV / Euro V (After 2006)	G340	TPM(Tires pressure Monitoring System)		X				
Euro IV / Euro V (After 2006)	G340	RTI(Road Transport informatics)		X				
Euro IV / Euro V (After 2006)	G340	WTA(Auxiliary heating system water-to-air)	X	X				
Euro IV / Euro V (After 2006)	G380	APS(Compressed Air Supply)	X	X		X		Resetting air meter
Euro IV / Euro V (After 2006)	G380	ATA(Auxiliary heating system air-to-air)	X	X		X		
Euro IV / Euro V (After 2006)	G380	AWD(All-Wheel Drive)		X				
Euro IV / Euro V (After 2006)	G380	BCS(Bus chassis system)	X	X		X		
Euro IV / Euro V (After 2006)	G380	BMS(Brake Management System)	X	X		X		Reset self-learned parameters
Euro IV / Euro V (After 2006)	G380	BMS(Brake management system ABS E)	X	X		X	X	
Euro IV / Euro V (After 2006)	G380	BMS(Knorr-Bremse_BMS5.0_4x2)	X	X		X	X	
Euro IV / Euro V (After 2006)	G380	BMS(Knorr-Bremse_BMS5.0_6x2 6x4)	X	X		X	X	
Euro IV / Euro V (After 2006)	G380	BMS(Knorr-Bremse_BMS5.0_8x2)	X	X		X	X	
Euro IV / Euro V (After 2006)	G380	BWS(Preparation system)	X	X				
Euro IV / Euro V (After 2006)	G380	CCS(Climate control system)	X	X		X	X	
Euro IV / Euro V (After 2006)	G380	COO(Coordinator)	X	X		X		
Euro IV / Euro V (After 2006)	G380	COO(Coordinator module)	X	X				
Euro IV / Euro V (After 2006)	G380	CSS(Collision safety system)	X	X				
Euro IV / Euro V (After 2006)	G380	DAS(Adaptive Cruise Control)		X				
Euro IV / Euro V (After 2006)	G380	DIS(Adaptive Cruise Control)	X	X				
Euro IV / Euro V (After 2006)	G380	EEC(Exhaust Gas Treatment)	X	X		X	X	
Euro IV / Euro V (After 2006)	G380	EMS S6/S7(Engine Management System)	X	X		X	X	SCR warning light reset
Euro IV / Euro V (After 2006)	G380	EMS S8(Engine Management System)	X	X		X	X	
Euro IV / Euro V (After 2006)	G380	GMS(Gearbox Control System)	X	X		X	X	
Euro IV / Euro V (After 2006)	G380	ICL1(Instrument Cluster)	X	X		X	X	
Euro IV / Euro V (After 2006)	G380	ICL2(Instrument Cluster)	X	X		X	X	
Euro IV / Euro V (After 2006)	G380	LDW(Monitor traffic lane)	X	X				
Euro IV / Euro V (After 2006)	G380	LAS(Lock and alarm system)	X	X				
Euro IV / Euro V (After 2006)	G380	LAS(Lock and alarm system)	X	X				
Euro IV / Euro V (After 2006)	G380	RET(Retarder)	X	X		X	X	
Euro IV / Euro V (After 2006)	G380	SMS(Suspension Control System)	X	X		X		
Euro IV / Euro V (After 2006)	G380	SMS(Wabco_SMS CAN 2)	X	X		X		Calibration at normal level Level sensor calibration Pressure sensor calibration
Euro IV / Euro V (After 2006)	G380	TCO(Tachograph)	X	X				
Euro IV / Euro V (After 2006)	G380	DTCO(DTCO Tachograph)	X	X				
Euro IV / Euro V (After 2006)	G380	MTCO(MTCO Tachograph)	X	X				
Euro IV / Euro V (After 2006)	G380	VIS(Visibility System)	X	X		X		
Euro IV / Euro V (After 2006)	G380	VIS(Visibility System)	X	X		X	X	
Euro IV / Euro V (After 2006)	G380	CTS(Clock and Time System)		X				
Euro IV / Euro V (After 2006)	G380	AUS(Audio system)		X				
Euro IV / Euro V (After 2006)	G380	TPM(Tires pressure Monitoring System)		X				
Euro IV / Euro V (After 2006)	G380	RTI(Road Transport informatics)		X				
Euro IV / Euro V (After 2006)	G380	WTA(Auxiliary heating system water-to-air)	X	X				
Euro IV / Euro V (After 2006)	G400	APS(Compressed Air Supply)	X	X		X		Resetting air meter
Euro IV / Euro V (After 2006)	G400	ATA(Auxiliary heating system air-to-air)	X	X		X		
Euro IV / Euro V (After 2006)	G400	AWD(All-Wheel Drive)		X				
Euro IV / Euro V (After 2006)	G400	BCS(Bus chassis system)	X	X		X		
Euro IV / Euro V (After 2006)	G400	BMS(Brake Management System)	X	X		X		Reset self-learned parameters
Euro IV / Euro V (After 2006)	G400	BMS(Brake management system ABS E)	X	X		X	X	
Euro IV / Euro V (After 2006)	G400	BMS(Knorr-Bremse_BMS5.0_4x2)	X	X		X	X	

Exhaustion Standard	Model	System	ECU INFO	DTC	DTC Freeze	Data List	Actuations	Spec. Func.
Euro IV / Euro V (After 2006)	G400	BMS(Knorr-Bremse_BMS5.0_6x2 6x4)	X	X		X	X	
Euro IV / Euro V (After 2006)	G400	BMS(Knorr-Bremse_BMS5.0_8x2)	X	X		X	X	
Euro IV / Euro V (After 2006)	G400	BWS(Preparation system)	X	X				
Euro IV / Euro V (After 2006)	G400	CCS(Climate control system)	X	X		X	X	
Euro IV / Euro V (After 2006)	G400	COO(Coordinator)	X	X		X		
Euro IV / Euro V (After 2006)	G400	COO(Coordinator module)	X	X				
Euro IV / Euro V (After 2006)	G400	CSS(Collision safety system)	X	X				
Euro IV / Euro V (After 2006)	G400	DAS(Adaptive Cruise Control)		X				
Euro IV / Euro V (After 2006)	G400	DIS(Adaptive Cruise Control)	X	X				
Euro IV / Euro V (After 2006)	G400	EEC(Exhaust Gas Treatment)	X	X		X	X	
Euro IV / Euro V (After 2006)	G400	EMS S6/S7(Engine Management System)	X	X		X	X	SCR warning light reset
Euro IV / Euro V (After 2006)	G400	EMS S8(Engine Management System)	X	X		X	X	
Euro IV / Euro V (After 2006)	G400	GMS(Gearbox Control System)	X	X		X	X	
Euro IV / Euro V (After 2006)	G400	ICL1(Instrument Cluster)	X	X		X	X	
Euro IV / Euro V (After 2006)	G400	ICL2(Instrument Cluster)	X	X		X	X	
Euro IV / Euro V (After 2006)	G400	LDW(Monitor traffic lane)	X	X				
Euro IV / Euro V (After 2006)	G400	LAS(Lock and alarm system)	X	X				
Euro IV / Euro V (After 2006)	G400	LAS(Lock and alarm system)	X	X				
Euro IV / Euro V (After 2006)	G400	RET(Retarder)	X	X		X	X	
Euro IV / Euro V (After 2006)	G400	SMS(Suspension Control System)	X	X		X		
Euro IV / Euro V (After 2006)	G400	SMS(Wabco_SMS CAN 2)	X	X		X		Calibration at normal level Level sensor calibration Pressure sensor calibration
Euro IV / Euro V (After 2006)	G400	TCO(Tachograph)	X	X				
Euro IV / Euro V (After 2006)	G400	DTCO(DTCO Tachograph)	X	X				
Euro IV / Euro V (After 2006)	G400	MTCO(MTCO Tachograph)	X	X				
Euro IV / Euro V (After 2006)	G400	VIS(Visibility System)	X	X		X		
Euro IV / Euro V (After 2006)	G400	VIS(Visibility System)	X	X		X	X	
Euro IV / Euro V (After 2006)	G400	CTS(Clock and Time System)		X				
Euro IV / Euro V (After 2006)	G400	AUS(Audio system)		X				
Euro IV / Euro V (After 2006)	G400	TPM(Tires pressure Monitoring System)		X				
Euro IV / Euro V (After 2006)	G400	RTI(Road Transport informatics)		X				
Euro IV / Euro V (After 2006)	G400	WTA(Auxiliary heating system water-to-air)	X	X				
Euro IV / Euro V (After 2006)	G420	APS(Compressed Air Supply)	X	X		X		Resetting air meter
Euro IV / Euro V (After 2006)	G420	ATA(Auxiliary heating system air-to-air)	X	X		X		
Euro IV / Euro V (After 2006)	G420	AWD(All-Wheel Drive)		X				
Euro IV / Euro V (After 2006)	G420	BCS(Bus chassis system)	X	X		X		
Euro IV / Euro V (After 2006)	G420	BMS(Brake Management System)	X	X		X		Reset self-learned parameters
Euro IV / Euro V (After 2006)	G420	BMS(Brake management system ABS E)	X	X		X	X	
Euro IV / Euro V (After 2006)	G420	BMS(Knorr-Bremse_BMS5.0_4x2)	X	X		X	X	
Euro IV / Euro V (After 2006)	G420	BMS(Knorr-Bremse_BMS5.0_6x2 6x4)	X	X		X	X	
Euro IV / Euro V (After 2006)	G420	BMS(Knorr-Bremse_BMS5.0_8x2)	X	X		X	X	
Euro IV / Euro V (After 2006)	G420	BWS(Preparation system)	X	X				
Euro IV / Euro V (After 2006)	G420	CCS(Climate control system)	X	X		X	X	
Euro IV / Euro V (After 2006)	G420	COO(Coordinator)	X	X		X		
Euro IV / Euro V (After 2006)	G420	COO(Coordinator module)	X	X				
Euro IV / Euro V (After 2006)	G420	CSS(Collision safety system)	X	X				
Euro IV / Euro V (After 2006)	G420	DAS(Adaptive Cruise Control)		X				
Euro IV / Euro V (After 2006)	G420	DIS(Adaptive Cruise Control)	X	X				
Euro IV / Euro V (After 2006)	G420	EEC(Exhaust Gas Treatment)	X	X		X	X	
Euro IV / Euro V (After 2006)	G420	EMS S6/S7(Engine Management System)	X	X		X	X	SCR warning light reset
Euro IV / Euro V (After 2006)	G420	EMS S8(Engine Management System)	X	X		X	X	
Euro IV / Euro V (After 2006)	G420	GMS(Gearbox Control System)	X	X		X	X	
Euro IV / Euro V (After 2006)	G420	ICL1(Instrument Cluster)	X	X		X	X	
Euro IV / Euro V (After 2006)	G420	ICL2(Instrument Cluster)	X	X		X	X	
Euro IV / Euro V (After 2006)	G420	LDW(Monitor traffic lane)	X	X				
Euro IV / Euro V (After 2006)	G420	LAS(Lock and alarm system)	X	X				
Euro IV / Euro V (After 2006)	G420	LAS(Lock and alarm system)	X	X				
Euro IV / Euro V (After 2006)	G420	RET(Retarder)	X	X		X	X	
Euro IV / Euro V (After 2006)	G420	SMS(Suspension Control System)	X	X		X		
Euro IV / Euro V (After 2006)	G420	SMS(Wabco_SMS CAN 2)	X	X		X		Calibration at normal level Level sensor calibration Pressure sensor calibration
Euro IV / Euro V (After 2006)	G420	TCO(Tachograph)	X	X				
Euro IV / Euro V (After 2006)	G420	DTCO(DTCO Tachograph)	X	X				
Euro IV / Euro V (After 2006)	G420	MTCO(MTCO Tachograph)	X	X				
Euro IV / Euro V (After 2006)	G420	VIS(Visibility System)	X	X		X		
Euro IV / Euro V (After 2006)	G420	VIS(Visibility System)	X	X		X	X	

Exhaustion Standard	Model	System	ECU INFO	DTC	DTC Freeze	Data List	Actuations	Spec. Func.
Euro IV / Euro V (After 2006)	G420	CTS(Clock and Time System)		X				
Euro IV / Euro V (After 2006)	G420	AUS(Audio system)		X				
Euro IV / Euro V (After 2006)	G420	TPM(Tires pressure Monitoring System)		X				
Euro IV / Euro V (After 2006)	G420	RTI(Road Transport informatics)		X				
Euro IV / Euro V (After 2006)	G420	WTA(Auxiliary heating system water-to-air)	X	X				
Euro IV / Euro V (After 2006)	G440	APS(Compressed Air Supply)	X	X		X		Resetting air meter
Euro IV / Euro V (After 2006)	G440	ATA(Auxiliary heating system air-to-air)	X	X		X		
Euro IV / Euro V (After 2006)	G440	AWD(All-Wheel Drive)		X				
Euro IV / Euro V (After 2006)	G440	BCS(Bus chassis system)	X	X		X		
Euro IV / Euro V (After 2006)	G440	BMS(Brake Management System)	X	X		X		Reset self-learned parameters
Euro IV / Euro V (After 2006)	G440	BMS(Brake management system ABS E)	X	X		X	X	
Euro IV / Euro V (After 2006)	G440	BMS(Knorr-Bremse_BMS5.0_4x2)	X	X		X	X	
Euro IV / Euro V (After 2006)	G440	BMS(Knorr-Bremse_BMS5.0_6x2 6x4)	X	X		X	X	
Euro IV / Euro V (After 2006)	G440	BMS(Knorr-Bremse_BMS5.0_8x2)	X	X		X	X	
Euro IV / Euro V (After 2006)	G440	BWS(Preparation system)	X	X				
Euro IV / Euro V (After 2006)	G440	CCS(Climate control system)	X	X		X	X	
Euro IV / Euro V (After 2006)	G440	COO(Coordinator)	X	X		X		
Euro IV / Euro V (After 2006)	G440	COO(Coordinator module)	X	X				
Euro IV / Euro V (After 2006)	G440	CSS(Collision safety system)	X	X				
Euro IV / Euro V (After 2006)	G440	DAS(Adaptive Cruise Control)		X				
Euro IV / Euro V (After 2006)	G440	DIS(Adaptive Cruise Control)	X	X				
Euro IV / Euro V (After 2006)	G440	EEC(Exhaust Gas Treatment)	X	X		X	X	
Euro IV / Euro V (After 2006)	G440	EMS S6/S7(Engine Management System)	X	X		X	X	SCR warning light reset
Euro IV / Euro V (After 2006)	G440	EMS S8(Engine Management System)	X	X		X	X	
Euro IV / Euro V (After 2006)	G440	GMS(Gearbox Control System)	X	X		X	X	
Euro IV / Euro V (After 2006)	G440	ICL1(Instrument Cluster)	X	X		X	X	
Euro IV / Euro V (After 2006)	G440	ICL2(Instrument Cluster)	X	X		X	X	
Euro IV / Euro V (After 2006)	G440	LDW(Monitor traffic lane)	X	X				
Euro IV / Euro V (After 2006)	G440	LAS(Lock and alarm system)	X	X				
Euro IV / Euro V (After 2006)	G440	LAS(Lock and alarm system)	X	X				
Euro IV / Euro V (After 2006)	G440	RET(Retarder)	X	X		X	X	
Euro IV / Euro V (After 2006)	G440	SMS(Suspension Control System)	X	X		X		
Euro IV / Euro V (After 2006)	G440	SMS(Wabco_SMS CAN 2)	X	X		X		Calibration at normal level Level sensor calibration Pressure sensor calibration
Euro IV / Euro V (After 2006)	G440	TCO(Tachograph)	X	X				
Euro IV / Euro V (After 2006)	G440	DTCO(DTCO Tachograph)	X	X				
Euro IV / Euro V (After 2006)	G440	MTCO(MTCO Tachograph)	X	X				
Euro IV / Euro V (After 2006)	G440	VIS(Visibility System)	X	X		X		
Euro IV / Euro V (After 2006)	G440	VIS(Visibility System)	X	X		X	X	
Euro IV / Euro V (After 2006)	G440	CTS(Clock and Time System)		X				
Euro IV / Euro V (After 2006)	G440	AUS(Audio system)		X				
Euro IV / Euro V (After 2006)	G440	TPM(Tires pressure Monitoring System)		X				
Euro IV / Euro V (After 2006)	G440	RTI(Road Transport informatics)		X				
Euro IV / Euro V (After 2006)	G440	WTA(Auxiliary heating system water-to-air)	X	X				
Euro IV / Euro V (After 2006)	G480	APS(Compressed Air Supply)	X	X		X		Resetting air meter
Euro IV / Euro V (After 2006)	G480	ATA(Auxiliary heating system air-to-air)	X	X		X		
Euro IV / Euro V (After 2006)	G480	AWD(All-Wheel Drive)		X				
Euro IV / Euro V (After 2006)	G480	BCS(Bus chassis system)	X	X		X		
Euro IV / Euro V (After 2006)	G480	BMS(Brake Management System)	X	X		X		Reset self-learned parameters
Euro IV / Euro V (After 2006)	G480	BMS(Brake management system ABS E)	X	X		X	X	
Euro IV / Euro V (After 2006)	G480	BMS(Knorr-Bremse_BMS5.0_4x2)	X	X		X	X	
Euro IV / Euro V (After 2006)	G480	BMS(Knorr-Bremse_BMS5.0_6x2 6x4)	X	X		X	X	
Euro IV / Euro V (After 2006)	G480	BMS(Knorr-Bremse_BMS5.0_8x2)	X	X		X	X	
Euro IV / Euro V (After 2006)	G480	BWS(Preparation system)	X	X				
Euro IV / Euro V (After 2006)	G480	CCS(Climate control system)	X	X		X	X	
Euro IV / Euro V (After 2006)	G480	COO(Coordinator)	X	X		X		
Euro IV / Euro V (After 2006)	G480	COO(Coordinator module)	X	X				
Euro IV / Euro V (After 2006)	G480	CSS(Collision safety system)	X	X				
Euro IV / Euro V (After 2006)	G480	DAS(Adaptive Cruise Control)		X				
Euro IV / Euro V (After 2006)	G480	DIS(Adaptive Cruise Control)	X	X				
Euro IV / Euro V (After 2006)	G480	EEC(Exhaust Gas Treatment)	X	X		X	X	
Euro IV / Euro V (After 2006)	G480	EMS S6/S7(Engine Management System)	X	X		X	X	SCR warning light reset
Euro IV / Euro V (After 2006)	G480	EMS S8(Engine Management System)	X	X		X	X	
Euro IV / Euro V (After 2006)	G480	GMS(Gearbox Control System)	X	X		X	X	
Euro IV / Euro V (After 2006)	G480	ICL1(Instrument Cluster)	X	X		X	X	
Euro IV / Euro V (After 2006)	G480	ICL2(Instrument Cluster)	X	X		X	X	
Euro IV / Euro V (After 2006)	G480	LDW(Monitor traffic lane)	X	X				

Exhaustion Standard	Model	System	ECU INFO	DTC	DTC Freeze	Data List	Actuations	Spec. Func.
Euro IV / Euro V (After 2006)	G480	LAS(Lock and alarm system)	X	X				
Euro IV / Euro V (After 2006)	G480	LAS(Lock and alarm system)	X	X				
Euro IV / Euro V (After 2006)	G480	RET(Retarder)	X	X		X	X	
Euro IV / Euro V (After 2006)	G480	SMS(Suspension Control System)	X	X		X		
Euro IV / Euro V (After 2006)	G480	SMS(Wabco_SMS CAN 2)	X	X		X		Calibration at normal level Level sensor calibration Pressure sensor calibration
Euro IV / Euro V (After 2006)	G480	TCO(Tachograph)	X	X				
Euro IV / Euro V (After 2006)	G480	DTCO(DTCO Tachograph)	X	X				
Euro IV / Euro V (After 2006)	G480	MTCO(MTCO Tachograph)	X	X				
Euro IV / Euro V (After 2006)	G480	VIS(Visibility System)	X	X		X		
Euro IV / Euro V (After 2006)	G480	VIS(Visibility System)	X	X		X	X	
Euro IV / Euro V (After 2006)	G480	CTS(Clock and Time System)		X				
Euro IV / Euro V (After 2006)	G480	AUS(Audio system)		X				
Euro IV / Euro V (After 2006)	G480	TPM(Tires pressure Monitoring System)		X				
Euro IV / Euro V (After 2006)	G480	RTI(Road Transport informatics)		X				
Euro IV / Euro V (After 2006)	G480	WTA(Auxiliary heating system water-to-air)	X	X				
Euro IV / Euro V (After 2006)	R230	APS(Compressed Air Supply)	X	X		X		Resetting air meter
Euro IV / Euro V (After 2006)	R230	ATA(Auxiliary heating system air-to-air)	X	X		X		
Euro IV / Euro V (After 2006)	R230	AWD(All-Wheel Drive)		X				
Euro IV / Euro V (After 2006)	R230	BCS(Bus chassis system)	X	X		X		
Euro IV / Euro V (After 2006)	R230	BMS(Brake Management System)	X	X		X		Reset self-learned parameters
Euro IV / Euro V (After 2006)	R230	BMS(Brake management system ABS E)	X	X		X	X	
Euro IV / Euro V (After 2006)	R230	BMS(Knorr-Bremse_BMS5.0_4x2)	X	X		X	X	
Euro IV / Euro V (After 2006)	R230	BMS(Knorr-Bremse_BMS5.0_6x2 6x4)	X	X		X	X	
Euro IV / Euro V (After 2006)	R230	BMS(Knorr-Bremse_BMS5.0_8x2)	X	X		X	X	
Euro IV / Euro V (After 2006)	R230	BWS(Preparation system)	X	X				
Euro IV / Euro V (After 2006)	R230	CCS(Climate control system)	X	X		X	X	
Euro IV / Euro V (After 2006)	R230	COO(Coordinator)	X	X		X		
Euro IV / Euro V (After 2006)	R230	COO(Coordinator module)	X	X				
Euro IV / Euro V (After 2006)	R230	CSS(Collision safety system)	X	X				
Euro IV / Euro V (After 2006)	R230	DAS(Adaptive Cruise Control)		X				
Euro IV / Euro V (After 2006)	R230	DIS(Adaptive Cruise Control)	X	X				
Euro IV / Euro V (After 2006)	R230	EEC(Exhaust Gas Treatment)	X	X		X	X	
Euro IV / Euro V (After 2006)	R230	EMS S6/S7(Engine Management System)	X	X		X	X	SCR warning light reset
Euro IV / Euro V (After 2006)	R230	EMS S8(Engine Management System)	X	X		X	X	
Euro IV / Euro V (After 2006)	R230	GMS(Gearbox Control System)	X	X		X	X	
Euro IV / Euro V (After 2006)	R230	ICL1(Instrument Cluster)	X	X		X	X	
Euro IV / Euro V (After 2006)	R230	ICL2(Instrument Cluster)	X	X		X	X	
Euro IV / Euro V (After 2006)	R230	LDW(Monitor traffic lane)	X	X				
Euro IV / Euro V (After 2006)	R230	LAS(Lock and alarm system)	X	X				
Euro IV / Euro V (After 2006)	R230	LAS(Lock and alarm system)	X	X				
Euro IV / Euro V (After 2006)	R230	RET(Retarder)	X	X		X	X	
Euro IV / Euro V (After 2006)	R230	SMS(Suspension Control System)	X	X		X		
Euro IV / Euro V (After 2006)	R230	SMS(Wabco_SMS CAN 2)	X	X		X		Calibration at normal level Level sensor calibration Pressure sensor calibration
Euro IV / Euro V (After 2006)	R230	TCO(Tachograph)	X	X				
Euro IV / Euro V (After 2006)	R230	DTCO(DTCO Tachograph)	X	X				
Euro IV / Euro V (After 2006)	R230	MTCO(MTCO Tachograph)	X	X				
Euro IV / Euro V (After 2006)	R230	VIS(Visibility System)	X	X		X		
Euro IV / Euro V (After 2006)	R230	VIS(Visibility System)	X	X		X	X	
Euro IV / Euro V (After 2006)	R230	CTS(Clock and Time System)		X				
Euro IV / Euro V (After 2006)	R230	AUS(Audio system)		X				
Euro IV / Euro V (After 2006)	R230	TPM(Tires pressure Monitoring System)		X				
Euro IV / Euro V (After 2006)	R230	RTI(Road Transport informatics)		X				
Euro IV / Euro V (After 2006)	R230	WTA(Auxiliary heating system water-to-air)	X	X				
Euro IV / Euro V (After 2006)	R270	APS(Compressed Air Supply)	X	X		X		Resetting air meter
Euro IV / Euro V (After 2006)	R270	ATA(Auxiliary heating system air-to-air)	X	X		X		
Euro IV / Euro V (After 2006)	R270	AWD(All-Wheel Drive)		X				
Euro IV / Euro V (After 2006)	R270	BCS(Bus chassis system)	X	X		X		
Euro IV / Euro V (After 2006)	R270	BMS(Brake Management System)	X	X		X		Reset self-learned parameters
Euro IV / Euro V (After 2006)	R270	BMS(Brake management system ABS E)	X	X		X	X	
Euro IV / Euro V (After 2006)	R270	BMS(Knorr-Bremse_BMS5.0_4x2)	X	X		X	X	
Euro IV / Euro V (After 2006)	R270	BMS(Knorr-Bremse_BMS5.0_6x2 6x4)	X	X		X	X	
Euro IV / Euro V (After 2006)	R270	BMS(Knorr-Bremse_BMS5.0_8x2)	X	X		X	X	
Euro IV / Euro V (After 2006)	R270	BWS(Preparation system)	X	X				
Euro IV / Euro V (After 2006)	R270	CCS(Climate control system)	X	X		X	X	

Exhaustion Standard	Model	System	ECU INFO	DTC	DTC Freeze	Data List	Actua tions	Spec. Func.
Euro IV / Euro V (After 2006)	R270	COO(Coordinator)	X	X		X		
Euro IV / Euro V (After 2006)	R270	COO(Coordinator module)	X	X				
Euro IV / Euro V (After 2006)	R270	CSS(Collision safety system)	X	X				
Euro IV / Euro V (After 2006)	R270	DAS(Adaptive Cruise Control)		X				
Euro IV / Euro V (After 2006)	R270	DIS(Adaptive Cruise Control)	X	X				
Euro IV / Euro V (After 2006)	R270	EEC(Exhaust Gas Treatment)	X	X		X	X	
Euro IV / Euro V (After 2006)	R270	EMS S6/S7(Engine Management System)	X	X		X	X	SCR warning light reset
Euro IV / Euro V (After 2006)	R270	EMS S8(Engine Management System)	X	X		X	X	
Euro IV / Euro V (After 2006)	R270	GMS(Gearbox Control System)	X	X		X	X	
Euro IV / Euro V (After 2006)	R270	ICL1(Instrument Cluster)	X	X		X	X	
Euro IV / Euro V (After 2006)	R270	ICL2(Instrument Cluster)	X	X		X	X	
Euro IV / Euro V (After 2006)	R270	LDW(Monitor traffic lane)	X	X				
Euro IV / Euro V (After 2006)	R270	LAS(Lock and alarm system)	X	X				
Euro IV / Euro V (After 2006)	R270	LAS(Lock and alarm system)	X	X				
Euro IV / Euro V (After 2006)	R270	RET(Retarder)	X	X		X	X	
Euro IV / Euro V (After 2006)	R270	SMS(Suspension Control System)	X	X		X		
Euro IV / Euro V (After 2006)	R270	SMS(Wabco_SMS CAN 2)	X	X		X		Calibration at normal level Level sensor calibration Pressure sensor calibration
Euro IV / Euro V (After 2006)	R270	TCO(Tachograph)	X	X				
Euro IV / Euro V (After 2006)	R270	DTCO(DTCO Tachograph)	X	X				
Euro IV / Euro V (After 2006)	R270	MTCO(MTCO Tachograph)	X	X				
Euro IV / Euro V (After 2006)	R270	VIS(Visibility System)	X	X		X		
Euro IV / Euro V (After 2006)	R270	VIS(Visibility System)	X	X		X	X	
Euro IV / Euro V (After 2006)	R270	CTS(Clock and Time System)		X				
Euro IV / Euro V (After 2006)	R270	AUS(Audio system)		X				
Euro IV / Euro V (After 2006)	R270	TPM(Tires pressure Monitoring System)		X				
Euro IV / Euro V (After 2006)	R270	RTI(Road Transport informatics)		X				
Euro IV / Euro V (After 2006)	R270	WTA(Auxiliary heating system water-to-air)	X	X				
Euro IV / Euro V (After 2006)	R280	APS(Compressed Air Supply)	X	X		X		Resetting air meter
Euro IV / Euro V (After 2006)	R280	ATA(Auxiliary heating system air-to-air)	X	X		X		
Euro IV / Euro V (After 2006)	R280	AWD(All-Wheel Drive)		X				
Euro IV / Euro V (After 2006)	R280	BCS(Bus chassis system)	X	X		X		
Euro IV / Euro V (After 2006)	R280	BMS(Brake Management System)	X	X		X		Reset self-learned parameters
Euro IV / Euro V (After 2006)	R280	BMS(Brake management system ABS E)	X	X		X	X	
Euro IV / Euro V (After 2006)	R280	BMS(Knorr-Bremse_BMS5.0_4x2)	X	X		X	X	
Euro IV / Euro V (After 2006)	R280	BMS(Knorr-Bremse_BMS5.0_6x2 6x4)	X	X		X	X	
Euro IV / Euro V (After 2006)	R280	BMS(Knorr-Bremse_BMS5.0_8x2)	X	X		X	X	
Euro IV / Euro V (After 2006)	R280	BWS(Preparation system)	X	X				
Euro IV / Euro V (After 2006)	R280	CCS(Climate control system)	X	X		X	X	
Euro IV / Euro V (After 2006)	R280	COO(Coordinator)	X	X		X		
Euro IV / Euro V (After 2006)	R280	COO(Coordinator module)	X	X				
Euro IV / Euro V (After 2006)	R280	CSS(Collision safety system)	X	X				
Euro IV / Euro V (After 2006)	R280	DAS(Adaptive Cruise Control)		X				
Euro IV / Euro V (After 2006)	R280	DIS(Adaptive Cruise Control)	X	X				
Euro IV / Euro V (After 2006)	R280	EEC(Exhaust Gas Treatment)	X	X		X	X	
Euro IV / Euro V (After 2006)	R280	EMS S6/S7(Engine Management System)	X	X		X	X	SCR warning light reset
Euro IV / Euro V (After 2006)	R280	EMS S8(Engine Management System)	X	X		X	X	
Euro IV / Euro V (After 2006)	R280	GMS(Gearbox Control System)	X	X		X	X	
Euro IV / Euro V (After 2006)	R280	ICL1(Instrument Cluster)	X	X		X	X	
Euro IV / Euro V (After 2006)	R280	ICL2(Instrument Cluster)	X	X		X	X	
Euro IV / Euro V (After 2006)	R280	LDW(Monitor traffic lane)	X	X				
Euro IV / Euro V (After 2006)	R280	LAS(Lock and alarm system)	X	X				
Euro IV / Euro V (After 2006)	R280	LAS(Lock and alarm system)	X	X				
Euro IV / Euro V (After 2006)	R280	RET(Retarder)	X	X		X	X	
Euro IV / Euro V (After 2006)	R280	SMS(Suspension Control System)	X	X		X		
Euro IV / Euro V (After 2006)	R280	SMS(Wabco_SMS CAN 2)	X	X		X		Calibration at normal level Level sensor calibration Pressure sensor calibration
Euro IV / Euro V (After 2006)	R280	TCO(Tachograph)	X	X				
Euro IV / Euro V (After 2006)	R280	DTCO(DTCO Tachograph)	X	X				
Euro IV / Euro V (After 2006)	R280	MTCO(MTCO Tachograph)	X	X				
Euro IV / Euro V (After 2006)	R280	VIS(Visibility System)	X	X		X		
Euro IV / Euro V (After 2006)	R280	VIS(Visibility System)	X	X		X	X	
Euro IV / Euro V (After 2006)	R280	CTS(Clock and Time System)		X				
Euro IV / Euro V (After 2006)	R280	AUS(Audio system)		X				
Euro IV / Euro V (After 2006)	R280	TPM(Tires pressure Monitoring System)		X				
Euro IV / Euro V (After 2006)	R280	RTI(Road Transport informatics)		X				

Exhaustion Standard	Model	System	ECU INFO	DTC	DTC Freeze	Data List	Actua tions	Spec. Func.
Euro IV / Euro V (After 2006)	R280	WTA(Auxiliary heating system water-to-air)	X	X				
Euro IV / Euro V (After 2006)	R310	APS(Compressed Air Supply)	X	X		X		Resetting air meter
Euro IV / Euro V (After 2006)	R310	ATA(Auxiliary heating system air-to-air)	X	X		X		
Euro IV / Euro V (After 2006)	R310	AWD(All-Wheel Drive)		X				
Euro IV / Euro V (After 2006)	R310	BCS(Bus chassis system)	X	X		X		
Euro IV / Euro V (After 2006)	R310	BMS(Brake Management System)	X	X		X		Reset self-learned parameters
Euro IV / Euro V (After 2006)	R310	BMS(Brake management system ABS E)	X	X		X	X	
Euro IV / Euro V (After 2006)	R310	BMS(Knorr-Bremse_BMS5.0_4x2)	X	X		X	X	
Euro IV / Euro V (After 2006)	R310	BMS(Knorr-Bremse_BMS5.0_6x2 6x4)	X	X		X	X	
Euro IV / Euro V (After 2006)	R310	BMS(Knorr-Bremse_BMS5.0_8x2)	X	X		X	X	
Euro IV / Euro V (After 2006)	R310	BWS(Preparation system)	X	X				
Euro IV / Euro V (After 2006)	R310	CCS(Climate control system)	X	X		X	X	
Euro IV / Euro V (After 2006)	R310	COO(Coordinator)	X	X		X		
Euro IV / Euro V (After 2006)	R310	COO(Coordinator module)	X	X				
Euro IV / Euro V (After 2006)	R310	CSS(Collision safety system)	X	X				
Euro IV / Euro V (After 2006)	R310	DAS(Adaptive Cruise Control)		X				
Euro IV / Euro V (After 2006)	R310	DIS(Adaptive Cruise Control)	X	X				
Euro IV / Euro V (After 2006)	R310	EEC(Exhaust Gas Treatment)	X	X		X	X	
Euro IV / Euro V (After 2006)	R310	EMS S6/S7(Engine Management System)	X	X		X	X	SCR warning light reset
Euro IV / Euro V (After 2006)	R310	EMS S8(Engine Management System)	X	X		X	X	
Euro IV / Euro V (After 2006)	R310	GMS(Gearbox Control System)	X	X		X	X	
Euro IV / Euro V (After 2006)	R310	ICL1(Instrument Cluster)	X	X		X	X	
Euro IV / Euro V (After 2006)	R310	ICL2(Instrument Cluster)	X	X		X	X	
Euro IV / Euro V (After 2006)	R310	LDW(Monitor traffic lane)	X	X				
Euro IV / Euro V (After 2006)	R310	LAS(Lock and alarm system)	X	X				
Euro IV / Euro V (After 2006)	R310	LAS(Lock and alarm system)	X	X				
Euro IV / Euro V (After 2006)	R310	RET(Retarder)	X	X		X	X	
Euro IV / Euro V (After 2006)	R310	SMS(Suspension Control System)	X	X		X		
Euro IV / Euro V (After 2006)	R310	SMS(Wabco_SMS CAN 2)	X	X		X		Calibration at normal level Level sensor calibration Pressure sensor calibration
Euro IV / Euro V (After 2006)	R310	TCO(Tachograph)	X	X				
Euro IV / Euro V (After 2006)	R310	DTCO(DTCO Tachograph)	X	X				
Euro IV / Euro V (After 2006)	R310	MTCO(MTCO Tachograph)	X	X				
Euro IV / Euro V (After 2006)	R310	VIS(Visibility System)	X	X		X		
Euro IV / Euro V (After 2006)	R310	VIS(Visibility System)	X	X		X	X	
Euro IV / Euro V (After 2006)	R310	CTS(Clock and Time System)		X				
Euro IV / Euro V (After 2006)	R310	AUS(Audio system)		X				
Euro IV / Euro V (After 2006)	R310	TPM(Tires pressure Monitoring System)		X				
Euro IV / Euro V (After 2006)	R310	RTI(Road Transport informatics)		X				
Euro IV / Euro V (After 2006)	R310	WTA(Auxiliary heating system water-to-air)	X	X				
Euro IV / Euro V (After 2006)	R320	APS(Compressed Air Supply)	X	X		X		Resetting air meter
Euro IV / Euro V (After 2006)	R320	ATA(Auxiliary heating system air-to-air)	X	X		X		
Euro IV / Euro V (After 2006)	R320	AWD(All-Wheel Drive)		X				
Euro IV / Euro V (After 2006)	R320	BCS(Bus chassis system)	X	X		X		
Euro IV / Euro V (After 2006)	R320	BMS(Brake Management System)	X	X		X		Reset self-learned parameters
Euro IV / Euro V (After 2006)	R320	BMS(Brake management system ABS E)	X	X		X	X	
Euro IV / Euro V (After 2006)	R320	BMS(Knorr-Bremse_BMS5.0_4x2)	X	X		X	X	
Euro IV / Euro V (After 2006)	R320	BMS(Knorr-Bremse_BMS5.0_6x2 6x4)	X	X		X	X	
Euro IV / Euro V (After 2006)	R320	BMS(Knorr-Bremse_BMS5.0_8x2)	X	X		X	X	
Euro IV / Euro V (After 2006)	R320	BWS(Preparation system)	X	X				
Euro IV / Euro V (After 2006)	R320	CCS(Climate control system)	X	X		X	X	
Euro IV / Euro V (After 2006)	R320	COO(Coordinator)	X	X		X		
Euro IV / Euro V (After 2006)	R320	COO(Coordinator module)	X	X				
Euro IV / Euro V (After 2006)	R320	CSS(Collision safety system)	X	X				
Euro IV / Euro V (After 2006)	R320	DAS(Adaptive Cruise Control)		X				
Euro IV / Euro V (After 2006)	R320	DIS(Adaptive Cruise Control)	X	X				
Euro IV / Euro V (After 2006)	R320	EEC(Exhaust Gas Treatment)	X	X		X	X	
Euro IV / Euro V (After 2006)	R320	EMS S6/S7(Engine Management System)	X	X		X	X	SCR warning light reset
Euro IV / Euro V (After 2006)	R320	EMS S8(Engine Management System)	X	X		X	X	
Euro IV / Euro V (After 2006)	R320	GMS(Gearbox Control System)	X	X		X	X	
Euro IV / Euro V (After 2006)	R320	ICL1(Instrument Cluster)	X	X		X	X	
Euro IV / Euro V (After 2006)	R320	ICL2(Instrument Cluster)	X	X		X	X	
Euro IV / Euro V (After 2006)	R320	LDW(Monitor traffic lane)	X	X				
Euro IV / Euro V (After 2006)	R320	LAS(Lock and alarm system)	X	X				
Euro IV / Euro V (After 2006)	R320	LAS(Lock and alarm system)	X	X				
Euro IV / Euro V (After 2006)	R320	RET(Retarder)	X	X		X	X	
Euro IV / Euro V (After 2006)	R320	SMS(Suspension Control System)	X	X		X		

Exhaustion Standard	Model	System	ECU INFO	DTC	DTC Freeze	Data List	Actua tions	Spec. Func.
Euro IV / Euro V (After 2006)	R320	SMS(Wabco_SMS CAN 2)	X	X		X		Calibration at normal level Level sensor calibration Pressure sensor calibration
Euro IV / Euro V (After 2006)	R320	TCO(Tachograph)	X	X				
Euro IV / Euro V (After 2006)	R320	DTCO(DTCO Tachograph)	X	X				
Euro IV / Euro V (After 2006)	R320	MTCO(MTCO Tachograph)	X	X				
Euro IV / Euro V (After 2006)	R320	VIS(Visibility System)	X	X		X		
Euro IV / Euro V (After 2006)	R320	VIS(Visibility System)	X	X		X	X	
Euro IV / Euro V (After 2006)	R320	CTS(Clock and Time System)		X				
Euro IV / Euro V (After 2006)	R320	AUS(Audio system)		X				
Euro IV / Euro V (After 2006)	R320	TPM(Tires pressure Monitoring System)		X				
Euro IV / Euro V (After 2006)	R320	RTI(Road Transport informatics)		X				
Euro IV / Euro V (After 2006)	R320	WTA(Auxiliary heating system water-to-air)	X	X				
Euro IV / Euro V (After 2006)	R340	APS(Compressed Air Supply)	X	X		X		Resetting air meter
Euro IV / Euro V (After 2006)	R340	ATA(Auxiliary heating system air-to-air)	X	X		X		
Euro IV / Euro V (After 2006)	R340	AWD(All-Wheel Drive)		X				
Euro IV / Euro V (After 2006)	R340	BCS(Bus chassis system)	X	X		X		
Euro IV / Euro V (After 2006)	R340	BMS(Brake Management System)	X	X		X		Reset self-learned parameters
Euro IV / Euro V (After 2006)	R340	BMS(Brake management system ABS E)	X	X		X	X	
Euro IV / Euro V (After 2006)	R340	BMS(Knorr-Bremse_BMS5.0_4x2)	X	X		X	X	
Euro IV / Euro V (After 2006)	R340	BMS(Knorr-Bremse_BMS5.0_6x2 6x4)	X	X		X	X	
Euro IV / Euro V (After 2006)	R340	BMS(Knorr-Bremse_BMS5.0_8x2)	X	X		X	X	
Euro IV / Euro V (After 2006)	R340	BWS(Preparation system)	X	X				
Euro IV / Euro V (After 2006)	R340	CCS(Climate control system)	X	X		X	X	
Euro IV / Euro V (After 2006)	R340	COO(Coordinator)	X	X		X		
Euro IV / Euro V (After 2006)	R340	COO(Coordinator module)	X	X				
Euro IV / Euro V (After 2006)	R340	CSS(Collision safety system)	X	X				
Euro IV / Euro V (After 2006)	R340	DAS(Adaptive Cruise Control)		X				
Euro IV / Euro V (After 2006)	R340	DIS(Adaptive Cruise Control)	X	X				
Euro IV / Euro V (After 2006)	R340	EEC(Exhaust Gas Treatment)	X	X		X	X	
Euro IV / Euro V (After 2006)	R340	EMS S6/S7(Engine Management System)	X	X		X	X	SCR warning light reset
Euro IV / Euro V (After 2006)	R340	EMS S8(Engine Management System)	X	X		X	X	
Euro IV / Euro V (After 2006)	R340	GMS(Gearbox Control System)	X	X		X	X	
Euro IV / Euro V (After 2006)	R340	ICL1(Instrument Cluster)	X	X		X	X	
Euro IV / Euro V (After 2006)	R340	ICL2(Instrument Cluster)	X	X		X	X	
Euro IV / Euro V (After 2006)	R340	LDW(Monitor traffic lane)	X	X				
Euro IV / Euro V (After 2006)	R340	LAS(Lock and alarm system)	X	X				
Euro IV / Euro V (After 2006)	R340	LAS(Lock and alarm system)	X	X				
Euro IV / Euro V (After 2006)	R340	RET(Retarder)	X	X		X	X	
Euro IV / Euro V (After 2006)	R340	SMS(Suspension Control System)	X	X		X		
Euro IV / Euro V (After 2006)	R340	SMS(Wabco_SMS CAN 2)	X	X		X		Calibration at normal level Level sensor calibration Pressure sensor calibration
Euro IV / Euro V (After 2006)	R340	TCO(Tachograph)	X	X				
Euro IV / Euro V (After 2006)	R340	DTCO(DTCO Tachograph)	X	X				
Euro IV / Euro V (After 2006)	R340	MTCO(MTCO Tachograph)	X	X				
Euro IV / Euro V (After 2006)	R340	VIS(Visibility System)	X	X		X		
Euro IV / Euro V (After 2006)	R340	VIS(Visibility System)	X	X		X	X	
Euro IV / Euro V (After 2006)	R340	CTS(Clock and Time System)		X				
Euro IV / Euro V (After 2006)	R340	AUS(Audio system)		X				
Euro IV / Euro V (After 2006)	R340	TPM(Tires pressure Monitoring System)		X				
Euro IV / Euro V (After 2006)	R340	RTI(Road Transport informatics)		X				
Euro IV / Euro V (After 2006)	R340	WTA(Auxiliary heating system water-to-air)	X	X				
Euro IV / Euro V (After 2006)	R360	APS(Compressed Air Supply)	X	X		X		Resetting air meter
Euro IV / Euro V (After 2006)	R360	ATA(Auxiliary heating system air-to-air)	X	X		X		
Euro IV / Euro V (After 2006)	R360	AWD(All-Wheel Drive)		X				
Euro IV / Euro V (After 2006)	R360	BCS(Bus chassis system)	X	X		X		
Euro IV / Euro V (After 2006)	R360	BMS(Brake Management System)	X	X		X		Reset self-learned parameters
Euro IV / Euro V (After 2006)	R360	BMS(Brake management system ABS E)	X	X		X	X	
Euro IV / Euro V (After 2006)	R360	BMS(Knorr-Bremse_BMS5.0_4x2)	X	X		X	X	
Euro IV / Euro V (After 2006)	R360	BMS(Knorr-Bremse_BMS5.0_6x2 6x4)	X	X		X	X	
Euro IV / Euro V (After 2006)	R360	BMS(Knorr-Bremse_BMS5.0_8x2)	X	X		X	X	
Euro IV / Euro V (After 2006)	R360	BWS(Preparation system)	X	X				
Euro IV / Euro V (After 2006)	R360	CCS(Climate control system)	X	X		X	X	
Euro IV / Euro V (After 2006)	R360	COO(Coordinator)	X	X		X		
Euro IV / Euro V (After 2006)	R360	COO(Coordinator module)	X	X				
Euro IV / Euro V (After 2006)	R360	CSS(Collision safety system)	X	X				
Euro IV / Euro V (After 2006)	R360	DAS(Adaptive Cruise Control)		X				

Exhaustion Standard	Model	System	ECU INFO	DTC	DTC Freeze	Data List	Actuations	Spec. Func.
Euro IV / Euro V (After 2006)	R360	DIS(Adaptive Cruise Control)	X	X				
Euro IV / Euro V (After 2006)	R360	EEC(Exhaust Gas Treatment)	X	X		X	X	
Euro IV / Euro V (After 2006)	R360	EMS S6/S7(Engine Management System)	X	X		X	X	SCR warning light reset
Euro IV / Euro V (After 2006)	R360	EMS S8(Engine Management System)	X	X		X	X	
Euro IV / Euro V (After 2006)	R360	GMS(Gearbox Control System)	X	X		X	X	
Euro IV / Euro V (After 2006)	R360	ICL1(Instrument Cluster)	X	X		X	X	
Euro IV / Euro V (After 2006)	R360	ICL2(Instrument Cluster)	X	X		X	X	
Euro IV / Euro V (After 2006)	R360	LDW(Monitor traffic lane)	X	X				
Euro IV / Euro V (After 2006)	R360	LAS(Lock and alarm system)	X	X				
Euro IV / Euro V (After 2006)	R360	LAS(Lock and alarm system)	X	X				
Euro IV / Euro V (After 2006)	R360	RET(Retarder)	X	X		X	X	
Euro IV / Euro V (After 2006)	R360	SMS(Suspension Control System)	X	X		X		
Euro IV / Euro V (After 2006)	R360	SMS(Wabco_SMS CAN 2)	X	X		X		Calibration at normal level Level sensor calibration Pressure sensor calibration
Euro IV / Euro V (After 2006)	R360	TCO(Tachograph)	X	X				
Euro IV / Euro V (After 2006)	R360	DTCO(DTCO Tachograph)	X	X				
Euro IV / Euro V (After 2006)	R360	MTCO(MTCO Tachograph)	X	X				
Euro IV / Euro V (After 2006)	R360	VIS(Visibility System)	X	X		X		
Euro IV / Euro V (After 2006)	R360	VIS(Visibility System)	X	X		X	X	
Euro IV / Euro V (After 2006)	R360	CTS(Clock and Time System)		X				
Euro IV / Euro V (After 2006)	R360	AUS(Audio system)		X				
Euro IV / Euro V (After 2006)	R360	TPM(Tires pressure Monitoring System)		X				
Euro IV / Euro V (After 2006)	R360	RTI(Road Transport informatics)		X				
Euro IV / Euro V (After 2006)	R360	WTA(Auxiliary heating system water-to-air)	X	X				
Euro IV / Euro V (After 2006)	R380	APS(Compressed Air Supply)	X	X		X		Resetting air meter
Euro IV / Euro V (After 2006)	R380	ATA(Auxiliary heating system air-to-air)	X	X		X		
Euro IV / Euro V (After 2006)	R380	AWD(All-Wheel Drive)		X				
Euro IV / Euro V (After 2006)	R380	BCS(Bus chassis system)	X	X		X		
Euro IV / Euro V (After 2006)	R380	BMS(Brake Management System)	X	X		X		Reset self-learned parameters
Euro IV / Euro V (After 2006)	R380	BMS(Brake management syatem ABS E)	X	X		X	X	
Euro IV / Euro V (After 2006)	R380	BMS(Knorr-Bremse_BMS5.0_4x2)	X	X		X	X	
Euro IV / Euro V (After 2006)	R380	BMS(Knorr-Bremse_BMS5.0_6x2 6x4)	X	X		X	X	
Euro IV / Euro V (After 2006)	R380	BMS(Knorr-Bremse_BMS5.0_8x2)	X	X		X	X	
Euro IV / Euro V (After 2006)	R380	BWS(Preparation system)	X	X				
Euro IV / Euro V (After 2006)	R380	CCS(Climate control system)	X	X		X	X	
Euro IV / Euro V (After 2006)	R380	COO(Coordinator)	X	X		X		
Euro IV / Euro V (After 2006)	R380	COO(Coordinator module)	X	X				
Euro IV / Euro V (After 2006)	R380	CSS(Collision safety system)	X	X				
Euro IV / Euro V (After 2006)	R380	DAS(Adaptive Cruise Control)		X				
Euro IV / Euro V (After 2006)	R380	DIS(Adaptive Cruise Control)	X	X				
Euro IV / Euro V (After 2006)	R380	EEC(Exhaust Gas Treatment)	X	X		X	X	
Euro IV / Euro V (After 2006)	R380	EMS S6/S7(Engine Management System)	X	X		X	X	SCR warning light reset
Euro IV / Euro V (After 2006)	R380	EMS S8(Engine Management System)	X	X		X	X	
Euro IV / Euro V (After 2006)	R380	GMS(Gearbox Control System)	X	X		X	X	
Euro IV / Euro V (After 2006)	R380	ICL1(Instrument Cluster)	X	X		X	X	
Euro IV / Euro V (After 2006)	R380	ICL2(Instrument Cluster)	X	X		X	X	
Euro IV / Euro V (After 2006)	R380	LDW(Monitor traffic lane)	X	X				
Euro IV / Euro V (After 2006)	R380	LAS(Lock and alarm system)	X	X				
Euro IV / Euro V (After 2006)	R380	LAS(Lock and alarm system)	X	X				
Euro IV / Euro V (After 2006)	R380	RET(Retarder)	X	X		X	X	
Euro IV / Euro V (After 2006)	R380	SMS(Suspension Control System)	X	X		X		
Euro IV / Euro V (After 2006)	R380	SMS(Wabco_SMS CAN 2)	X	X		X		Calibration at normal level Level sensor calibration Pressure sensor calibration
Euro IV / Euro V (After 2006)	R380	TCO(Tachograph)	X	X				
Euro IV / Euro V (After 2006)	R380	DTCO(DTCO Tachograph)	X	X				
Euro IV / Euro V (After 2006)	R380	MTCO(MTCO Tachograph)	X	X				
Euro IV / Euro V (After 2006)	R380	VIS(Visibility System)	X	X		X		
Euro IV / Euro V (After 2006)	R380	VIS(Visibility System)	X	X		X	X	
Euro IV / Euro V (After 2006)	R380	CTS(Clock and Time System)		X				
Euro IV / Euro V (After 2006)	R380	AUS(Audio system)		X				
Euro IV / Euro V (After 2006)	R380	TPM(Tires pressure Monitoring System)		X				
Euro IV / Euro V (After 2006)	R380	RTI(Road Transport informatics)		X				
Euro IV / Euro V (After 2006)	R380	WTA(Auxiliary heating system water-to-air)	X	X				
Euro IV / Euro V (After 2006)	R400	APS(Compressed Air Supply)	X	X		X		Resetting air meter
Euro IV / Euro V (After 2006)	R400	ATA(Auxiliary heating system air-to-air)	X	X		X		
Euro IV / Euro V (After 2006)	R400	AWD(All-Wheel Drive)		X				

Exhaustion Standard	Model	System	ECU INFO	DTC	DTC Freeze	Data List	Actua tions	Spec. Func.
Euro IV / Euro V (After 2006)	R400	BCS(Bus chassis system)	X	X		X		
Euro IV / Euro V (After 2006)	R400	BMS(Brake Management System)	X	X		X		Reset self-learned parameters
Euro IV / Euro V (After 2006)	R400	BMS(Brake management syatem ABS E)	X	X		X	X	
Euro IV / Euro V (After 2006)	R400	BMS(Knorr-Bremse_BMS5.0_4x2)	X	X		X	X	
Euro IV / Euro V (After 2006)	R400	BMS(Knorr-Bremse_BMS5.0_6x2 6x4)	X	X		X	X	
Euro IV / Euro V (After 2006)	R400	BMS(Knorr-Bremse_BMS5.0_8x2)	X	X		X	X	
Euro IV / Euro V (After 2006)	R400	BWS(Preparation system)	X	X				
Euro IV / Euro V (After 2006)	R400	CCS(Climate control system)	X	X		X	X	
Euro IV / Euro V (After 2006)	R400	COO(Coordinator)	X	X		X		
Euro IV / Euro V (After 2006)	R400	COO(Coordinator module)	X	X				
Euro IV / Euro V (After 2006)	R400	CSS(Collision safety system)	X	X				
Euro IV / Euro V (After 2006)	R400	DAS(Adaptive Cruise Control)		X				
Euro IV / Euro V (After 2006)	R400	DIS(Adaptive Cruise Control)	X	X				
Euro IV / Euro V (After 2006)	R400	EEC(Exhaust Gas Treatment)	X	X		X	X	
Euro IV / Euro V (After 2006)	R400	EMS S6/S7(Engine Management System)	X	X		X	X	SCR warning light reset
Euro IV / Euro V (After 2006)	R400	EMS S8(Engine Management System)	X	X		X	X	
Euro IV / Euro V (After 2006)	R400	GMS(Gearbox Control System)	X	X		X	X	
Euro IV / Euro V (After 2006)	R400	ICL1(Instrument Cluster)	X	X		X	X	
Euro IV / Euro V (After 2006)	R400	ICL2(Instrument Cluster)	X	X		X	X	
Euro IV / Euro V (After 2006)	R400	LDW(Monitor traffic lane)	X	X				
Euro IV / Euro V (After 2006)	R400	LAS(Lock and alarm system)	X	X				
Euro IV / Euro V (After 2006)	R400	LAS(Lock and alarm system)	X	X				
Euro IV / Euro V (After 2006)	R400	RET(Retarder)	X	X		X	X	
Euro IV / Euro V (After 2006)	R400	SMS(Suspension Control System)	X	X		X		
Euro IV / Euro V (After 2006)	R400	SMS(Wabco_SMS CAN 2)	X	X		X		Calibration at normal level Level sensor calibration Pressure sensor calibration
Euro IV / Euro V (After 2006)	R400	TCO(Tachograph)	X	X				
Euro IV / Euro V (After 2006)	R400	DTCO(DTCO Tachograph)	X	X				
Euro IV / Euro V (After 2006)	R400	MTCO(MTCO Tachograph)	X	X				
Euro IV / Euro V (After 2006)	R400	VIS(Visibility System)	X	X		X		
Euro IV / Euro V (After 2006)	R400	VIS(Visibility System)	X	X		X	X	
Euro IV / Euro V (After 2006)	R400	CTS(Clock and Time System)		X				
Euro IV / Euro V (After 2006)	R400	AUS(Audio system)		X				
Euro IV / Euro V (After 2006)	R400	TPM(Tires pressure Monitoring System)		X				
Euro IV / Euro V (After 2006)	R400	RTI(Road Transport informatics)		X				
Euro IV / Euro V (After 2006)	R400	WTA(Auxiliary heating system water-to-air)	X	X				
Euro IV / Euro V (After 2006)	R420	APS(Compressed Air Supply)	X	X		X		Resetting air meter
Euro IV / Euro V (After 2006)	R420	ATA(Auxiliary heating system air-to-air)	X	X		X		
Euro IV / Euro V (After 2006)	R420	AWD(All-Wheel Drive)		X				
Euro IV / Euro V (After 2006)	R420	BCS(Bus chassis system)	X	X		X		
Euro IV / Euro V (After 2006)	R420	BMS(Brake Management System)	X	X		X		Reset self-learned parameters
Euro IV / Euro V (After 2006)	R420	BMS(Brake management syatem ABS E)	X	X		X	X	
Euro IV / Euro V (After 2006)	R420	BMS(Knorr-Bremse_BMS5.0_4x2)	X	X		X	X	
Euro IV / Euro V (After 2006)	R420	BMS(Knorr-Bremse_BMS5.0_6x2 6x4)	X	X		X	X	
Euro IV / Euro V (After 2006)	R420	BMS(Knorr-Bremse_BMS5.0_8x2)	X	X		X	X	
Euro IV / Euro V (After 2006)	R420	BWS(Preparation system)	X	X				
Euro IV / Euro V (After 2006)	R420	CCS(Climate control system)	X	X		X	X	
Euro IV / Euro V (After 2006)	R420	COO(Coordinator)	X	X		X		
Euro IV / Euro V (After 2006)	R420	COO(Coordinator module)	X	X				
Euro IV / Euro V (After 2006)	R420	CSS(Collision safety system)	X	X				
Euro IV / Euro V (After 2006)	R420	DAS(Adaptive Cruise Control)		X				
Euro IV / Euro V (After 2006)	R420	DIS(Adaptive Cruise Control)	X	X				
Euro IV / Euro V (After 2006)	R420	EEC(Exhaust Gas Treatment)	X	X		X	X	
Euro IV / Euro V (After 2006)	R420	EMS S6/S7(Engine Management System)	X	X		X	X	SCR warning light reset
Euro IV / Euro V (After 2006)	R420	EMS S8(Engine Management System)	X	X		X	X	
Euro IV / Euro V (After 2006)	R420	GMS(Gearbox Control System)	X	X		X	X	
Euro IV / Euro V (After 2006)	R420	ICL1(Instrument Cluster)	X	X		X	X	
Euro IV / Euro V (After 2006)	R420	ICL2(Instrument Cluster)	X	X		X	X	
Euro IV / Euro V (After 2006)	R420	LDW(Monitor traffic lane)	X	X				
Euro IV / Euro V (After 2006)	R420	LAS(Lock and alarm system)	X	X				
Euro IV / Euro V (After 2006)	R420	LAS(Lock and alarm system)	X	X				
Euro IV / Euro V (After 2006)	R420	RET(Retarder)	X	X		X	X	
Euro IV / Euro V (After 2006)	R420	SMS(Suspension Control System)	X	X		X		
Euro IV / Euro V (After 2006)	R420	SMS(Wabco_SMS CAN 2)	X	X		X		Calibration at normal level Level sensor calibration Pressure sensor calibration
Euro IV / Euro V (After 2006)	R420	TCO(Tachograph)	X	X				

Exhaustion Standard	Model	System	ECU INFO	DTC	DTC Freeze	Data List	Actua tions	Spec. Func.
Euro IV / Euro V (After 2006)	R420	DTCO(DTCO Tachograph)	X	X				
Euro IV / Euro V (After 2006)	R420	MTCO(MTCO Tachograph)	X	X				
Euro IV / Euro V (After 2006)	R420	VIS(Visibility System)	X	X		X		
Euro IV / Euro V (After 2006)	R420	VIS(Visibility System)	X	X		X	X	
Euro IV / Euro V (After 2006)	R420	CTS(Clock and Time System)		X				
Euro IV / Euro V (After 2006)	R420	AUS(Audio system)		X				
Euro IV / Euro V (After 2006)	R420	TPM(Tires pressure Monitoring System)		X				
Euro IV / Euro V (After 2006)	R420	RTI(Road Transport informatics)		X				
Euro IV / Euro V (After 2006)	R420	WTA(Auxiliary heating system water-to-air)	X	X				
Euro IV / Euro V (After 2006)	R440	APS(Compressed Air Supply)	X	X		X		Resetting air meter
Euro IV / Euro V (After 2006)	R440	ATA(Auxiliary heating system air-to-air)	X	X		X		
Euro IV / Euro V (After 2006)	R440	AWD(All-Wheel Drive)		X				
Euro IV / Euro V (After 2006)	R440	BCS(Bus chassis system)	X	X		X		
Euro IV / Euro V (After 2006)	R440	BMS(Brake Management System)	X	X		X		Reset self-learned parameters
Euro IV / Euro V (After 2006)	R440	BMS(Brake management syatem ABS E)	X	X		X	X	
Euro IV / Euro V (After 2006)	R440	BMS(Knorr-Bremse_BMS5.0_4x2)	X	X		X	X	
Euro IV / Euro V (After 2006)	R440	BMS(Knorr-Bremse_BMS5.0_6x2 6x4)	X	X		X	X	
Euro IV / Euro V (After 2006)	R440	BMS(Knorr-Bremse_BMS5.0_8x2)	X	X		X	X	
Euro IV / Euro V (After 2006)	R440	BWS(Preparation system)	X	X				
Euro IV / Euro V (After 2006)	R440	CCS(Climate control system)	X	X		X	X	
Euro IV / Euro V (After 2006)	R440	COO(Coordinator)	X	X		X		
Euro IV / Euro V (After 2006)	R440	COO(Coordinator module)	X	X				
Euro IV / Euro V (After 2006)	R440	CSS(Collision safety system)	X	X				
Euro IV / Euro V (After 2006)	R440	DAS(Adaptive Cruise Control)		X				
Euro IV / Euro V (After 2006)	R440	DIS(Adaptive Cruise Control)	X	X				
Euro IV / Euro V (After 2006)	R440	EEC(Exhaust Gas Treatment)	X	X		X	X	
Euro IV / Euro V (After 2006)	R440	EMS S6/S7(Engine Management System)	X	X		X	X	SCR warning light reset
Euro IV / Euro V (After 2006)	R440	EMS S8(Engine Management System)	X	X		X	X	
Euro IV / Euro V (After 2006)	R440	GMS(Gearbox Control System)	X	X		X	X	
Euro IV / Euro V (After 2006)	R440	ICL1(Instrument Cluster)	X	X		X	X	
Euro IV / Euro V (After 2006)	R440	ICL2(Instrument Cluster)	X	X		X	X	
Euro IV / Euro V (After 2006)	R440	LDW(Monitor traffic lane)	X	X				
Euro IV / Euro V (After 2006)	R440	LAS(Lock and alarm system)	X	X				
Euro IV / Euro V (After 2006)	R440	LAS(Lock and alarm system)	X	X				
Euro IV / Euro V (After 2006)	R440	RET(Retarder)	X	X		X	X	
Euro IV / Euro V (After 2006)	R440	SMS(Suspension Control System)	X	X		X		
Euro IV / Euro V (After 2006)	R440	SMS(Wabco_SMS CAN 2)	X	X		X		Calibration at normal level Level sensor calibration Pressure sensor calibration
Euro IV / Euro V (After 2006)	R440	TCO(Tachograph)	X	X				
Euro IV / Euro V (After 2006)	R440	DTCO(DTCO Tachograph)	X	X				
Euro IV / Euro V (After 2006)	R440	MTCO(MTCO Tachograph)	X	X				
Euro IV / Euro V (After 2006)	R440	VIS(Visibility System)	X	X		X		
Euro IV / Euro V (After 2006)	R440	VIS(Visibility System)	X	X		X	X	
Euro IV / Euro V (After 2006)	R440	CTS(Clock and Time System)		X				
Euro IV / Euro V (After 2006)	R440	AUS(Audio system)		X				
Euro IV / Euro V (After 2006)	R440	TPM(Tires pressure Monitoring System)		X				
Euro IV / Euro V (After 2006)	R440	RTI(Road Transport informatics)		X				
Euro IV / Euro V (After 2006)	R440	WTA(Auxiliary heating system water-to-air)	X	X				
Euro IV / Euro V (After 2006)	R470	APS(Compressed Air Supply)	X	X		X		Resetting air meter
Euro IV / Euro V (After 2006)	R470	ATA(Auxiliary heating system air-to-air)	X	X		X		
Euro IV / Euro V (After 2006)	R470	AWD(All-Wheel Drive)		X				
Euro IV / Euro V (After 2006)	R470	BCS(Bus chassis system)	X	X		X		
Euro IV / Euro V (After 2006)	R470	BMS(Brake Management System)	X	X		X		Reset self-learned parameters
Euro IV / Euro V (After 2006)	R470	BMS(Brake management syatem ABS E)	X	X		X	X	
Euro IV / Euro V (After 2006)	R470	BMS(Knorr-Bremse_BMS5.0_4x2)	X	X		X	X	
Euro IV / Euro V (After 2006)	R470	BMS(Knorr-Bremse_BMS5.0_6x2 6x4)	X	X		X	X	
Euro IV / Euro V (After 2006)	R470	BMS(Knorr-Bremse_BMS5.0_8x2)	X	X		X	X	
Euro IV / Euro V (After 2006)	R470	BWS(Preparation system)	X	X				
Euro IV / Euro V (After 2006)	R470	CCS(Climate control system)	X	X		X	X	
Euro IV / Euro V (After 2006)	R470	COO(Coordinator)	X	X		X		
Euro IV / Euro V (After 2006)	R470	COO(Coordinator module)	X	X				
Euro IV / Euro V (After 2006)	R470	CSS(Collision safety system)	X	X				
Euro IV / Euro V (After 2006)	R470	DAS(Adaptive Cruise Control)		X				
Euro IV / Euro V (After 2006)	R470	DIS(Adaptive Cruise Control)	X	X				
Euro IV / Euro V (After 2006)	R470	EEC(Exhaust Gas Treatment)	X	X		X	X	
Euro IV / Euro V (After 2006)	R470	EMS S6/S7(Engine Management System)	X	X		X	X	SCR warning light reset
Euro IV / Euro V (After 2006)	R470	EMS S8(Engine Management System)	X	X		X	X	

Exhaustion Standard	Model	System	ECU INFO	DTC	DTC Freeze	Data List	Actua tions	Spec. Func.
Euro IV / Euro V (After 2006)	R470	GMS(Gearbox Control System)	X	X		X	X	
Euro IV / Euro V (After 2006)	R470	ICL1(Instrument Cluster)	X	X		X	X	
Euro IV / Euro V (After 2006)	R470	ICL2(Instrument Cluster)	X	X		X	X	
Euro IV / Euro V (After 2006)	R470	LDW(Monitor traffic lane)	X	X				
Euro IV / Euro V (After 2006)	R470	LAS(Lock and alarm system)	X	X				
Euro IV / Euro V (After 2006)	R470	LAS(Lock and alarm system)	X	X				
Euro IV / Euro V (After 2006)	R470	RET(Retarder)	X	X		X	X	
Euro IV / Euro V (After 2006)	R470	SMS(Suspension Control System)	X	X		X		
Euro IV / Euro V (After 2006)	R470	SMS(Wabco_SMS CAN 2)	X	X		X		Calibration at normal level Level sensor calibration Pressure sensor calibration
Euro IV / Euro V (After 2006)	R470	TCO(Tachograph)	X	X				
Euro IV / Euro V (After 2006)	R470	DTCO(DTCO Tachograph)	X	X				
Euro IV / Euro V (After 2006)	R470	MTCO(MTCO Tachograph)	X	X				
Euro IV / Euro V (After 2006)	R470	VIS(Visibility System)	X	X		X		
Euro IV / Euro V (After 2006)	R470	VIS(Visibility System)	X	X		X	X	
Euro IV / Euro V (After 2006)	R470	CTS(Clock and Time System)		X				
Euro IV / Euro V (After 2006)	R470	AUS(Audio system)		X				
Euro IV / Euro V (After 2006)	R470	TPM(Tires pressure Monitoring System)		X				
Euro IV / Euro V (After 2006)	R470	RTI(Road Transport informatics)		X				
Euro IV / Euro V (After 2006)	R470	WTA(Auxiliary heating system water-to-air)	X	X				
Euro IV / Euro V (After 2006)	R480	APS(Compressed Air Supply)	X	X		X		Resetting air meter
Euro IV / Euro V (After 2006)	R480	ATA(Auxiliary heating system air-to-air)	X	X		X		
Euro IV / Euro V (After 2006)	R480	AWD(All-Wheel Drive)		X				
Euro IV / Euro V (After 2006)	R480	BCS(Bus chassis system)	X	X		X		
Euro IV / Euro V (After 2006)	R480	BMS(Brake Management System)	X	X		X		Reset self-learned parameters
Euro IV / Euro V (After 2006)	R480	BMS(Brake management system ABS E)	X	X		X	X	
Euro IV / Euro V (After 2006)	R480	BMS(Knorr-Bremse_BMS5.0_4x2)	X	X		X	X	
Euro IV / Euro V (After 2006)	R480	BMS(Knorr-Bremse_BMS5.0_6x2 6x4)	X	X		X	X	
Euro IV / Euro V (After 2006)	R480	BMS(Knorr-Bremse_BMS5.0_8x2)	X	X		X	X	
Euro IV / Euro V (After 2006)	R480	BWS(Preparation system)	X	X				
Euro IV / Euro V (After 2006)	R480	CCS(Climate control system)	X	X		X	X	
Euro IV / Euro V (After 2006)	R480	COO(Coordinator)	X	X		X		
Euro IV / Euro V (After 2006)	R480	COO(Coordinator module)	X	X				
Euro IV / Euro V (After 2006)	R480	CSS(Collision safety system)	X	X				
Euro IV / Euro V (After 2006)	R480	DAS(Adaptive Cruise Control)		X				
Euro IV / Euro V (After 2006)	R480	DIS(Adaptive Cruise Control)	X	X				
Euro IV / Euro V (After 2006)	R480	EEC(Exhaust Gas Treatment)	X	X		X	X	
Euro IV / Euro V (After 2006)	R480	EMS S6/S7(Engine Management System)	X	X		X	X	SCR warning light reset
Euro IV / Euro V (After 2006)	R480	EMS S8(Engine Management System)	X	X		X	X	
Euro IV / Euro V (After 2006)	R480	GMS(Gearbox Control System)	X	X		X	X	
Euro IV / Euro V (After 2006)	R480	ICL1(Instrument Cluster)	X	X		X	X	
Euro IV / Euro V (After 2006)	R480	ICL2(Instrument Cluster)	X	X		X	X	
Euro IV / Euro V (After 2006)	R480	LDW(Monitor traffic lane)	X	X				
Euro IV / Euro V (After 2006)	R480	LAS(Lock and alarm system)	X	X				
Euro IV / Euro V (After 2006)	R480	LAS(Lock and alarm system)	X	X				
Euro IV / Euro V (After 2006)	R480	RET(Retarder)	X	X		X	X	
Euro IV / Euro V (After 2006)	R480	SMS(Suspension Control System)	X	X		X		
Euro IV / Euro V (After 2006)	R480	SMS(Wabco_SMS CAN 2)	X	X		X		Calibration at normal level Level sensor calibration Pressure sensor calibration
Euro IV / Euro V (After 2006)	R480	TCO(Tachograph)	X	X				
Euro IV / Euro V (After 2006)	R480	DTCO(DTCO Tachograph)	X	X				
Euro IV / Euro V (After 2006)	R480	MTCO(MTCO Tachograph)	X	X				
Euro IV / Euro V (After 2006)	R480	VIS(Visibility System)	X	X		X		
Euro IV / Euro V (After 2006)	R480	VIS(Visibility System)	X	X		X	X	
Euro IV / Euro V (After 2006)	R480	CTS(Clock and Time System)		X				
Euro IV / Euro V (After 2006)	R480	AUS(Audio system)		X				
Euro IV / Euro V (After 2006)	R480	TPM(Tires pressure Monitoring System)		X				
Euro IV / Euro V (After 2006)	R480	RTI(Road Transport informatics)		X				
Euro IV / Euro V (After 2006)	R480	WTA(Auxiliary heating system water-to-air)	X	X				
Euro IV / Euro V (After 2006)	R500	APS(Compressed Air Supply)	X	X		X		Resetting air meter
Euro IV / Euro V (After 2006)	R500	ATA(Auxiliary heating system air-to-air)	X	X		X		
Euro IV / Euro V (After 2006)	R500	AWD(All-Wheel Drive)		X				
Euro IV / Euro V (After 2006)	R500	BCS(Bus chassis system)	X	X		X		
Euro IV / Euro V (After 2006)	R500	BMS(Brake Management System)	X	X		X		Reset self-learned parameters
Euro IV / Euro V (After 2006)	R500	BMS(Brake management system ABS E)	X	X		X	X	
Euro IV / Euro V (After 2006)	R500	BMS(Knorr-Bremse_BMS5.0_4x2)	X	X		X	X	

Exhaustion Standard	Model	System	ECU INFO	DTC	DTC Freeze	Data List	Actuations	Spec. Func.
Euro IV / Euro V (After 2006)	R500	BMS(Knorr-Bremse_BMS5.0_6x2 6x4)	X	X		X	X	
Euro IV / Euro V (After 2006)	R500	BMS(Knorr-Bremse_BMS5.0_8x2)	X	X		X	X	
Euro IV / Euro V (After 2006)	R500	BWS(Preparation system)	X	X				
Euro IV / Euro V (After 2006)	R500	CCS(Climate control system)	X	X		X	X	
Euro IV / Euro V (After 2006)	R500	COO(Coordinator)	X	X		X		
Euro IV / Euro V (After 2006)	R500	COO(Coordinator module)	X	X				
Euro IV / Euro V (After 2006)	R500	CSS(Collision safety system)	X	X				
Euro IV / Euro V (After 2006)	R500	DAS(Adaptive Cruise Control)		X				
Euro IV / Euro V (After 2006)	R500	DIS(Adaptive Cruise Control)	X	X				
Euro IV / Euro V (After 2006)	R500	EEC(Exhaust Gas Treatment)	X	X		X	X	
Euro IV / Euro V (After 2006)	R500	EMS S6/S7(Engine Management System)	X	X		X	X	SCR warning light reset
Euro IV / Euro V (After 2006)	R500	EMS S8(Engine Management System)	X	X		X	X	
Euro IV / Euro V (After 2006)	R500	GMS(Gearbox Control System)	X	X		X	X	
Euro IV / Euro V (After 2006)	R500	ICL1(Instrument Cluster)	X	X		X	X	
Euro IV / Euro V (After 2006)	R500	ICL2(Instrument Cluster)	X	X		X	X	
Euro IV / Euro V (After 2006)	R500	LDW(Monitor traffic lane)	X	X				
Euro IV / Euro V (After 2006)	R500	LAS(Lock and alarm system)	X	X				
Euro IV / Euro V (After 2006)	R500	LAS(Lock and alarm system)	X	X				
Euro IV / Euro V (After 2006)	R500	RET(Retarder)	X	X		X	X	
Euro IV / Euro V (After 2006)	R500	SMS(Suspension Control System)	X	X		X		
Euro IV / Euro V (After 2006)	R500	SMS(Wabco_SMS CAN 2)	X	X		X		Calibration at normal level Level sensor calibration Pressure sensor calibration
Euro IV / Euro V (After 2006)	R500	TCO(Tachograph)	X	X				
Euro IV / Euro V (After 2006)	R500	DTCO(DTCO Tachograph)	X	X				
Euro IV / Euro V (After 2006)	R500	MTCO(MTCO Tachograph)	X	X				
Euro IV / Euro V (After 2006)	R500	VIS(Visibility System)	X	X		X		
Euro IV / Euro V (After 2006)	R500	VIS(Visibility System)	X	X		X	X	
Euro IV / Euro V (After 2006)	R500	CTS(Clock and Time System)		X				
Euro IV / Euro V (After 2006)	R500	AUS(Audio system)		X				
Euro IV / Euro V (After 2006)	R500	TPM(Tires pressure Monitoring System)		X				
Euro IV / Euro V (After 2006)	R500	RTI(Road Transport informatics)		X				
Euro IV / Euro V (After 2006)	R500	WTA(Auxiliary heating system water-to-air)	X	X				
Euro IV / Euro V (After 2006)	R530	APS(Compressed Air Supply)	X	X		X		Resetting air meter
Euro IV / Euro V (After 2006)	R530	ATA(Auxiliary heating system air-to-air)	X	X		X		
Euro IV / Euro V (After 2006)	R530	AWD(All-Wheel Drive)		X				
Euro IV / Euro V (After 2006)	R530	BCS(Bus chassis system)	X	X		X		
Euro IV / Euro V (After 2006)	R530	BMS(Brake Management System)	X	X		X		Reset self-learned parameters
Euro IV / Euro V (After 2006)	R530	BMS(Brake management system ABS E)	X	X		X	X	
Euro IV / Euro V (After 2006)	R530	BMS(Knorr-Bremse_BMS5.0_4x2)	X	X		X	X	
Euro IV / Euro V (After 2006)	R530	BMS(Knorr-Bremse_BMS5.0_6x2 6x4)	X	X		X	X	
Euro IV / Euro V (After 2006)	R530	BMS(Knorr-Bremse_BMS5.0_8x2)	X	X		X	X	
Euro IV / Euro V (After 2006)	R530	BWS(Preparation system)	X	X				
Euro IV / Euro V (After 2006)	R530	CCS(Climate control system)	X	X		X	X	
Euro IV / Euro V (After 2006)	R530	COO(Coordinator)	X	X		X		
Euro IV / Euro V (After 2006)	R530	COO(Coordinator module)	X	X				
Euro IV / Euro V (After 2006)	R530	CSS(Collision safety system)	X	X				
Euro IV / Euro V (After 2006)	R530	DAS(Adaptive Cruise Control)		X				
Euro IV / Euro V (After 2006)	R530	DIS(Adaptive Cruise Control)	X	X				
Euro IV / Euro V (After 2006)	R530	EEC(Exhaust Gas Treatment)	X	X		X	X	
Euro IV / Euro V (After 2006)	R530	EMS S6/S7(Engine Management System)	X	X		X	X	SCR warning light reset
Euro IV / Euro V (After 2006)	R530	EMS S8(Engine Management System)	X	X		X	X	
Euro IV / Euro V (After 2006)	R530	GMS(Gearbox Control System)	X	X		X	X	
Euro IV / Euro V (After 2006)	R530	ICL1(Instrument Cluster)	X	X		X	X	
Euro IV / Euro V (After 2006)	R530	ICL2(Instrument Cluster)	X	X		X	X	
Euro IV / Euro V (After 2006)	R530	LDW(Monitor traffic lane)	X	X				
Euro IV / Euro V (After 2006)	R530	LAS(Lock and alarm system)	X	X				
Euro IV / Euro V (After 2006)	R530	LAS(Lock and alarm system)	X	X				
Euro IV / Euro V (After 2006)	R530	RET(Retarder)	X	X		X	X	
Euro IV / Euro V (After 2006)	R530	SMS(Suspension Control System)	X	X		X		
Euro IV / Euro V (After 2006)	R530	SMS(Wabco_SMS CAN 2)	X	X		X		Calibration at normal level Level sensor calibration Pressure sensor calibration
Euro IV / Euro V (After 2006)	R530	TCO(Tachograph)	X	X				
Euro IV / Euro V (After 2006)	R530	DTCO(DTCO Tachograph)	X	X				
Euro IV / Euro V (After 2006)	R530	MTCO(MTCO Tachograph)	X	X				
Euro IV / Euro V (After 2006)	R530	VIS(Visibility System)	X	X		X		
Euro IV / Euro V (After 2006)	R530	VIS(Visibility System)	X	X		X	X	

Exhaustion Standard	Model	System	ECU INFO	DTC	DTC Freeze	Data List	Actuations	Spec. Func.
Euro IV / Euro V (After 2006)	R530	CTS(Clock and Time System)		X				
Euro IV / Euro V (After 2006)	R530	AUS(Audio system)		X				
Euro IV / Euro V (After 2006)	R530	TPM(Tires pressure Monitoring System)		X				
Euro IV / Euro V (After 2006)	R530	RTI(Road Transport informatics)		X				
Euro IV / Euro V (After 2006)	R530	WTA(Auxiliary heating system water-to-air)	X	X				
Euro IV / Euro V (After 2006)	R560	APS(Compressed Air Supply)	X	X		X		Resetting air meter
Euro IV / Euro V (After 2006)	R560	ATA(Auxiliary heating system air-to-air)	X	X		X		
Euro IV / Euro V (After 2006)	R560	AWD(All-Wheel Drive)		X				
Euro IV / Euro V (After 2006)	R560	BCS(Bus chassis system)	X	X		X		
Euro IV / Euro V (After 2006)	R560	BMS(Brake Management System)	X	X		X		Reset self-learned parameters
Euro IV / Euro V (After 2006)	R560	BMS(Brake management system ABS E)	X	X		X	X	
Euro IV / Euro V (After 2006)	R560	BMS(Knorr-Bremse_BMS5.0_4x2)	X	X		X	X	
Euro IV / Euro V (After 2006)	R560	BMS(Knorr-Bremse_BMS5.0_6x2 6x4)	X	X		X	X	
Euro IV / Euro V (After 2006)	R560	BMS(Knorr-Bremse_BMS5.0_8x2)	X	X		X	X	
Euro IV / Euro V (After 2006)	R560	BWS(Preparation system)	X	X				
Euro IV / Euro V (After 2006)	R560	CCS(Climate control system)	X	X		X	X	
Euro IV / Euro V (After 2006)	R560	COO(Coordinator)	X	X		X		
Euro IV / Euro V (After 2006)	R560	COO(Coordinator module)	X	X				
Euro IV / Euro V (After 2006)	R560	CSS(Collision safety system)	X	X				
Euro IV / Euro V (After 2006)	R560	DAS(Adaptive Cruise Control)		X				
Euro IV / Euro V (After 2006)	R560	DIS(Adaptive Cruise Control)	X	X				
Euro IV / Euro V (After 2006)	R560	EEC(Exhaust Gas Treatment)	X	X		X	X	
Euro IV / Euro V (After 2006)	R560	EMS S6/S7(Engine Management System)	X	X		X	X	SCR warning light reset
Euro IV / Euro V (After 2006)	R560	EMS S8(Engine Management System)	X	X		X	X	
Euro IV / Euro V (After 2006)	R560	GMS(Gearbox Control System)	X	X		X	X	
Euro IV / Euro V (After 2006)	R560	ICL1(Instrument Cluster)	X	X		X	X	
Euro IV / Euro V (After 2006)	R560	ICL2(Instrument Cluster)	X	X		X	X	
Euro IV / Euro V (After 2006)	R560	LDW(Monitor traffic lane)	X	X				
Euro IV / Euro V (After 2006)	R560	LAS(Lock and alarm system)	X	X				
Euro IV / Euro V (After 2006)	R560	LAS(Lock and alarm system)	X	X				
Euro IV / Euro V (After 2006)	R560	RET(Retarder)	X	X		X	X	
Euro IV / Euro V (After 2006)	R560	SMS(Suspension Control System)	X	X		X		
Euro IV / Euro V (After 2006)	R560	SMS(Wabco_SMS CAN 2)	X	X		X		Calibration at normal level Level sensor calibration Pressure sensor calibration
Euro IV / Euro V (After 2006)	R560	TCO(Tachograph)	X	X				
Euro IV / Euro V (After 2006)	R560	DTCO(DTCO Tachograph)	X	X				
Euro IV / Euro V (After 2006)	R560	MTCO(MTCO Tachograph)	X	X				
Euro IV / Euro V (After 2006)	R560	VIS(Visibility System)	X	X		X		
Euro IV / Euro V (After 2006)	R560	VIS(Visibility System)	X	X		X	X	
Euro IV / Euro V (After 2006)	R560	CTS(Clock and Time System)		X				
Euro IV / Euro V (After 2006)	R560	AUS(Audio system)		X				
Euro IV / Euro V (After 2006)	R560	TPM(Tires pressure Monitoring System)		X				
Euro IV / Euro V (After 2006)	R560	RTI(Road Transport informatics)		X				
Euro IV / Euro V (After 2006)	R560	WTA(Auxiliary heating system water-to-air)	X	X				
Euro IV / Euro V (After 2006)	R580	APS(Compressed Air Supply)	X	X		X		Resetting air meter
Euro IV / Euro V (After 2006)	R580	ATA(Auxiliary heating system air-to-air)	X	X		X		
Euro IV / Euro V (After 2006)	R580	AWD(All-Wheel Drive)		X				
Euro IV / Euro V (After 2006)	R580	BCS(Bus chassis system)	X	X		X		
Euro IV / Euro V (After 2006)	R580	BMS(Brake Management System)	X	X		X		Reset self-learned parameters
Euro IV / Euro V (After 2006)	R580	BMS(Brake management system ABS E)	X	X		X	X	
Euro IV / Euro V (After 2006)	R580	BMS(Knorr-Bremse_BMS5.0_4x2)	X	X		X	X	
Euro IV / Euro V (After 2006)	R580	BMS(Knorr-Bremse_BMS5.0_6x2 6x4)	X	X		X	X	
Euro IV / Euro V (After 2006)	R580	BMS(Knorr-Bremse_BMS5.0_8x2)	X	X		X	X	
Euro IV / Euro V (After 2006)	R580	BWS(Preparation system)	X	X				
Euro IV / Euro V (After 2006)	R580	CCS(Climate control system)	X	X		X	X	
Euro IV / Euro V (After 2006)	R580	COO(Coordinator)	X	X		X		
Euro IV / Euro V (After 2006)	R580	COO(Coordinator module)	X	X				
Euro IV / Euro V (After 2006)	R580	CSS(Collision safety system)	X	X				
Euro IV / Euro V (After 2006)	R580	DAS(Adaptive Cruise Control)		X				
Euro IV / Euro V (After 2006)	R580	DIS(Adaptive Cruise Control)	X	X				
Euro IV / Euro V (After 2006)	R580	EEC(Exhaust Gas Treatment)	X	X		X	X	
Euro IV / Euro V (After 2006)	R580	EMS S6/S7(Engine Management System)	X	X		X	X	SCR warning light reset
Euro IV / Euro V (After 2006)	R580	EMS S8(Engine Management System)	X	X		X	X	
Euro IV / Euro V (After 2006)	R580	GMS(Gearbox Control System)	X	X		X	X	
Euro IV / Euro V (After 2006)	R580	ICL1(Instrument Cluster)	X	X		X	X	
Euro IV / Euro V (After 2006)	R580	ICL2(Instrument Cluster)	X	X		X	X	
Euro IV / Euro V (After 2006)	R580	LDW(Monitor traffic lane)	X	X				

Exhaustion Standard	Model	System	ECU INFO	DTC	DTC Freeze	Data List	Actuations	Spec. Func.
Euro IV / Euro V (After 2006)	R580	LAS(Lock and alarm system)	X	X				
Euro IV / Euro V (After 2006)	R580	LAS(Lock and alarm system)	X	X				
Euro IV / Euro V (After 2006)	R580	RET(Retarder)	X	X		X	X	
Euro IV / Euro V (After 2006)	R580	SMS(Suspension Control System)	X	X		X		
Euro IV / Euro V (After 2006)	R580	SMS(Wabco_SMS CAN 2)	X	X		X		Calibration at normal level Level sensor calibration Pressure sensor calibration
Euro IV / Euro V (After 2006)	R580	TCO(Tachograph)	X	X				
Euro IV / Euro V (After 2006)	R580	DTCO(DTCO Tachograph)	X	X				
Euro IV / Euro V (After 2006)	R580	MTCO(MTCO Tachograph)	X	X				
Euro IV / Euro V (After 2006)	R580	VIS(Visibility System)	X	X		X		
Euro IV / Euro V (After 2006)	R580	VIS(Visibility System)	X	X		X	X	
Euro IV / Euro V (After 2006)	R580	CTS(Clock and Time System)		X				
Euro IV / Euro V (After 2006)	R580	AUS(Audio system)		X				
Euro IV / Euro V (After 2006)	R580	TPM(Tires pressure Monitoring System)		X				
Euro IV / Euro V (After 2006)	R580	RTI(Road Transport informatics)		X				
Euro IV / Euro V (After 2006)	R580	WTA(Auxiliary heating system water-to-air)	X	X				
Euro IV / Euro V (After 2006)	R620	APS(Compressed Air Supply)	X	X		X		Resetting air meter
Euro IV / Euro V (After 2006)	R620	ATA(Auxiliary heating system air-to-air)	X	X		X		
Euro IV / Euro V (After 2006)	R620	AWD(All-Wheel Drive)		X				
Euro IV / Euro V (After 2006)	R620	BCS(Bus chassis system)	X	X		X		
Euro IV / Euro V (After 2006)	R620	BMS(Brake Management System)	X	X		X		Reset self-learned parameters
Euro IV / Euro V (After 2006)	R620	BMS(Brake management syatem ABS E)	X	X		X	X	
Euro IV / Euro V (After 2006)	R620	BMS(Knorr-Bremse_BMS5.0_4x2)	X	X		X	X	
Euro IV / Euro V (After 2006)	R620	BMS(Knorr-Bremse_BMS5.0_6x2 6x4)	X	X		X	X	
Euro IV / Euro V (After 2006)	R620	BMS(Knorr-Bremse_BMS5.0_8x2)	X	X		X	X	
Euro IV / Euro V (After 2006)	R620	BWS(Preparation system)	X	X				
Euro IV / Euro V (After 2006)	R620	CCS(Climate control system)	X	X		X	X	
Euro IV / Euro V (After 2006)	R620	COO(Coordinator)	X	X		X		
Euro IV / Euro V (After 2006)	R620	COO(Coordinator module)	X	X				
Euro IV / Euro V (After 2006)	R620	CSS(Collision safety system)	X	X				
Euro IV / Euro V (After 2006)	R620	DAS(Adaptive Cruise Control)		X				
Euro IV / Euro V (After 2006)	R620	DIS(Adaptive Cruise Control)	X	X				
Euro IV / Euro V (After 2006)	R620	EEC(Exhaust Gas Treatment)	X	X		X	X	
Euro IV / Euro V (After 2006)	R620	EMS S6/S7(Engine Management System)	X	X		X	X	SCR warning light reset
Euro IV / Euro V (After 2006)	R620	EMS S8(Engine Management System)	X	X		X	X	
Euro IV / Euro V (After 2006)	R620	GMS(Gearbox Control System)	X	X		X	X	
Euro IV / Euro V (After 2006)	R620	ICL1(Instrument Cluster)	X	X		X	X	
Euro IV / Euro V (After 2006)	R620	ICL2(Instrument Cluster)	X	X		X	X	
Euro IV / Euro V (After 2006)	R620	LDW(Monitor traffic lane)	X	X				
Euro IV / Euro V (After 2006)	R620	LAS(Lock and alarm system)	X	X				
Euro IV / Euro V (After 2006)	R620	LAS(Lock and alarm system)	X	X				
Euro IV / Euro V (After 2006)	R620	RET(Retarder)	X	X		X	X	
Euro IV / Euro V (After 2006)	R620	SMS(Suspension Control System)	X	X		X		
Euro IV / Euro V (After 2006)	R620	SMS(Wabco_SMS CAN 2)	X	X		X		Calibration at normal level Level sensor calibration Pressure sensor calibration
Euro IV / Euro V (After 2006)	R620	TCO(Tachograph)	X	X				
Euro IV / Euro V (After 2006)	R620	DTCO(DTCO Tachograph)	X	X				
Euro IV / Euro V (After 2006)	R620	MTCO(MTCO Tachograph)	X	X				
Euro IV / Euro V (After 2006)	R620	VIS(Visibility System)	X	X		X		
Euro IV / Euro V (After 2006)	R620	VIS(Visibility System)	X	X		X	X	
Euro IV / Euro V (After 2006)	R620	CTS(Clock and Time System)		X				
Euro IV / Euro V (After 2006)	R620	AUS(Audio system)		X				
Euro IV / Euro V (After 2006)	R620	TPM(Tires pressure Monitoring System)		X				
Euro IV / Euro V (After 2006)	R620	RTI(Road Transport informatics)		X				
Euro IV / Euro V (After 2006)	R620	WTA(Auxiliary heating system water-to-air)	X	X				
Euro IV / Euro V (After 2006)	R730	APS(Compressed Air Supply)	X	X		X		Resetting air meter
Euro IV / Euro V (After 2006)	R730	ATA(Auxiliary heating system air-to-air)	X	X		X		
Euro IV / Euro V (After 2006)	R730	AWD(All-Wheel Drive)		X				
Euro IV / Euro V (After 2006)	R730	BCS(Bus chassis system)	X	X		X		
Euro IV / Euro V (After 2006)	R730	BMS(Brake Management System)	X	X		X		Reset self-learned parameters
Euro IV / Euro V (After 2006)	R730	BMS(Brake management system ABS E)	X	X		X	X	
Euro IV / Euro V (After 2006)	R730	BMS(Knorr-Bremse_BMS5.0_4x2)	X	X		X	X	
Euro IV / Euro V (After 2006)	R730	BMS(Knorr-Bremse_BMS5.0_6x2 6x4)	X	X		X	X	
Euro IV / Euro V (After 2006)	R730	BMS(Knorr-Bremse_BMS5.0_8x2)	X	X		X	X	
Euro IV / Euro V (After 2006)	R730	BWS(Preparation system)	X	X				
Euro IV / Euro V (After 2006)	R730	CCS(Climate control system)	X	X		X	X	

Exhaustion Standard	Model	System	ECU INFO	DTC	DTC Freeze	Data List	Actuations	Spec. Func.
Euro IV / Euro V (After 2006)	R730	COO(Coordinator)	X	X		X		
Euro IV / Euro V (After 2006)	R730	COO(Coordinator module)	X	X				
Euro IV / Euro V (After 2006)	R730	CSS(Collision safety system)	X	X				
Euro IV / Euro V (After 2006)	R730	DAS(Adaptive Cruise Control)		X				
Euro IV / Euro V (After 2006)	R730	DIS(Adaptive Cruise Control)	X	X				
Euro IV / Euro V (After 2006)	R730	EEC(Exhaust Gas Treatment)	X	X		X	X	
Euro IV / Euro V (After 2006)	R730	EMS S6/S7(Engine Management System)	X	X		X	X	SCR warning light reset
Euro IV / Euro V (After 2006)	R730	EMS S8(Engine Management System)	X	X		X	X	
Euro IV / Euro V (After 2006)	R730	GMS(Gearbox Control System)	X	X		X	X	
Euro IV / Euro V (After 2006)	R730	ICL1(Instrument Cluster)	X	X		X	X	
Euro IV / Euro V (After 2006)	R730	ICL2(Instrument Cluster)	X	X		X	X	
Euro IV / Euro V (After 2006)	R730	LDW(Monitor traffic lane)	X	X				
Euro IV / Euro V (After 2006)	R730	LAS(Lock and alarm system)	X	X				
Euro IV / Euro V (After 2006)	R730	LAS(Lock and alarm system)	X	X				
Euro IV / Euro V (After 2006)	R730	RET(Retarder)	X	X		X	X	
Euro IV / Euro V (After 2006)	R730	SMS(Suspension Control System)	X	X		X		
Euro IV / Euro V (After 2006)	R730	SMS(Wabco_SMS CAN 2)	X	X		X		Calibration at normal level Level sensor calibration Pressure sensor calibration
Euro IV / Euro V (After 2006)	R730	TCO(Tachograph)	X	X				
Euro IV / Euro V (After 2006)	R730	DTCO(DTCO Tachograph)	X	X				
Euro IV / Euro V (After 2006)	R730	MTCO(MTCO Tachograph)	X	X				
Euro IV / Euro V (After 2006)	R730	VIS(Visibility System)	X	X		X		
Euro IV / Euro V (After 2006)	R730	VIS(Visibility System)	X	X		X	X	
Euro IV / Euro V (After 2006)	R730	CTS(Clock and Time System)		X				
Euro IV / Euro V (After 2006)	R730	AUS(Audio system)		X				
Euro IV / Euro V (After 2006)	R730	TPM(Tires pressure Monitoring System)		X				
Euro IV / Euro V (After 2006)	R730	RTI(Road Transport informatics)		X				
Euro IV / Euro V (After 2006)	R730	WTA(Auxiliary heating system water-to-air)	X	X				
Euro IV / Euro V (After 2006)	K series	APS(Compressed Air Supply)	X	X		X		Resetting air meter
Euro IV / Euro V (After 2006)	K series	BCS(Bus chassis system)	X	X		X		
Euro IV / Euro V (After 2006)	K series	BMS(Brake Management System)	X	X		X		Reset self-learned parameters
Euro IV / Euro V (After 2006)	K series	COO(Coordinator)	X	X		X		
Euro IV / Euro V (After 2006)	K series	EEC(Exhaust Gas Treatment)	X	X		X		
Euro IV / Euro V (After 2006)	K series	EMS(Engine Management System)	X	X		X		
Euro IV / Euro V (After 2006)	K series	GMS(Gearbox Control System)	X	X				
Euro IV / Euro V (After 2006)	K series	ICL(Instrument Cluster)	X	X				
Euro IV / Euro V (After 2006)	K series	LAS(Lock and alarm system)	X	X				
Euro IV / Euro V (After 2006)	K series	SMS(Suspension Control System)	X	X		X		
Euro IV / Euro V (After 2006)	K series	TCO(Tachograph)	X	X				
Euro IV / Euro V (After 2006)	K series	VIS(Visibility System)	X	X		X		
Euro II / Euro III (Before 2006)	4 series	ABS(anti-lock brake system)	X	X				
Euro II / Euro III (Before 2006)	4 series	Bosch PDE EDC MS 6.2	X	X		X		
Euro II / Euro III (Before 2006)	4 series	Bosch EDC MS 5	X	X		X		
Euro II / Euro III (Before 2006)	4 series	Bosch HPI EDC S 6	X	X		X		
Euro II / Euro III (Before 2006)	4 series	Knorr EBS2.2	X	X		X		
Euro II / Euro III (Before 2006)	4 series	Wabco ELC Generation 1	X	X				
Euro II / Euro III (Before 2006)	4 series	Wabco ELC Generation 2	X	X				
Euro II / Euro III (Before 2006)	3 series	Wabco D	X	X				
Euro II / Euro III (Before 2006)	114	Wabco D	X	X				
Euro II / Euro III (Before 2006)	114	Bosch PDE EDC MS 6.2	X	X		X		
Euro II / Euro III (Before 2006)	114	Knorr EBS2.2	X	X		X		
Euro II / Euro III (Before 2006)	114	Wabco ELC Generation 1	X	X				
Euro II / Euro III (Before 2006)	114	Wabco ELC Generation 2	X	X				
Euro II / Euro III (Before 2006)	124	Wabco D	X	X				
Euro II / Euro III (Before 2006)	124	Bosch PDE EDC MS 6.2	X	X		X		
Euro II / Euro III (Before 2006)	124	Bosch EDC MS 5	X	X		X		
Euro II / Euro III (Before 2006)	124	Bosch HPI EDC S 6	X	X		X		
Euro II / Euro III (Before 2006)	124	Knorr EBS2.2	X	X		X		
Euro II / Euro III (Before 2006)	124	Wabco ELC Generation 1	X	X				
Euro II / Euro III (Before 2006)	124	Wabco ELC Generation 2	X	X				
Euro II / Euro III (Before 2006)	144	Wabco D	X	X				
Euro II / Euro III (Before 2006)	144	Bosch EDC MS 5	X	X		X		
Euro II / Euro III (Before 2006)	144	Knorr EBS2.2	X	X		X		
Euro II / Euro III (Before 2006)	144	Wabco ELC Generation 1	X	X				
Euro II / Euro III (Before 2006)	144	Wabco ELC Generation 2	X	X				
Euro II / Euro III (Before 2006)	164	Wabco D	X	X				
Euro II / Euro III (Before 2006)	164	Bosch PDE EDC MS 6.2	X	X		X		

Exhaustion Standard	Model	System	ECU INFO	DTC	DTC Freeze	Data List	Actuations	Spec. Func.
Euro II / Euro III (Before 2006)	164	Knorr EBS2.2	X	X		X		
Euro II / Euro III (Before 2006)	164	Wabco ELC Generation 1	X	X				
Euro II / Euro III (Before 2006)	164	Wabco ELC Generation 2	X	X				
Euro II / Euro III (Before 2006)	94	Wabco D	X	X				
Euro II / Euro III (Before 2006)	94	Bosch EDC MS 5	X	X		X		
Euro II / Euro III (Before 2006)	94	Knorr EBS2.2	X	X		X		
Euro II / Euro III (Before 2006)	94	Wabco ELC Generation 1	X	X				
Euro II / Euro III (Before 2006)	94	Wabco ELC Generation 2	X	X				