



MaxiSysCV_Hino_Bus_V2.20 Function List (Note:For reference only)

NOTES:

- This function is supported. ※ This function may be supported, which depends on the actual condition of the vehicle.
 - This function is not supported. ▲ This function is the new feature in this version.
- As for special function please refer to the special function table.

Vehicle Categories	Area	System Name	ECU Info	Read Codes	Erase Codes	Freeze Frame	Live Data	Active Test	Special Function
Bus/Coach, Heavy	Japan ADG	Brake(WABCO ABS)	●	●	●	○	●	●	
Bus/Coach, Heavy	Japan ADG	Engine	●	●	●	●	●	●	0001, 0002, 0003, 0004, 0005, 0006, 0007, 0008, 0009, 0010, 0011, 0012, 0016
Bus/Coach, Heavy	Japan ADG	Idling stop system	●	●	●	○	●	●	
Bus/Coach, Heavy	Japan ADG	Kneeling	●	●	●	○	●	●	
Bus/Coach, Heavy	Japan ADG	SRS (Airbag)	●	●	●	○	○	○	
Bus/Coach, Heavy	Japan ADG	Suspension	●	●	●	○	●	○	
Bus/Coach, Heavy	Japan ADG	Transmission	●	●	●	○	●	○	
Bus/Coach, Heavy	Japan BDG/BKG/PKG/PDG/BJG/ACG	Battery	●	●	●	●	●	○	
Bus/Coach, Heavy	Japan BDG/BKG/PKG/PDG/BJG/ACG	Brake(WABCO ABS)	●	●	●	○	●	●	
Bus/Coach, Heavy	Japan BDG/BKG/PKG/PDG/BJG/ACG	Engine	●	●	●	●	●	●	0001, 0002, 0003, 0004, 0005, 0006, 0007, 0008, 0009, 0010, 0011, 0012, 0016
Bus/Coach, Heavy	Japan BDG/BKG/PKG/PDG/BJG/ACG	Hybrid	●	●	●	●	●	●	
Bus/Coach, Heavy	Japan BDG/BKG/PKG/PDG/BJG/ACG	Idling stop system	●	●	●	○	●	●	
Bus/Coach, Heavy	Japan BDG/BKG/PKG/PDG/BJG/ACG	Inverter	●	●	●	●	●	○	
Bus/Coach, Heavy	Japan BDG/BKG/PKG/PDG/BJG/ACG	Kneeling	●	●	●	○	●	●	
Bus/Coach, Heavy	Japan BDG/BKG/PKG/PDG/BJG/ACG	SRS (Airbag)	●	●	●	○	○	○	
Bus/Coach, Heavy	Japan BDG/BKG/PKG/PDG/BJG/ACG	Scanning cruise/LDWS/PCS	●	●	●	○	●	●	0021, 0022, 0023, 0024, 0025, 0026, 0027
Bus/Coach, Heavy	Japan BDG/BKG/PKG/PDG/BJG/ACG	Suspension	●	●	●	○	●	○	
Bus/Coach, Heavy	Japan BDG/BKG/PKG/PDG/BJG/ACG	Transmission	●	●	●	○	●	○	
Bus/Coach, Heavy	Japan BDG/BKG/PKG/PDG/BJG/ACG	VCS (Vehicle Control System)	●	●	●	●	●	●	0009, 0033,
Bus/Coach, Heavy	Japan KL/VM/PJ	Engine	●	●	●	○	●	●	
Bus/Coach, Heavy	Japan LDG/LKG/LJG/QPG/QRG/QQG	Brake(WABCO ABS)	●	●	●	○	●	●	
Bus/Coach, Heavy	Japan LDG/LKG/LJG/QPG/QRG/QQG	Brake(WABCO EBS)	●	●	●	○	●	●	0017, 0018, 0019, 0020,
Bus/Coach, Heavy	Japan LDG/LKG/LJG/QPG/QRG/QQG	DCU (Urea SCR)	●	●	●	○	●	●	0028, 0029
Bus/Coach, Heavy	Japan LDG/LKG/LJG/QPG/QRG/QQG	Engine	●	●	●	●	●	●	0001, 0002, 0003, 0004, 0005, 0006, 0007, 0008, 0009, 0010, 0012
Bus/Coach, Heavy	Japan LDG/LKG/LJG/QPG/QRG/QQG	Hybrid	●	●	●	●	●	●	
Bus/Coach, Heavy	Japan LDG/LKG/LJG/QPG/QRG/QQG	Kneeling	●	●	●	○	●	●	

Vehicle Categories	Area	System Name	ECU Info	Read Codes	Erase Codes	Freeze Frame	Live Data	Active Test	Special Function
Bus/Coach, Heavy	Japan LDG/LKG/LJG/QPG/QRG/QQG	Meter	●	●	●	○	●	○	
Bus/Coach, Heavy	Japan LDG/LKG/LJG/QPG/QRG/QQG	SRS (Airbag)	●	●	●	○	○	○	
Bus/Coach, Heavy	Japan LDG/LKG/LJG/QPG/QRG/QQG	Scanning cruise/LDWS/PCS	●	●	●	○	●	●	0021, 0022, 0023, 0024, 0025, 0026, 0027
Bus/Coach, Heavy	Japan LDG/LKG/LJG/QPG/QRG/QQG	Suspension	●	●	●	○	●	○	
Bus/Coach, Heavy	Japan LDG/LKG/LJG/QPG/QRG/QQG	Transmission	●	●	●	○	●	○	
Bus/Coach, Heavy	Japan LDG/LKG/LJG/QPG/QRG/QQG	VCS (Vehicle Control System)	●	●	●	●	●	●	0009, 0033
Bus/Coach, Medium	Japan BDG/BKG/PDG/PKG	Brake (DENSO ABS)	●	●	●	○	●	●	
Bus/Coach, Medium	Japan BDG/BKG/PDG/PKG	Brake (WABCO ABS)	●	●	●	○	●	●	
Bus/Coach, Medium	Japan BDG/BKG/PDG/PKG	Engine	●	●	●	●	●	●	0001, 0002, 0003, 0004, 0005, 0006, 0007, 0008, 0009, 0010, 0011, 0012, 0016
Bus/Coach, Medium	Japan BDG/BKG/PDG/PKG	Idling stop system	●	●	●	○	●	●	
Bus/Coach, Medium	Japan BDG/BKG/PDG/PKG	Transmission	●	●	●	○	●	○	
Bus/Coach, Medium	Japan KK/KL	Brake (WABCO ABS)	●	●	●	○	●	●	
Bus/Coach, Medium	Japan KK/KL	Engine	●	●	●	○	●	●	
Bus/Coach, Medium	Japan LDG/LKG/SKG/SDG/LNG	Brake (DENSO ABS)	●	●	●	○	●	●	
Bus/Coach, Medium	Japan LDG/LKG/SKG/SDG/LNG	Brake (WABCO ABS)	●	●	●	○	●	●	
Bus/Coach, Medium	Japan LDG/LKG/SKG/SDG/LNG	Engine	●	●	●	●	●	●	0001, 0002, 0003, 0004, 0005, 0006, 0007, 0008, 0009, 0010, 0012
Bus/Coach, Medium	Japan LDG/LKG/SKG/SDG/LNG	Transmission	●	●	●	○	●	○	
Bus/Coach, Medium	Japan LDG/LKG/SKG/SDG/LNG	VCS (Vehicle Control System)	●	●	●	●	●	●	0009, 0033
Bus/Coach, Medium	Japan PK/PB/PA	Brake (WABCO ABS)	●	●	●	○	●	●	
Bus/Coach, Medium	Japan PK/PB/PA	Engine	●	●	●	●	●	●	0001, 0002, 0003, 0004, 0005, 0006, 0007, 0008, 0009, 0010, 0011, 0012, 0016
Bus/Coach, Medium	Japan PK/PB/PA	Transmission	●	●	●	○	●	○	
Bus/Coach, Light	Japan ADG	Brake (DENSO ABS)	●	●	●	○	●	●	
Bus/Coach, Light	Japan ADG	Engine	●	●	●	●	●	●	0001, 0002, 0003, 0004, 0005, 0006, 0007, 0008, 0009, 0010, 0011, 0012
Bus/Coach, Light	Japan ADG	Idling stop system	●	●	●	○	●	●	
Bus/Coach, Light	Japan ADG	Transmission	●	●	●	○	●	○	
Bus/Coach, Light	Japan BDG/PDG/NBG	Brake (DENSO ABS)	●	●	●	○	●	●	
Bus/Coach, Light	Japan BDG/PDG/NBG	Engine	●	●	●	●	●	●	0001, 0002, 0003, 0004, 0005, 0006, 0007, 0008, 0009, 0010, 0011, 0012, 0013, 0014, 0015
Bus/Coach, Light	Japan BDG/PDG/NBG	Idling stop system	●	●	●	○	●	●	
Bus/Coach, Light	Japan BDG/PDG/NBG	Transmission	●	●	●	○	●	○	
Bus/Coach, Light	Japan KK	Engine	●	●	●	●	●	○	
Bus/Coach, Light	Japan KK	Transmission	●	●	●	○	●	○	

Vehicle Categories	Area	System Name	ECU Info	Read Codes	Erase Codes	Freeze Frame	Live Data	Active Test	Special Function
Bus/Coach, Light	Japan PB/LD	Engine	●	●	●	●	●	●	0001, 0002, 0003, 0004, 0005, 0006, 0007, 0008, 0009, 0010, 0011, 0012
Bus/Coach, Light	Japan PB/LD	Transmission	●	●	●	○	●	○	
Bus/Coach, Light	Japan SDG/SKG	Brake (DENSO ABS)	●	●	●	○	●	●	
Bus/Coach, Light	Japan SDG/SKG	Engine	●	●	●	●	●	●	0001, 0002, 0003, 0004, 0005, 0006, 0007, 0008, 0009, 0010, 0012, 0013, 0014, 0015
Bus/Coach, Light	Japan SDG/SKG	Transmission	●	●	●	○	●	○	
Bus/Coach, Light	Japan SDG/SKG	VCS (Vehicle Control System)	●	●	●	●	●	●	0009, 0033,
Industrial Engine	EURO3	Engine	●	●	●	●	●	●	0001, 0002, 0003, 0004, 0005, 0006, 0007, 0008, 0009, 0010, 0011, 0012
Industrial Engine	EURO4	DCU (Urea SCR)	●	●	●	○	●	●	0028, 0029
Industrial Engine	EURO4	Engine	●	●	●	●	●	●	0001, 0002, 0003, 0004, 0005, 0006, 0007, 0008, 0009, 0010, 0011, 0012
Industrial Engine	TIER 3 STAGE 3A	Engine	●	●	●	●	●	●	0001, 0002, 0003, 0004, 0005, 0006, 0007, 0008, 0009, 0010, 0011, 0012
Industrial Engine	TIER 4 STAGE 3B	Engine	●	●	●	●	●	●	0001, 0002, 0003, 0004, 0005, 0006, 0007, 0008, 0009, 0010, 0011, 0012
Industrial Engine	TIER 4 STAGE 4	DCU (Urea SCR)	●	●	●	○	●	●	0028, 0029
Industrial Engine	TIER 4 STAGE 4	Engine	●	●	●	●	●	●	0001, 0002, 0003, 0004, 0005, 0006, 0007, 0008, 0009, 0010, 0011, 0012
Retro	Global	Engine	●	●	●	○	●	●	



Specil Function

Index	Specil Function Name	Index	Specil Function Name
0001	DPR check	0002	Accelerator sensor adjustment
0003	Intake air volume check	0004	Fuel leak check
0005	VNT check	0006	EGR check
0007	Deviation learning after pump replacement	0008	Turbocharger check
0009	Change settings of upper limit of vehicle speed	0010	Intake throttle valve check
0011	Pulse EGR check	0012	Common rail pressure check
0013	Intake air volume check	0014	Turbo check
0015	VIN writing	0016	Common rail differential pressure check
0017	VSC learning	0018	Axle modulator check
0019	Proportional relay valve check	0020	Trailer control valve check
0021	PCS operation check	0022	Input of curve radius constant
0023	ECU learning status Display/Delete	0024	Adjustment of millimeter-wave radar beam axis
0025	Initialization of image sensor	0026	Check the operation of driver monitor camera
0027	Optical axis adjustment of laser sensor	0028	Aqueous urea solution addition test
0029	DEF addition test	0030	Adblue addition test
0031	Event log	0032	Key Registration/Delete
0033	ES start	0034	Write auto leveling constant