



MaxiSysCV_Hino_Truck_V2.20 Function List (Note:For reference only)

NOTES:

- This function is supported. ※ This function may be supported, which depends on the actual condition of the vehicle.
 - This function is not supported. ▲ This function is the new feature in this version.
- As for special function please refer to the special function table.

Vehicle Categories	Area	System Name	ECU Info	Read Codes	Erase Codes	Freeze Frame	Live Data	Active Test	Special Function
300 series	Global	Battery	●	●	●	●	●	○	
300 series	Global	Brake	●	●	●	●	●	●	
300 series	Global	Brake (DENSO ABS)	●	●	●	○	●	●	
300 series	Global	Clutch	●	●	●	○	●	●	
300 series	Global	Engine	●	●	●	●	●	●	0001, 0003, 0004, 0005, 0006, 0007, 0013, 0014, 0015,
300 series	Global	Headlight Autoleveling	●	●	●	○	●	●	0034
300 series	Global	Hybrid	●	●	●	●	●	●	
300 series	Global	Idling stop system	●	●	●	○	●	●	
300 series	Global	Immobilizer	●	●	●	○	●	○	0032
300 series	Global	Inverter	●	●	●	●	●	○	
300 series	Global	SRS (Airbag)	●	●	●	○	●	○	
300 series	Global	Transmission	●	●	●	●	●	●	
300 series	Global	VCS (Vehicle Control System)	●	●	●	●	●	●	0009, 0033
300 series	Japan ABG/NBG	Brake	●	●	●	●	●	●	
300 series	Japan ABG/NBG	Brake (DENSO ABS)	●	●	●	○	●	●	
300 series	Japan ABG/NBG	Engine	●	●	●	●	●	●	0001, 0003, 0004, 0005, 0006, 0007, 0013, 0014, 0015
300 series	Japan ABG/NBG	Idling stop system	●	●	●	○	●	●	
300 series	Japan ABG/NBG	Immobilizer	●	●	●	○	●	○	0032
300 series	Japan ABG/NBG	SRS (Airbag)	●	●	●	○	○	○	
300 series	Japan ABG/NBG	SRS (Airbag) (OLD)	●	●	●	○	○	○	
300 series	Japan ABG/NBG	Transmission	●	●	●	○	●	○	
300 series	Japan ABG/NBG	VCS (Vehicle Control System)	●	●	●	●	●	●	0009, 0033
300 series	Japan BDG/BKG	Brake (DENSO ABS)	●	●	●	○	●	●	
300 series	Japan BDG/BKG	Engine	●	●	●	●	●	●	0001, 0003, 0004, 0005, 0006, 0007, 0013, 0014, 0015
300 series	Japan BDG/BKG	Idling stop system	●	●	●	○	●	●	
300 series	Japan BDG/BKG	Immobilizer	●	●	●	○	●	○	0032
300 series	Japan BDG/BKG	SRS (Airbag)	●	●	●	○	○	○	
300 series	Japan BDG/BKG	SRS (Airbag) (OLD)	●	●	●	○	○	○	
300 series	Japan BDG/BKG	Transmission	●	●	●	○	●	○	

Vehicle Categories	Area	System Name	ECU Info	Read Codes	Erase Codes	Freeze Frame	Live Data	Active Test	Special Function
300 series	Japan BJG	Battery	●	●	●	●	●	○	
300 series	Japan BJG	Brake (DENSO ABS)	●	●	●	○	●	●	
300 series	Japan BJG	Engine	●	●	●	●	●	●	0001, 0003, 0004, 0005, 0006, 0007, 0013, 0014, 0015
300 series	Japan BJG	Hybrid	●	●	●	●	●	●	
300 series	Japan BJG	Immobilizer	●	●	●	○	●	○	0032
300 series	Japan BJG	Inverter	●	●	●	●	●	○	
300 series	Japan BJG	SRS (Airbag)	●	●	●	○	○	○	
300 series	Japan BJG	SRS (Airbag) (OLD)	●	●	●	○	○	○	
300 series	Japan BJG	Transmission	●	●	●	○	●	○	
300 series	Japan KK	Engine	●	●	●	●	●	○	
300 series	Japan KK	Transmission	●	●	●	○	●	○	
300 series	Japan PB/VF	Brake (DENSO ABS)	●	●	●	○	●	●	
300 series	Japan PB/VF	Engine	●	●	●	●	●	●	0001
300 series	Japan PB/VF	SRS (Airbag) (OLD)	●	●	●	○	○	○	
300 series	Japan PB/VF	Transmission	●	●	●	○	●	○	
300 series	Japan SJG/SKG/SDG/TQG/TKG	Battery	●	●	●	●	●	○	
300 series	Japan SJG/SKG/SDG/TQG/TKG	Brake	●	●	●	●	●	●	
300 series	Japan SJG/SKG/SDG/TQG/TKG	Engine	●	●	●	●	●	●	0001, 0002, 0003, 0004, 0005, 0006, 0007, 0008, 0009, 0010, 0012, 0013, 0014, 0015
300 series	Japan SJG/SKG/SDG/TQG/TKG	Headlight Autoleveling	●	●	●	○	●	●	0034
300 series	Japan SJG/SKG/SDG/TQG/TKG	Hybrid	●	●	●	●	●	●	
300 series	Japan SJG/SKG/SDG/TQG/TKG	Immobilizer	●	●	●	○	●	○	0032
300 series	Japan SJG/SKG/SDG/TQG/TKG	Inverter	●	●	●	●	●	○	
300 series	Japan SJG/SKG/SDG/TQG/TKG	SRS (Airbag)	●	●	●	○	●	○	
300 series	Japan SJG/SKG/SDG/TQG/TKG	Transmission	●	●	●	●	●	●	
300 series	Japan SJG/SKG/SDG/TQG/TKG	VCS (Vehicle Control System)	●	●	●	●	●	●	0009, 0033
300 series	North America	Battery	●	●	●	●	●	○	
300 series	North America	Brake	●	●	●	●	●	●	
300 series	North America	Brake (DENSO ABS)	●	●	●	○	●	●	
300 series	North America	Clutch	●	●	●	○	●	●	
300 series	North America	DCU (Urea SCR)	●	●	●	○	●	●	0028, 0029
300 series	North America	Engine	●	●	●	●	●	●	0001, 0002, 0003, 0004, 0005, 0006, 0007, 0008, 0009, 0010, 0012
300 series	North America	Hybrid	●	●	●	●	●	●	
300 series	North America	Inverter	●	●	●	●	●	○	
300 series	North America	Transmission	●	●	●	●	●	●	
300 series	North America	VCS (Vehicle Control System)	●	●	●	●	●	●	0009, 0033
500 series	Global	Battery	●	●	●	●	●	○	
500 series	Global	Brake (DENSO ABS)	●	●	●	○	●	●	
500 series	Global	Brake (WABCO ABS)	●	●	●	○	●	●	

Vehicle Categories	Area	System Name	ECU Info	Read Codes	Erase Codes	Freeze Frame	Live Data	Active Test	Special Function
500 series	Global	Engine	●	●	●	●	●	●	0001, 0002, 0003, 0004, 0005, 0006, 0007, 0008, 0009, 0010, 0011, 0012
500 series	Global	Headlight Autoleveling	●	●	●	○	●	●	0034
500 series	Global	Hybrid	●	●	●	●	●	●	
500 series	Global	Immobilizer	●	●	●	○	●	○	0032
500 series	Global	Inverter	●	●	●	●	●	○	
500 series	Global	SRS (Airbag)	●	●	●	○	○	○	
500 series	Global	Scanning cruise/LDWS/PCS	●	●	●	○	●	●	0021, 0022, 0023, 0024, 0025, 0026, 0027
500 series	Global	Suspension	●	●	●	○	●	●	
500 series	Global	Tire pressure monitoring system	●	●	●	○	●	●	
500 series	Global	Transmission	●	●	●	○	●	○	
500 series	Global	VCS (Vehicle Control System)	●	●	●	●	●	●	0009, 0033
500 series	Japan ADG	Brake (DENSO ABS)	●	●	●	○	●	●	
500 series	Japan ADG	Brake (WABCO ABS)	●	●	●	○	●	●	
500 series	Japan ADG	Engine	●	●	●	●	●	●	0001, 0002, 0003, 0004, 0005, 0006, 0007, 0008, 0009, 0010, 0011, 0012
500 series	Japan ADG	Idling stop system	●	●	●	○	●	●	
500 series	Japan ADG	SRS (Airbag)	●	●	●	○	○	○	
500 series	Japan ADG	Scanning cruise/LDWS/PCS	●	●	●	○	●	●	0021, 0022, 0023, 0024, 0025, 0026, 0027
500 series	Japan ADG	Suspension	●	●	●	○	●	●	
500 series	Japan ADG	Transmission	●	●	●	○	●	○	
500 series	Japan BDG/BKG	Brake (DENSO ABS)	●	●	●	○	●	●	
500 series	Japan BDG/BKG	Brake (WABCO ABS)	●	●	●	○	●	●	
500 series	Japan BDG/BKG	Engine	●	●	●	●	●	●	0001, 0002, 0003, 0004, 0005, 0006, 0007, 0008, 0009, 0010, 0011, 0012
500 series	Japan BDG/BKG	Idling stop system	●	●	●	○	●	●	
500 series	Japan BDG/BKG	Immobilizer	●	●	●	○	●	○	0032
500 series	Japan BDG/BKG	SRS (Airbag)	●	●	●	○	○	○	
500 series	Japan BDG/BKG	Scanning cruise/LDWS/PCS	●	●	●	○	●	●	0021, 0022, 0023, 0024, 0025, 0026, 0027

Vehicle Categories	Area	System Name	ECU Info	Read Codes	Erase Codes	Freeze Frame	Live Data	Active Test	Special Function
500 series	Japan BDG/BKG	Suspension	●	●	●	○	●	●	
500 series	Japan BDG/BKG	Transmission	●	●	●	○	●	○	
500 series	Japan BJG	Battery	●	●	●	●	●	○	
500 series	Japan BJG	Brake (DENSO ABS)	●	●	●	○	●	●	
500 series	Japan BJG	Engine	●	●	●	●	●	●	0001, 0002, 0003, 0004, 0005, 0006, 0007, 0008, 0009, 0010, 0011, 0012
500 series	Japan BJG	Hybrid	●	●	●	●	●	●	
500 series	Japan BJG	Immobilizer	●	●	●	○	●	○	0032
500 series	Japan BJG	Inverter	●	●	●	●	●	○	
500 series	Japan BJG	SRS (Airbag)	●	●	●	○	○	○	
500 series	Japan BJG	Suspension	●	●	●	○	●	●	
500 series	Japan BJG	Transmission	●	●	●	○	●	○	
500 series	Japan KK	Brake (WABCO ABS)	●	●	●	○	●	●	
500 series	Japan KK	Engine	●	●	●	○	●	●	
500 series	Japan KK	Transmission	●	●	●	○	●	○	
500 series	Japan LDG/LKG/SKG/SDG/SJG/TKG/TQG/QKG	Battery	●	●	●	●	●	○	
500 series	Japan LDG/LKG/SKG/SDG/SJG/TKG/TQG/QKG	Brake (DENSO ABS)	●	●	●	○	●	●	
500 series	Japan LDG/LKG/SKG/SDG/SJG/TKG/TQG/QKG	Brake (WABCO ABS)	●	●	●	○	●	●	
500 series	Japan LDG/LKG/SKG/SDG/SJG/TKG/TQG/QKG	Engine	●	●	●	●	●	●	0001, 0002, 0003, 0004, 0005, 0006, 0007, 0008, 0009, 0010, 0012
500 series	Japan LDG/LKG/SKG/SDG/SJG/TKG/TQG/QKG	Headlight Autoleveling	●	●	●	○	●	●	0034
500 series	Japan LDG/LKG/SKG/SDG/SJG/TKG/TQG/QKG	Hybrid	●	●	●	●	●	●	
500 series	Japan LDG/LKG/SKG/SDG/SJG/TKG/TQG/QKG	Immobilizer	●	●	●	○	●	○	0032
500 series	Japan LDG/LKG/SKG/SDG/SJG/TKG/TQG/QKG	Inverter	●	●	●	●	●	○	
500 series	Japan LDG/LKG/SKG/SDG/SJG/TKG/TQG/QKG	SRS (Airbag)	●	●	●	○	○	○	
500 series	Japan LDG/LKG/SKG/SDG/SJG/TKG/TQG/QKG	Scanning cruise/LDWS/PCS	●	●	●	○	●	●	0021, 0022, 0023, 0024, 0025, 0026, 0027
500 series	Japan LDG/LKG/SKG/SDG/SJG/TKG/TQG/QKG	Suspension	●	●	●	○	●	●	
500 series	Japan LDG/LKG/SKG/SDG/SJG/TKG/TQG/QKG	Tire pressure monitoring system	●	●	●	○	●	●	
500 series	Japan LDG/LKG/SKG/SDG/SJG/TKG/TQG/QKG	Transmission	●	●	●	○	●	○	
500 series	Japan LDG/LKG/SKG/SDG/SJG/TKG/TQG/QKG	VCS (Vehicle Control System)	●	●	●	●	●	●	0009, 0033
500 series	Japan PB/PK/KS/VF	Brake (DENSO ABS)	●	●	●	○	●	●	
500 series	Japan PB/PK/KS/VF	Brake (WABCO ABS)	●	●	●	○	●	●	
500 series	Japan PB/PK/KS/VF	Engine	●	●	●	●	●	●	0001, 0002, 0003, 0004, 0005, 0006, 0007, 0008, 0009, 0010, 0011, 0012
500 series	Japan PB/PK/KS/VF	Idling stop system	●	●	●	○	●	●	
500 series	Japan PB/PK/KS/VF	Scanning cruise/LDWS/PCS	●	●	●	○	●	●	0021, 0022, 0023, 0024, 0025, 0026, 0027
500 series	Japan PB/PK/KS/VF	Suspension	●	●	●	○	●	●	
500 series	Japan PB/PK/KS/VF	Transmission	●	●	●	○	●	○	
500 series	THAI CNG	Engine (CNG)	●	●	●	●	●	●	
600 series	North America	BCU (Burner)	●	●	●	○	●	●	0031

Vehicle Categories	Area	System Name	ECU Info	Read Codes	Erase Codes	Freeze Frame	Live Data	Active Test	Special Function
600 series	North America	DCU (Urea SCR)	●	●	●	○	●	●	0028, 0029
600 series	North America	Engine	●	●	●	●	●	●	0001, 0002, 0003, 0004, 0005, 0006, 0007, 0008, 0009, 0010, 0011, 0012
600 series	North America	Meter	●	●	●	○	●	○	
600 series	North America	Transmission	●	●	●	○	●	●	
600 series	North America	VCS (Vehicle Control System)	●	●	●	●	●	●	0009, 0033
700 series	Euro5	Brake(WABCO ABS)	●	●	●	○	●	●	
700 series	Euro5	DCU (Urea SCR) 250	●	●	●	○	●	●	0028, 0030
700 series	Euro5	Engine	●	●	●	●	●	●	0001, 0002, 0003, 0004, 0005, 0006, 0007, 0008, 0009, 0010, 0011, 0012
700 series	Euro5	SRS (Airbag)	●	●	●	○	○	○	
700 series	Euro5	Suspension	●	●	●	○	●	●	
700 series	Euro5	Transmission (ASTRONIC)	●	●	●	○	●	●	
700 series	Euro5	VCS (Vehicle Control System)	●	●	●	●	●	●	0009, 0033
700 series	Euro5	ZF INTARDER	●	●	●	○	●	○	
700 series	Global	Brake(WABCO ABS)	●	●	●	○	●	●	
700 series	Global	Brake(WABCO EBS)	●	●	●	○	●	●	0017, 0018, 0019, 0020
700 series	Global	DCU (Urea SCR)	●	●	●	○	●	●	0028, 0029
700 series	Global	Engine	●	●	●	●	●	●	0001, 0002, 0003, 0004, 0005, 0006, 0007, 0008, 0009, 0010, 0011, 0012,
700 series	Global	Immobilizer	●	●	●	○	●	○	0032
700 series	Global	Meter	●	●	●	○	●	○	
700 series	Global	SRS (Airbag)	●	●	●	○	○	○	
700 series	Global	Scanning cruise/LDWS/PCS	●	●	●	○	●	●	0021, 0022, 0023, 0024, 0025, 0026, 0027
700 series	Global	Suspension	●	●	●	○	●	●	
700 series	Global	Tire pressure monitoring system	●	●	●	○	●	●	
700 series	Global	Transmission	●	●	●	●	●	●	
700 series	Global	Transmission (ASTRONIC)	●	●	●	○	●	●	
700 series	Global	VCS (Vehicle Control System)	●	●	●	●	●	●	0009, 0033
700 series	Global	ZF INTARDER	●	●	●	○	●	○	
700 series	Japan ADG	Brake(WABCO ABS)	●	●	●	○	●	●	
700 series	Japan ADG	Engine	●	●	●	●	●	●	0001, 0002, 0003, 0004, 0005, 0006, 0007, 0008, 0009, 0010, 0011, 0012
700 series	Japan ADG	Idling stop system	●	●	●	○	●	●	
700 series	Japan ADG	SRS (Airbag)	●	●	●	○	○	○	
700 series	Japan ADG	Scanning cruise/LDWS/PCS	●	●	●	○	●	●	0021, 0022, 0023, 0024, 0025, 0026, 0027
700 series	Japan ADG	Suspension	●	●	●	○	●	●	
700 series	Japan ADG	Tire pressure monitoring system	●	●	●	○	●	●	
700 series	Japan ADG	Transmission	●	●	●	○	●	○	

Vehicle Categories	Area	System Name	ECU Info	Read Codes	Erase Codes	Freeze Frame	Live Data	Active Test	Special Function
700 series	Japan BDG/BKG	Brake (WABCO ABS)	●	●	●	○	●	●	
700 series	Japan BDG/BKG	Engine	●	●	●	●	●	●	0001, 0002, 0003, 0004, 0005, 0006, 0007, 0008, 0009, 0010, 0011, 0012
700 series	Japan BDG/BKG	Idling stop system	●	●	●	○	●	●	
700 series	Japan BDG/BKG	SRS (Airbag)	●	●	●	○	○	○	
700 series	Japan BDG/BKG	Scanning cruise/LDWS/PCS	●	●	●	○	●	●	0021, 0022, 0023, 0024, 0025, 0026, 0027
700 series	Japan BDG/BKG	Suspension	●	●	●	○	●	●	
700 series	Japan BDG/BKG	Tire pressure monitoring system	●	●	●	○	●	●	
700 series	Japan BDG/BKG	Transmission	●	●	●	○	●	○	
700 series	Japan BDG/BKG	Transmission (ASTRONIC)	●	●	●	○	●	●	
700 series	Japan BDG/BKG	VCS (Vehicle Control System)	●	●	●	●	●	●	0009, 0033
700 series	Japan KL	Brake (WABCO ABS)	●	●	●	○	●	●	
700 series	Japan KL	Engine	●	●	●	○	●	●	
700 series	Japan KL	Transmission	●	●	●	○	●	○	
700 series	Japan LDG/LKG/QKG/QDG	Brake (WABCO ABS)	●	●	●	○	●	●	
700 series	Japan LDG/LKG/QKG/QDG	Brake (WABCO EBS)	●	●	●	○	●	●	0017, 0018, 0019, 0020
700 series	Japan LDG/LKG/QKG/QDG	DCU (Urea SCR)	●	●	●	○	●	●	0028, 0029
700 series	Japan LDG/LKG/QKG/QDG	Engine	●	●	●	●	●	●	0001, 0002, 0003, 0004, 0005, 0006, 0007, 0008, 0009, 0010, 0012
700 series	Japan LDG/LKG/QKG/QDG	Immobilizer	●	●	●	○	●	○	0032
700 series	Japan LDG/LKG/QKG/QDG	Meter	●	●	●	○	●	○	
700 series	Japan LDG/LKG/QKG/QDG	SRS (Airbag)	●	●	●	○	○	○	
700 series	Japan LDG/LKG/QKG/QDG	Scanning cruise/LDWS/PCS	●	●	●	○	●	●	0021, 0022, 0023, 0024, 0025, 0026, 0027
700 series	Japan LDG/LKG/QKG/QDG	Suspension	●	●	●	○	●	●	
700 series	Japan LDG/LKG/QKG/QDG	Tire pressure monitoring system	●	●	●	○	●	●	
700 series	Japan LDG/LKG/QKG/QDG	Transmission	●	●	●	●	●	●	
700 series	Japan LDG/LKG/QKG/QDG	Transmission (ASTRONIC)	●	●	●	○	●	●	
700 series	Japan LDG/LKG/QKG/QDG	VCS (Vehicle Control System)	●	●	●	●	●	●	0009, 0033
700 series	Japan PK/KS	Brake (WABCO ABS)	●	●	●	○	●	●	
700 series	Japan PK/KS	Engine	●	●	●	●	●	●	0001, 0002, 0003, 0004, 0005, 0006, 0007, 0008, 0009, 0010, 0011, 0012
700 series	Japan PK/KS	SRS (Airbag)	●	●	●	○	○	○	
700 series	Japan PK/KS	Scanning cruise/LDWS/PCS	●	●	●	○	●	●	0021, 0022, 0023, 0024, 0025, 0026, 0027
700 series	Japan PK/KS	Suspension	●	●	●	○	●	●	
700 series	Japan PK/KS	Tire pressure monitoring system	●	●	●	○	●	●	
700 series	Japan PK/KS	Transmission	●	●	●	○	●	○	
Industrial Engine	EURO3	Engine	●	●	●	●	●	●	0001, 0002, 0003, 0004, 0005, 0006, 0007, 0008, 0009, 0010, 0011, 0012

Vehicle Categories	Area	System Name	ECU Info	Read Codes	Erase Codes	Freeze Frame	Live Data	Active Test	Special Function
Industrial Engine	EURO4	DCU (Urea SCR)	●	●	●	○	●	●	0028, 0029
Industrial Engine	EURO4	Engine	●	●	●	●	●	●	0001, 0002, 0003, 0004, 0005, 0006, 0007, 0008, 0009, 0010, 0011, 0012
Industrial Engine	TIER 3 STAGE 3A	Engine	●	●	●	●	●	●	0001, 0002, 0003, 0004, 0005, 0006, 0007, 0008, 0009, 0010, 0011, 0012
Industrial Engine	TIER 4 STAGE 3B	Engine	●	●	●	●	●	●	0001, 0002, 0003, 0004, 0005, 0006, 0007, 0008, 0009, 0010, 0011, 0012
Industrial Engine	TIER 4 STAGE 4	DCU (Urea SCR)	●	●	●	○	●	●	0028, 0029
Industrial Engine	TIER 4 STAGE 4	Engine	●	●	●	●	●	●	0001, 0002, 0003, 0004, 0005, 0006, 0007, 0008, 0009, 0010, 0011, 0012
Retro	Global	Engine	●	●	●	○	●	●	



Specil Function

Index	Specil Function Name	Index	Specil Function Name
0001	DPR check	0002	Accelerator sensor adjustment
0003	Intake air volume check	0004	Fuel leak check
0005	VNT check	0006	EGR check
0007	Deviation learning after pump replacement	0008	Turbocharger check
0009	Change settings of upper limit of vehicle speed	0010	Intake throttle valve check
0011	Pulse EGR check	0012	Common rail pressure check
0013	Intake air volume check	0014	Turbo check
0015	VIN writing	0016	Common rail differential pressure check
0017	VSC learning	0018	Axle modulator check
0019	Proportional relay valve check	0020	Trailer control valve check
0021	PCS operation check	0022	Input of curve radius constant
0023	ECU learning status Display/Delete	0024	Adjustment of millimeter-wave radar beam axis
0025	Initialization of image sensor	0026	Check the operation of driver monitor camera
0027	Optical axis adjustment of laser sensor	0028	Aqueous urea solution addition test
0029	DEF addition test	0030	Adblue addition test
0031	Event log	0032	Key Registration/Delete
0033	ES start	0034	Write auto leveling constant