

MaxiSysCV_Nissan_Truck_V1.00 Function List (Note:For reference only)

NOTES:

- This function is supported. ✖ This function may be supported which depends on the actual condition of the vehicle.
 - This function is not supported. ▲ This function is the new feature in this version.
- As for special function please refer to the special function table.

System Name	Ecu Info.	Read Codes	Erase Codes	Freeze Data	Live Data	Active Test	Special Function
4WAS (FRONT)	●	●	●	○	●	●	○
4WAS (MAIN)/RAS/HICAS	●	●	●	○	●	●	○
ABS	●	●	●	✖	●	●	0002 0008 0010 0012 0014 0016 0018 0020 0022 0024 0025 0026 0028 0030 0032 0034 0036 0038 0040 0042 0044 0046 0048 0050 0150 0301 0329 0344 0369 0370 0371 0406 0450 0451 0452 0780 0781 0782 0783 0784
ACCELE PEDAL ACT	●	●	●	○	●	●	○
ACTIVE ENG MOUNT	●	●	●	○	●	○	○
ACTIVE SUS	●	●	●	●	●	●	✖
ADAPTIVE LIGHT	●	●	●	○	●	●	0009 0011
AIR BAG	●	●	●	●	●	○	0003 0005 0006 0013 0015 0017 0019 0021 0023 0025 0150 0453 0619 0620 0785 0786 0787
AIR LEVELIZER	●	●	●	○	●	●	0027 0029 0031
AIR PRESSURE MONITOR	●	●	●	○	●	●	0033 0035 0037 0407 0621 0622 0788 0789
ALL MODE AWD/4WD	●	●	●	○	●	●	0039 0041 0043 0045 0047 0049 0051 0342 0357 0408 0623 0624 0625 0626 0627
ASCD	○	●	●	○	●	○	○
AUTO BACK DOOR	●	●	●	○	●	○	0397
AUTO DRIVE POS.	●	●	●	○	●	●	0052 0054 0056
AUTO SLIDE DOOR	●	●	●	○	●	✖	○
AUTO SLIDE DOOR RIGHT	●	●	●	○	●	●	○
AVM	●	●	●	○	●	●	0053 0055 0057 0059 0061 0454 0455 0456 0457 0458 0459 0460 0461 0462 0628 0629 0630 0631 0632 0633 0634 0635 0636 0637 0638
BAC	●	●	●	○	●	○	0639
BCM	✖	●	●	○	●	●	0001 0063 0065 0067 0069 0071 0073 0075 0077 0079 0081 0083 0085 0087 0089 0091 0093 0095 0097 0099 0101 0103 0105 0107 0109 0111 0113 0115 0117 0119 0121 0123 0125 0127 0129 0131 0133 0135 0137 0139 0141 0143 0145 0147 0149 0151 0153 0155 0157 0159 0161 0163 0165 0167 0169 0171 0173 0175 0177 0179 0181 0183 0185 0187 0189 0191 0193 0195 0197 0199 0201 0203 0205 0207 0209 0211 0213 0215 0217 0219 0221 0223 0225 0227 0229 0372 0373 0374 0375 0376 0377 0378 0379 0380 0381 0409 0410 0411 0463 0640 0641 0642 0643 0644 0645 0646 0647 0648 0649 0650 0790
BRAKE	●	●	●	○	●	●	0293 0651
BSW	●	●	●	○	●	●	○
CAN GATEWAY	●	●	●	○	●	○	○

System Name	Ecu Info.	Read Codes	Erase Codes	Freeze Data	Live Data	Active Test	Special Function
CHA	●	●	●	○	●	●	0058 0060 0062 0652 0653
CHARGER	●	●	●	○	●	●	○
CIU	●	●	●	○	●	○	0064 0655
CONVERTIBLE ROOF	●	●	●	○	●	●	0070 0072 0074 0076 0078 0080
Cluster	●	●	●	○	●	●	0066 0068 0412 0413 0414 0415 0464 0656 0657 0658 0659 0660 0661
DCU	●	●	●	○	●	○	0416 0417 0418 0419 0420 0421 0422 0465 0466 0467 0662 0663 0664 0665 0666
DIFF LOCK	●	●	●	○	●	○	○
DISTANCE CONTROL	●	●	●	○	●	○	○
DIU	○	●	●	○	●	○	○
E-4WD	●	●	●	※	●	●	0001
E-SUS	●	●	●	○	●	●	0164 0166 0168
EHS/PKB	●	●	●	○	●	●	0293 0387 0388 0389 0423 0424 0425 0426 0791
EMCM	●	●	●	○	●	●	0293 0402 0667
ENGINE	●	●	●	※	●	●	0001 0082 0084 0086 0088 0090 0092 0094 0096 0098 0100 0102 0104 0106 0108 0110 0112 0114 0116 0118 0120 0122 0124 0126 0128 0130 0132 0134 0136 0138 0140 0142 0144 0146 0148 0150 0152 0294 0295 0296 0297 0307 0308 0310 0312 0314 0315 0316 0319 0321 0322 0323 0324 0325 0326 0327 0328 0331 0334 0335 0337 0339 0340 0342 0343 0345 0346 0347 0348 0349 0351 0352 0353 0355 0357 0359 0360 0361 0362 0363 0364 0365 0366 0367 0368 0427 0428 0429 0430 0431 0432 0433 0434 0435 0436 0437 0438 0439 0440 0441 0468 0469 0470 0471 0472 0473 0474 0475 0476 0477 0478 0479 0480 0481 0482 0483 0484 0485 0486 0487 0488 0489 0490 0491 0492 0493 0494 0495 0496 0497 0498 0499 0500 0501 0502 0503 0504 0505 0506 0507 0508 0509 0510 0511 0512 0513 0514 0515 0516 0517 0518 0519 0520 0521 0522 0523 0524 0525 0526 0527 0528 0529 0530 0531 0532 0533 0534 0535 0536 0537 0538 0539 0540 0541 0542 0543 0544 0545 0546 0547 0548 0549 0550 0551 0552 0553 0554 0555 0556 0557 0558 0559 0560 0561 0562 0563 0564 0565 0566 0567 0568 0569 0570 0571 0572 0573 0574 0575 0576 0577 0578 0579 0580 0581 0582 0583 0584 0585 0586 0587 0588 0589 0590 0591 0592 0593 0594 0595 0596 0597 0598 0599 0600 0601 0602 0603 0604 0605 0606 0607 0608 0609 0668 0669 0670 0671 0672 0673 0674 0675 0676 0792 0793 0794 0795 0796 0797 0798 0799 0800 0801 0802 0803 0804 0805 0806 0807 0808 0809 0810
EPS	●	●	●	○	●	○	0001 0154 0156 0158 0160 0162
EV/HEV	●	●	●	●	●	●	0293 0395 0396 0437 0442 0443 0610 0683 0684 0685
HEAD LAMP LEVELIZER	●	●	●	○	●	●	0170 0172
HV BATTERY	●	●	●	●	●	●	0293 0398 0399 0611 0612 0613 0614 0691 0692
HVAC	●	●	●	○	●	●	0174 0176 0178 0180 0182 0184 0186 0188 0190 0192 0194 0196 0298 0302 0304 0320 0350 0382 0383 0384 0693 0694 0695 0696
ICC/ADAS	●	●	●	※	●	●	0001 0198 0200 0202 0204 0206 0444 0697 0698 0699
INTELLIGENT KEY	●	●	●	○	●	●	0001 0091 0121 0208 0210 0212 0214 0216 0218 0220 0222 0224 0226 0228 0230 0232 0234 0236 0238 0240 0242 0244 0246 0248 0250 0252 0393 0701 0702 0703
IPDM E/R	○	●	●	○	●	●	0001 0025 0391 0572 0573 0574 0575 0608 0704 0705 0706 0707 0708 0709 0710 0711

System Name	Ecu Info.	Read Codes	Erase Codes	Freeze Data	Live Data	Active Test	Special Function
IVMS	●	●	●	○	●	○	○
LANE CAMERA	●	●	●	○	●	●	0231 0233 0235
LASER/RADAR	●	●	●	○	●	○	0198 0206 0293 0392 0712 0713
METER/M&A	※	●	●	○	●	○	0001 0237 0306 0330 0338 0354 0445 0714 0715 0716 0717 0718
MM CONN	●	●	●	○	●	○	0239
MOTOR ASSIST	○	●	●	○	●	○	0241
MOTOR CONTROL	●	●	●	※	●	○	0293 0390 0616 0719
MULTI AV	※	●	●	○	●	○	0025 0061 0243 0617 0720
MULTI DISPLAY	○	●	●	○	●	●	○
NATS IMMU	○	●	●	○	○	○	○
OCCUPANT DETECTION	○	○	○	○	○	○	0293 0721
POP UP HOOD	●	●	●	○	●	○	0006
PRECRASH SEATBELT	●	●	●	○	●	○	0245
PTC HEATER	●	●	●	○	●	○	○
RADIO	●	●	●	○	●	※	0160 0247 0249 0404 0405 0723 0724 0725 0726
REARVIEW CAMERA	●	○	○	○	●	○	0251 0253
S/BLIND CAMERA	●	○	○	○	●	○	0255 0257
SHIFT	●	●	●	○	●	○	0293 0446
SIDE RADAR LEFT	●	●	●	○	●	●	0254
SIDE RADAR RIGHT	●	●	●	○	●	●	0256
SMART ENTRANCE	○	●	●	※	●	※	0001 0259 0261 0263 0265 0267 0269 0271 0273 0275 0277 0279 0281 0283 0285 0287
SONAR	●	●	●	○	●	●	0150 0258 0260 0262 0264 0266 0268 0270 0727 0728
SUB METER	○	●	●	○	○	○	○
SVT	●	●	●	○	●	○	0272
TCS	●	●	●	●	●	●	0293
TELEMATICS	●	●	●	○	●	○	0274 0276 0278 0400 0401 0618 0729 0730 0731 0732 0733
TOTAL ILLUM C/U	●	○	○	○	●	○	0280 0282 0284 0286 0288 0290 0291 0292
TRANSMISSION	●	●	●	※	●	※	0001 0134 0150 0289 0299 0303 0305 0309 0311 0313 0317 0318 0332 0333 0334 0336 0341 0356 0358 0385 0386 0447 0448 0449 0590 0734 0735 0736 0737 0738 0739 0740 0741 0742 0743 0744 0745 0746 0747 0748 0749 0750 0751 0752 0753 0754 0755 0756 0757 0758 0759 0760 0761 0762 0763 0764 0765 0766 0767 0768 0769 0770 0771 0772 0773 0774 0775 0776 0777 0778 0779
VSP	●	●	●	○	●	○	○
ANC	●	●	●	○	●	○	○
DAST 1	●	●	●	○	●	○	○

System Name	Ecu Info.	Read Codes	Erase Codes	Freeze Data	Live Data	Active Test	Special Function
DAST 2	●	●	●	○	●	○	○
DCU	●	●	●	○	●	○	0662 0663 0664 0665 0666
FSCM	●	●	●	○	●	○	○
IDM	●	●	●	○	●	○	0200 0403 0615 0700
PMAS	●	●	●	○	●	○	0444 0722
HAS	●	●	●	○	●	○	0371 0686 0687 0688 0689 0690